

FEDERATION | F9501 Specifications

basin twinner

tribata.

melbourne. sydney. shanghai.

www.tribata.com.au



Features

Recommended Use	Domestic, Commercial, Hotel
Material	Brass Body
Handle	Cross Handle, Lever Handle, Porcelain Lever Handle
Tap Outlet	Fixed, Swivel and English
Finishes	Agis Gold, Brass Gold, Chrome, Gold, Matt Black, Pewter, Rose Gold, Satin Chrome, Brushed Gold, Satin Pearl, Satin Pewter.
Dimensions	120W x 80D x 180H mm x 52Ø mm Flange
Standards	AS/NZS 3718
WELS Rating	Flow Rate: 6L/min, Stars: 5



Disclaimer:

Products in this specification manual must by regulation be installed by licensed and registered trade people. Under our commitment to product development and improvement, we may change product specifications and dimension or delete models from the range without prior notification. Dimensions and set-outs listed are correct at time of publication and could contain dimensions which are approximate due to tolerances in manufacturing processes. It is important that you thoroughly review the product and check specifications and dimensions prior to surface preparation, cut-out and installation.

BASTOW™

Cleaning Instructions

We recommend the use of soapy water or approved cleaners.

This product should not be cleaned with abrasive materials.

Damage caused by any improper treatment is not covered by the product warranty - refer to our Warranty Conditions.

Specifications

Pressure Rating	As per AS/NZS3500 pressure must be limited to 500kPa on any new home, extension or renovation. For best performance and longer life we recommend 150-500kPa. Hot and cold water inlet pressure should be equal.
Temperature Rating	80°C maximum continuous working temperature
Suitable Hot Water Units	Storage Tank - Yes Continuous Flow - Yes Gravity Feed - Not Suitable

For the Plumber

Check 1. All work should be carried out by a licensed plumber. Responsibility will not be accepted by Tribata for incorrect installation of this tapware, or any tapware not installed by a Registered Plumber.

Check 2. The water supply lines need to be 'flushed out' prior to installation. This will avoid any foreign materials blocking the flow regulator, damaging the cartridge/valve and reducing the flow of water.

Check 3. Ensure all connections are tight.

Check 4. Turn on the main water supply and check for leaks.

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference

Disclaimer:

Products in this specification manual must by regulation be installed by licensed and registered trade people. Under our commitment to product development and improvement, we may change product specifications and dimension or delete models from the range without prior notification. Dimensions and set-outs listed are correct at time of publication and could contain dimensions which are approximate due to tolerances in manufacturing processes. It is important that you thoroughly review the product and check specifications and dimensions prior to surface preparation, cut-out and installation.

Installation Instructions

IMPORTANT INFORMATION, please read before starting installation.

CHECK 1

For packaging purposes, this tapware may come partially assembled.

CHECK 2

Before installation, please ensure that you have checked the assembly of all components and joints.

CHECK 3

Always use plumbers tape or a recommended sealing compound on all threaded joints.

CHECK 4

Please pressure test the tapware prior to installation using recommended testing equipment.

CHECK 5

The installer is responsible for selecting the correct fittings and that the distances are correct before installation.

Plumber Instructions

Note: Installation should only be carried out by a licensed plumber. Tribata do not accept any responsibility of incorrect installation if not installed by a registered plumber.

Note: Foreign materials can block the flow regulator, damage the valve and reduce water flow. Please flush the supply lines prior to installation.

Note: Mixers require flexible hoses which are included and marked in red (hot) and blue (cold).

INSTALLATION

1. Take the rubber seal and place it on the underside of the base ring. Screw the flexible hoses into the mixer and tighten, and remove any kinks in the hoses.
2. Screw the mounting stud to the underside of the mixer, and then tighten with a screwdriver.
3. Seat the mixer in the allocated hole, with the hoses going through first.
4. Underneath the bench top you can now fit the base washer, base plate and fixing nut.
5. Clamp the mixer firmly to the vanity by tightening the fixing nut.
6. Flush the lines to clear the debris
7. Now connect the water supply to the isolating stop valve.

REPLACING THE MIXER CARTRIDGE

1. Remove the grub screw inside the lever handle and lift off the handle
2. Unscrew the dome cap and the nut lock.
3. Remove the old cartridge and clean the casing
4. Insert the new cartridge ensuring the lungs line up with the holes in the main body.
5. Assemble the fixing nut, the dome cap and finally the handle.

Disclaimer:

Products in this specification manual must by regulation be installed by licensed and registered trade people. Under our commitment to product development and improvement, we may change product specifications and dimension or delete models from the range without prior notification. Dimensions and set-outs listed are correct at time of publication and could contain dimensions which are approximate due to tolerances in manufacturing processes. It is important that you thoroughly review the product and check specifications and dimensions prior to surface preparation, cut-out and installation.