

HP23

SL 4.0

Handbook

Floating proportional




MAIN SETTING (Run Mode)

TEMPERATURE SETTING



Press **SET** (key lamp flashes): this message will be displayed instead of the ° Set temperature value.
Press + or - to modify, press **SET** to confirm.

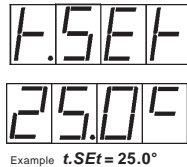

VIEWING TEMPERATURE RECORDING



Press & hold + **F. _ _ _** : will be displayed followed by °Maximum Temperature Recording.
Press & hold - **F. _ _ _** : will be displayed followed by °Minimum Temperature Recording.

Values recorded are permanently stored in the memory. To clear memory, push + key for more than 3 seconds: **CLEA** message will be displayed before clearing operation.

COS t PROGRAMMING (System constants)



These settings refer to the mode operation of the system and must be made on initial start-up. Press - / + together for at least one second. the message **C.O.S.t.** will be displayed. Press **SET** repeatedly until desired variable's message is displayed (see table below) : variable value and related message will be displayed. Press + or - to set a new value and then **SET** to confirm. The next system constant will then appear. You can press **SET** for at least two seconds to escape and return to the Run Mode.

Mess.	Value	Meaning	Note
<i>n.b.</i>	0.2°	° Neutral range	*1)
<i>b.CLO</i>	5.0°	° HEAT modulation range	*1)
<i>b.OPE</i>	5.0°	° COOL modulation range	*1)
<i>t.on</i>	1.0"	On time in seconds	*1)
<i>t.oF</i>	60.0"	Off time in seconds	*1)
<i>tEnP</i>	=1	Temperature representation (=1 °C, =2 °F)	*2)
<i>Ad.tE</i>	0.0°	°C Input temperature sensor correction (+ or -)	*3)

*1) For more details see *Operating Diagrams*.

*2) =1 : °C Temperature range.
=2 : °F Temperature range.

*3) You can correct the readings on the various sensor (+ or -).

PRESET PROGRAMS (Bootstrap)



 

This processor is pre-programmed with the following (variable) settings. To return to these settings at any time: Power off the processor, press **SET** key and keep it pressed giving power on: release **SET** key when the **boot** message appears. **t.Set = 25.0°**
The **COS t** values are shown in *COS t Programming*

"HAND" MODE



In some start-up conditions it may be useful to work in "hand" mode: Power off the processor, press + key and keep it pressed giving power on: **HAnd** message will be displayed (release now + key). Push + until the required number to be handed is displayed (see table relays) and push **SET** for activating relay.
Push + again to increase relay number, previous relay is deactivated. You can press **SET** key for a least two seconds to escape and return to the Run Mode.


STATE INDICATION LAMPS

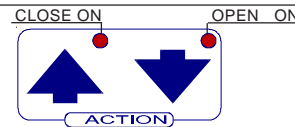

Swinging Ambient / Set temperature (t.Set) indicator

Lamp.	State	N° Relay	Contacts
CLOSE	Close (Heat) On	1	3-4
OPEN	Open (Cool) On	2	4-5

OPERATIVE DIAGRAM

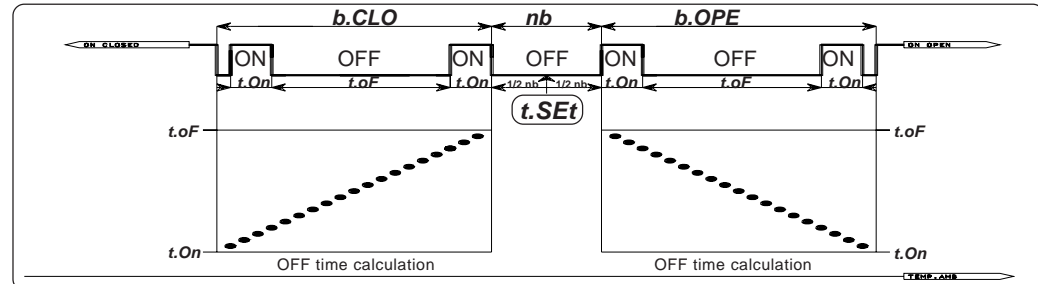

INSTALLATION

How to connect the line

Connect line on terminals **L-N**; protect supply with adequate fuse.


How to connect the sensors

Connect the sensor provided as shown in the diagram. For remote connections use a standard 0.5-square millimeter two-pole wire, taking great care over the connections, by insulating and sealing the joins carefully. **-O.C.-** is displayed when the temperature sensor wiring is open circuit, **-S.C.-** is displayed when the temperature sensor wiring is short circuit.

How to connect the contacts

Connect terminals on the terminal block (contacts up to 4AMP.AC1).

* Other power voltage if you required

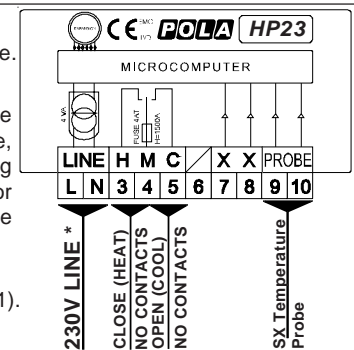

Unit 6, Old Wharf Ind. Estate, Dymock Rd, Ledbury HR8 2JQ
Tel. 01531 631161 e.mail: climatec@climatec.co.uk

As it company policy to continually improve the products the Manufacturers reserve the right to make any modifications thereto without prior notice. They cannot be held liable for any damage due to malfunction.