

## Maintenance

Your Teleport is designed to require minimal maintenance by the user.

1. Do not clean or inspect your robot when it is turned on or connected to a user. Ensure it is turned off before any form of maintenance commences, otherwise injury or damage may occur.
2. Use a dry cloth to clean your Teleport's screen and outer covers.
3. Avoid using products that may scratch the surface of your Teleport.
4. Do not use free-flowing water to clean your Teleport. Water and extreme temperatures are the main elements that can adversely affect your robot and its performance. Water, in any form, will cause electronic malfunction or corrosion of the electrical components, connections, and the robot frame.

## Storage

1. Your robot should be stored in a dry place, free from temperature extremes.
2. If you fail to store the unit properly, the frame can rust and the electronics can be damaged.
3. Batteries that are regularly and deeply discharged, infrequently charged, stored in extreme temperatures, or stored without a full charge may be permanently damaged, causing unreliable performance and limited service life. It is recommended that you charge the batteries periodically throughout periods of prolonged storage to ensure proper performance.