



INSTRUCTIONS

for your tenX® COUPLER



Wwedgelo**ck**

← watch the video

PREPARATION

Position coupler for operation



DETACH

1 **POWER ON**

Lock-out switch **ON**
Build Pressure



2

Note: knuckle resets automatically

Lift coupler **AWAY**
from attachment



ATTACH

FINISH

Shake test the attachment



1

ENGAGE first pin & **LOWER**
coupler to second pin




2

POWER OFF



Lock-out switch **OFF**
Build Pressure

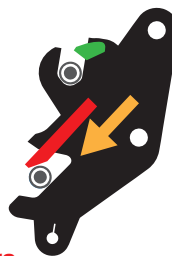

NOTE THAT SOME BRANDS OF EXCAVATOR MAY HAVE A SLIGHTLY DIFFERENT SEQUENCE TO THAT DEPICTED HERE.
FOR FULL INSTRUCTIONS REFER TO OPERATION MANUAL OR SCAN THE QR CODE (TOP OF DECAL) TO WATCH THE VIDEO. 903-002-26



DETACH DAILY! Refer to manual for maintenance required

