



Easygate Dual Sim SMS PROGRAMMING GUIDE

		DIRECTIONS	Example ONLY	ENTER TEXT (including spaces, case sensitive)
SETUP	MOBILE PHONE NUMBER YOU WANT EASYGATE TO REPORT TO	Enter the mobile phone number after 714= (Without any spaces).	EG CNF 12345 714=04XXXXXXXXX	EG CNF 12345 714=XXXXXXXXXX
	SITE ADDRESS OF EASYGATE	Enter the address after 968=	EG CNF 12345 968=(4 Columbia Court, Norwest, NSW)	EG CNF 12345 968=(XXXXXXXXXX)
	BATTERY STATUS REPORTS	Enter this sms code to receive a battery status report.		EG CNF 12345 962=1
	POWER FAILURE REPORTS	How long after a power failure would you like to receive a report? Choose from 1 to 255 minutes.	EG CNF 12345 963=60 This report would come in after the power has been out for an hour (60m mins)	EG CNF 12345 963=XX
	REGULAR REPORTING INTERVAL	Choose how regularly you would like to receive a general report (no. of days, ie. 1=daily, 7=weekly).	EG CNF 12345 967=1 This report will appear at chosen interval	EG CNF 12345 967=X
REPORTS	GENERAL REPORT	This gives you general info on the unit, its serial number, IMEI number, signal strength of SIM 1 and power status & how many days until battery expires.		EG INF 12345
	REBOOT GATEWAY	Send the SMS to SIM 1 (Primary Sim). This essentially switches it on and off remotely. Good way to reboot SIMS if you think that they may have been inserted but not activated.		EG RST 12345
	RESTART GATEWAY	This will restore default settings and clear any settings you have entered.		EG DEF 12345
MISC.	BATTERY LIFE	Remaining battery life (days).	Expire in: 794	
	RESET BATTERY COUNTDOWN	When new batteries are installed, the countdown days can be reset.		EG CNF 12345 60=12345
	SIGNAL STRENGTH	Strong signal	2-4 Blue bars on the signal strength indicator.	
	Weak signal	1 Blue bar on the signal strength indicator. A 9dB booster antenna which comes with 10 metre cable may be required: ITEM Number: EEX		