


Frames by Franke

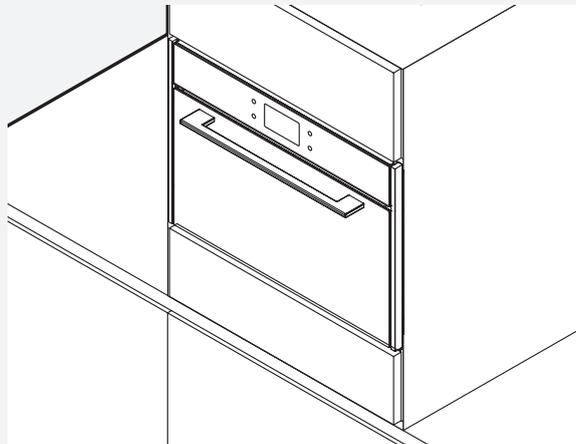

FMW 45 FS

EN User manual

Compact Combi Oven with Microwave

CONTENTS

Dear customer!	4
About this manual	4
Combined microwave oven	5
OVEN EQUIPMENT AND ACCESSORIES	6
CONTROL UNIT	7
Important safety instructions	8
BEFORE CONNECTING THE OVEN:	9
Before using the appliance for the first time	10
Steps of the cooking process (1-6)	11
STEP 1: SWITCHING ON THE APPLIANCE FOR THE FIRST TIME	11
STEP 2: CHOOSING THE BASIC COOKING MENUS AND SETTINGS	12
STEP 3: STARTING THE COOKING PROCESS	18
STEP 4: END OF COOKING AND SWITCHING OFF THE OVEN	18
STEP 5: SELECTING ADDITIONAL FUNCTIONS/EXTRAS	19
STEP 6: CHOOSING THE GENERAL SETTINGS	20
Description of systems (cooking modes) and cooking tables	21
COOKING SYSTEMS	22
COMBINED SYSTEMS	31
MICROWAVE SYSTEMS	33
Maintenance and cleaning	36
CONVENTIONAL OVEN CLEANING	36
USING THE CLEANING FUNCTION TO CLEAN THE OVEN	37
REMOVING AND CLEANING THE WIRE GUIDES	38
REPLACING THE BULB	39
Troubleshooting table	40
Disposal	40
Cooking test	41

DEAR CUSTOMER!

Thank you for choosing this quality product from Franke. We hope it will meet your expectations and fulfil your needs for many years to come. Scandinavian design combines clean lines, everyday functionality and high quality. These are key characteristics of all our products and the reason they are greatly appreciated throughout the world.

We thank you for your trust and the purchase of our appliance.

This detailed instruction manual is supplied to make the use of this product easier. The instructions should allow you to learn about your new appliance as quickly as possible.

Make sure you have received an undamaged appliance. If you do find transport damage, please contact the seller from which you purchased the appliance, or the regional warehouse from which it was supplied. The telephone number can be found on the invoice or on the delivery note.

Instructions for installation and connection are supplied on a separate sheet.

Instructions for use are also available at our website:
www.franke.com

ABOUT THIS MANUAL

This user manual applies to several models of the device. Thus it may be possible that some of the described features and functions are not available on your specific model.

Carefully read the user manual before using the device.

Keep the user manual.

Use the device described in this user manual only according to the intended use.

Symbol	Meaning
	Important information
	Actions in safety and warning notes to avoid injury or damage.

IMPORTANT SAFETY INSTRUCTIONS! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.


We reserve the right to any changes and errors in the instructions for use.

COMBINED MICROWAVE OVEN

Description of the oven and the equipment

(depending on the model)

The figure represents one of the built-in appliance models. Since the appliances for which these instructions were drawn up may have different equipment, some functions or equipment may be described in the manual that may not be present in your appliances.

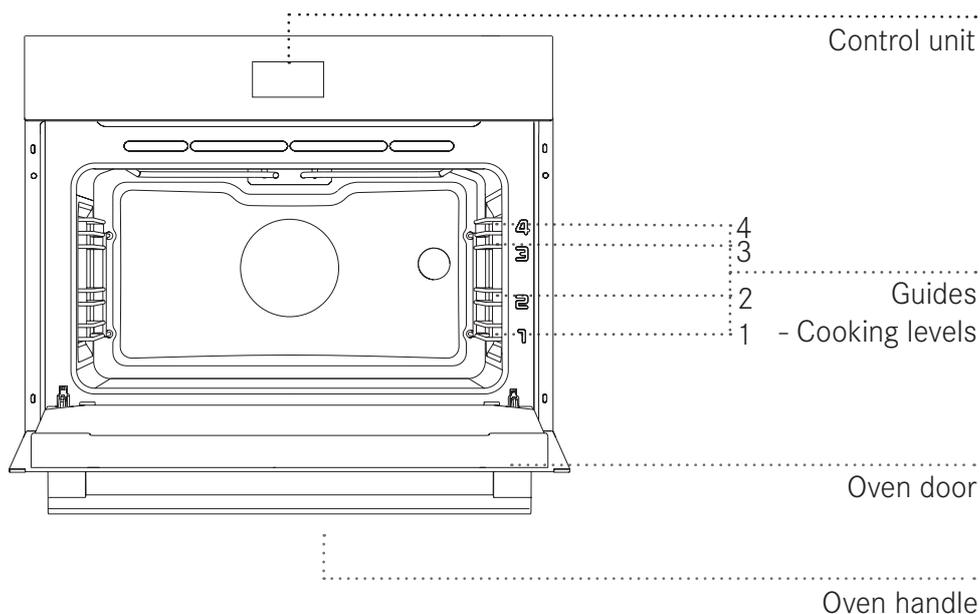

Technical specifications

(depending on the model)

XXXXXX	XXX	$P_{n_{max}}$: XXX	TN XXXXX
TYPE: XXXXXX		Freq. : 2450 MHz	
ART. Nr:			
SER. Nr: XXXXXX			

The rating plate indicating the basic information about the appliance is located at the edge of the oven and it is visible when the oven door is opened.

WIRE GUIDES

Wire guides allow preparation of the food on four levels (please note that the levels/guides are counted from the bottom up).

Guides 3 and 4 are intended for grilling, and guide 1 is used with microwave systems when food is prepared in a glass baking dish.

OVEN DOOR SWITCH

The switches deactivate oven heating, the fan, and the microwaves when the oven door is opened during the cooking process. When the door is closed, the switches turn the heaters and microwaves back on.

COOLING FAN


The appliance is fitted with a cooling fan that cools the housing and the appliance control panel.

EXTENDED OPERATION OF THE COOLING FAN

After the oven is switched off, the cooling fan continues to operate for a short while in order to provide additional cooling for the oven. (Extended cooling fan operation depends on the temperature in the center of the oven.)

OVEN EQUIPMENT AND ACCESSORIES

GLASS BAKING DISH is used for cooking with all oven systems and for cooking with microwaves. It can also be used as a serving tray.

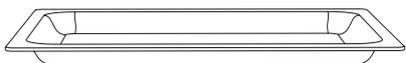


 Never use the grid, the shallow baking sheet or the deep baking tray or any other metal part or accessory when operating a system with microwaves!

The **GRID** is used for grilling or as support for a pan, baking tray or baking dish with the food.




 There is a safety latch on the grid. Therefore, the grid has to be lifted slightly at the front when pulling it out from the oven.

The **SHALLOW BAKING SHEET** is used for baking pastry and cakes.

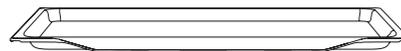


* (depends on model)

The **DEEP BAKING TRAY** is used for roasting meat and baking moist pastry. It can also be used as a drip tray.

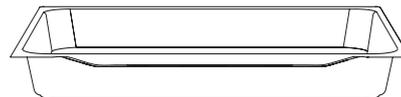


 Never place the deep baking tray in the first guide during the cooking process, except when grilling food or using the roasting spit and you are only using the deep tray as a drip tray.

The grid or the tray should always be inserted into the groove between the two wire profiles.

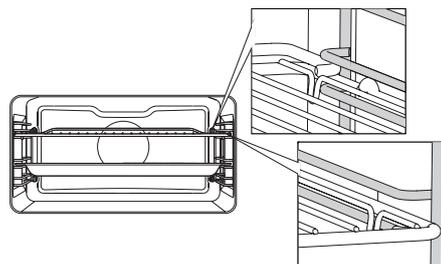

 Never use the grid, the shallow baking sheet or the deep baking tray or any other metal part or accessory when operating a system with microwaves!

CONTROL UNIT

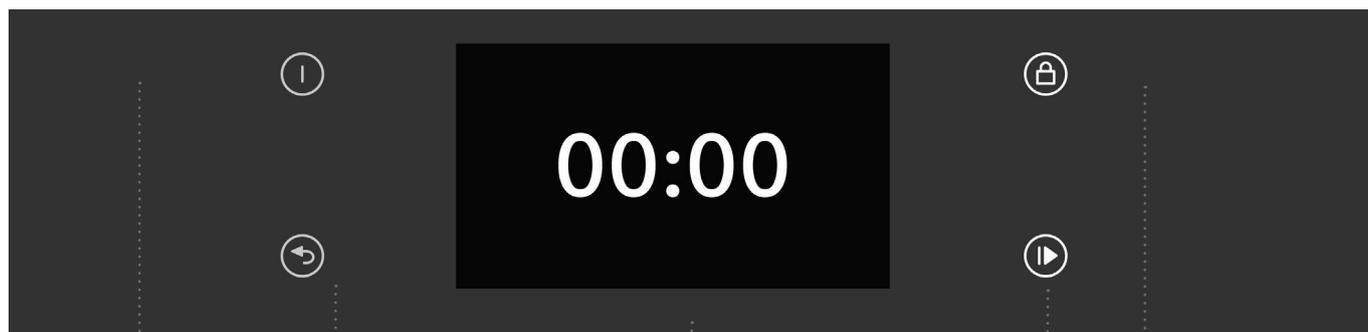

1 ON/OFF KEY

2 BACK KEY

Touch briefly to return to previous menu.

Touch and hold to return to main menu.

3 DISPLAY
For selection and display of settings

4 START/STOP KEY

5 CHILD LOCK KEY

NOTE:

The keys will respond better if you touch them with a larger area of your fingertip. Each time you press a key, this will be acknowledged by a short acoustic signal.

Navigate the menu by sliding your finger up and down or left and right. Confirm your selection with a touch.

IMPORTANT SAFETY INSTRUCTIONS

CAREFULLY READ THE INSTRUCTIONS AND SAVE THEM FOR FUTURE REFERENCE.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be made by children.

WARNING: During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

The appliance becomes very hot during use. Be careful not to touch the oven heaters.

WARNING: The accessible parts of the appliance may become hot during use. Children should be kept away from the oven.

Only use the temperature probe recommended for use in this oven.

WARNING: Before replacing the light bulb, make sure the appliance has been disconnected from the power mains, in order to prevent the hazard of an electric shock.

Do not use abrasive cleaners or sharp metal scrapers to clean the oven as they may damage the finish or the protective enamel coating. Such damages may lead to cracking of the glass.

Do not use steam cleaners or high pressure cleaners to clean the appliance as this may result in an electric shock.

The appliance is not intended to be controlled with external timers or special control systems.**The appliance is intended for household use.** Do not use it for any other purpose, such as room heating, drying of pets or other animals, paper, fabrics, herbs etc. as this may lead to injury or fire hazard.

The appliance may only be connected to the power mains by an authorized service technician or expert.

Tampering with the appliance or non-professional repair thereof may result in risk of severe injury or damage to the product.

If the power cords of other appliances located near this appliance are caught in the oven door, they may be damaged, which may in turn result in a short circuit. Therefore, keep the power cords of other appliances at a safe distance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Do not **line the oven** walls with aluminium foil and do not place baking trays or other cookware on the oven bottom. Aluminium foil would prevent air circulation in the oven, hinder the cooking process, and ruin the enamel coating.

Oven door become very **hot during operation.** A third glass is installed for extra protection, reducing the temperature of the outside surface (only with some models).

Oven door hinges may be damaged when under excessive load. Do not place heavy pans on open oven door and do not lean against open oven door when cleaning the oven cavity. Never stand on the open oven door and do not let children to sit on it.

Make sure the vents are never covered or obstructed in any other way.

Safe use of the microwave oven

WARNING: If your oven allows combined operation (microwaves combined with other cooking modes), do not allow the children to use the oven without supervision of an adult person since the oven will reach very high temperatures in such operation modes.

WARNING: If the door or door sealing is damaged, do not use the oven until it is repaired by an adequately trained service technician.

WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves removal of the cover that protects against exposure to microwave radiation.

WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.

Heed the minimum distance between the upper edge of the oven and the nearest object above it.

The appliance is intended for use in households and similar environments, such as:

- staff pantries in stores and other working environments;
- family farms;
- accommodation units for guests at hotels, motels, and other accommodation or lodging establishments;
- bed and breakfast establishments.

The microwave oven is intended for heating food and beverages. Drying food or clothing and heating of hot packs or pads, slippers, sponges, moist cloths etc. may result in injury, ignition, or fire.

Only use utensils suitable for use in microwave ovens.

When heating food in plastic or paper containers, keep an eye on the oven as such packaging may ignite.

Microwave heating of beverages can result in delayed eruptive boiling; therefore take care when handling the container with the heated beverage.

The contents of **baby bottles** and **baby food jars** should be shaken or stirred and their temperature checked before feeding in order to avoid burns.

Eggs in their shell should **not be heated** in microwave ovens since they may explode even after microwave heating has ended.

If you observe smoke, switch off or unplug the appliance and keep the oven door closed in order to stifle any flames.

Always use oven mitts to remove dishes from the oven. Some pots, pans, or trays absorb the heat of foods and therefore become very hot.

The oven **must not be installed** behind a decorative door in order to avoid overheating.

Make sure to only use the cookware that is suitable for use in a microwave oven. Do not use cookware made of steel or cookware with golden or silver rims.

Do not leave any accessories or utensils in your oven when it is off. To avoid damage, do not switch on an empty oven.

Do not use receptacles made of porcelain, ceramics, or clay, if there are pores in the material or if the inside is not glazed. Once heated up, the moisture that would penetrate these pores could cause cracking. Only use the cookware intended for use in a microwave oven.

Always read and observe the instructions for heating in a microwave oven, specified on the food packaging.

Be careful when heating alcohol-containing food, as a combustible mixture of alcohol and air may form inside the oven. Open the door carefully.

When using the microwave or the combined microwave and convection functions, use of metallic cookware, forks, spoons, knives or metal clips/ fasteners for frozen food is not recommended. After heating, stir the food or leave it to rest until the heat is evenly distributed.

Regularly clean the oven and remove any food residues. Failure to maintain cleanliness in the oven may result in deterioration of its surfaces. This can negatively affect the useful life of the appliance and lead to potentially dangerous situations.

BEFORE CONNECTING THE OVEN:



Carefully read the instructions for use before connecting the appliance. Repair or any warranty claim resulting from incorrect connection or use of the appliance shall not be covered by the warranty.

BEFORE USING THE APPLIANCE FOR THE FIRST TIME

Upon receiving the appliance, remove all parts, including any transport equipment (cardboard and polystyrene inserts), from the oven.


Clean all accessories and utensils with warm water and regular detergent. Do not use any abrasive cleaners.

When the oven heats up for the first time, the characteristic smell of a new appliance will be emitted. Ventilate the room thoroughly during the first use.

MICROWAVE FUNCTION


Microwaves are used for cooking, roasting, and defrosting of food. They allow quick and efficient cooking without changing the colour or shape of the food.

Microwaves are used for cooking, roasting, and defrosting of food. They allow quick and efficient cooking without changing the colour or shape of the food.

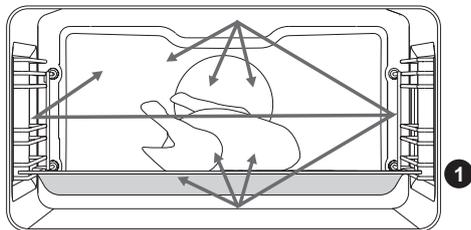

Their behaviour:

- They are reflected by metals.

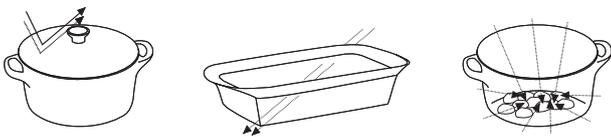

When food is exposed to microwaves, the molecules begin to move rapidly, thereby generating heat. The microwaves penetrate approximately 2.5 centimeters deep into the food. If the food is thicker, the core of the food will be cooked by conduction, as in conventional cooking.



Never use or activate a microwave system if the oven is empty.


STEPS OF THE COOKING PROCESS (1–6)

STEP 1: SWITCHING ON THE APPLIANCE FOR THE FIRST TIME

SETTING THE CLOCK

After connecting your appliance to the power mains or after an extended power outage, CLOCK settings will appear on the display.

💡 Navigate the menu by sliding your finger up and down.

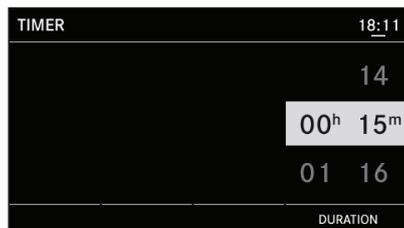

Set the CLOCK by touching the display. Confirm the setting with the START/STOP key.

💡 The oven will also work if the clock is not set. However, timer functions are not available in this case (see chapter SETTING THE TIMER FUNCTIONS). After a few minutes of idling, the appliance will switch to standby mode.

CHANGING THE CLOCK SETTING

Clock settings may be changed when no timer function is activated (see chapter CHOOSING THE GENERAL SETTINGS).

SELECTING THE LANGUAGE

If you are not happy with the language in which the messages on the display are presented, select another one. English is the preset language.




When you touch the line with the desired language, the selected language will be highlighted.

💡 Press the  key to return to MAIN MENU.

STEP 2: CHOOSING THE BASIC COOKING MENUS AND SETTINGS

The process of preparing food in your oven can be controlled in several ways:

💡 Navigate the menu by sliding your finger left and right.

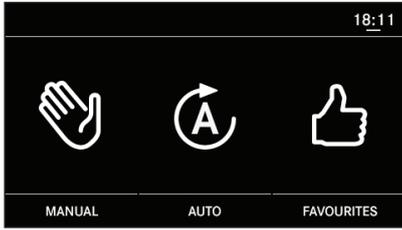

Select the desired mode by touching the corresponding image. The name of the selected menu will appear at the top.

Professional mode

Use this mode when you wish to prepare any type and amount of food. All settings are selected by the user.

Automatic mode

In this mode, first select the type of food. This is followed by automatic setting of the quantity, level of doneness, and cooking end time. The program offers a broad choice of preset recipes reviewed by professional chefs and nutrition experts.


Favourites

This mode allows you to prepare your food the way you like it, with the same steps and settings each time. Save your favourite recipes to oven memory and retrieve them the next time you need them.


Microwaves

This mode is suitable for cooking, roasting and defrosting of food.


A) COOKING BY SELECTING THE TYPE OF FOOD (Auto mode)

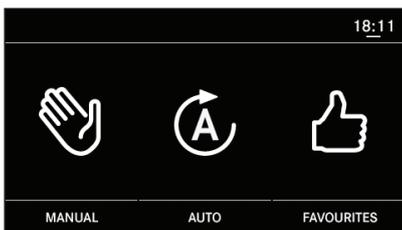

Choose the **Auto mode**.

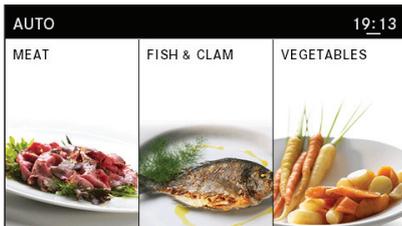


Select the type of food and the dish.

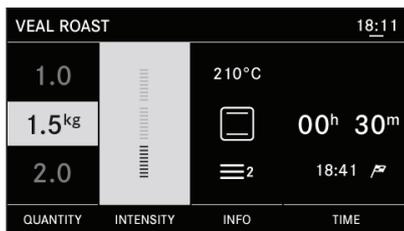

Preset values will be displayed:

- **amount**,
- **doneness level** (intensity),
- **cooking time** (cooking end time is displayed in grey).

Amount and doneness level can be adjusted. Selected values will appear.

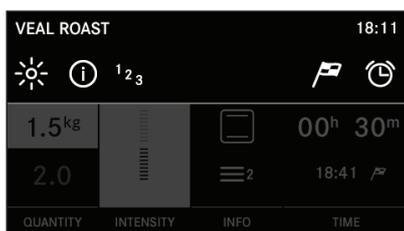

EXTRA SETTINGS (EXTRAS)

Choose them by touching the upper strip or the corresponding sign.



oven lighting



method and ingredients for the selected recipe



step mode (see chapter STEP COOKING)



cooking end time setting (see chapter TIMER FUNCTIONS)

In microwave systems, the timer function – delayed start is not available.



minute minder (see chapter EXTRA SETTINGS/EXTRAS)

PREHEAT


Some dishes in the Auto mode also include the preheat function .

When you select the food, the following note will appear: **»Selected program includes preheating.«**
Preheating started. Do not insert the food yet. The symbol °C will flash on the display.


When the selected temperature is reached, the preheating process stops and an acoustic signal is emitted. The following note will appear on the display: **»Preheating complete«.** Please insert the food. Open the door. The program then resumes the cooking process with selected settings.

When the preheat function is set, delayed start function cannot be used.

B) COOKING BY SELECTING THE OPERATING MODE (Professional mode and microwaves)

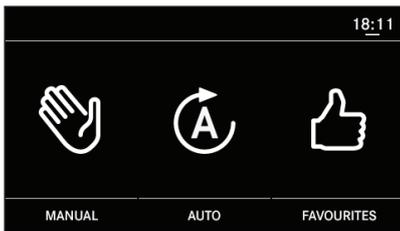

Choose the **Professional mode (MANUAL)** or cooking with microwaves.

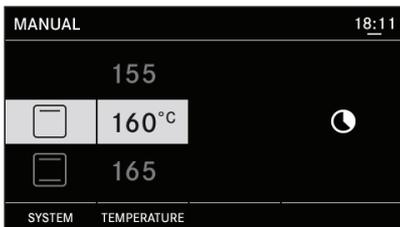


Choose your own default settings:

- **system**
- **oven temperature**

Selected values will appear.

- **operating power** (in combined systems and systems with microwaves). Touch the symbol  to select the cooking time.
- **cooking time** (cooking end time is displayed in grey).

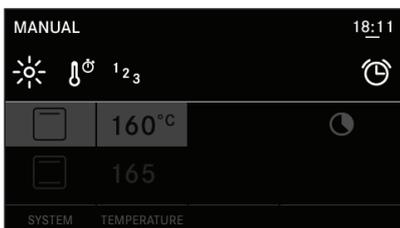

EXTRA SETTINGS (EXTRAS):

Choose them by touching the upper strip or the corresponding sign.



oven lighting



preheating

In systems that include microwaves, preheat function is not available.



step mode (see chapter STEP COOKING)



minute minder (see chapter EXTRA SETTINGS/EXTRAS)



If you select Duration, extra settings will allow you to select delayed start (see chapter TIMER FUNCTIONS) In systems that include microwaves, preheat function is not available.

Touch the START key.

All selected settings are indicated on the display.

 Increasing temperature in the oven and elapsed cooking time are displayed, which can also be changed during the cooking progress.

PREHEAT

Use the preheat function if you wish to heat the oven to the desired temperature as quickly as possible.

When this symbol  is selected, the preheat function will be switched on and a warning will appear.

»Preheating started.« Do not insert the food yet. The symbol °C will flash on the display.

When the selected temperature is reached, the preheating process stops and an acoustic signal is emitted.

The following note will appear on the display: **»Preheating complete.«** Please insert the food. The program then resumes the cooking process with selected settings.

 When the preheat function is set, delayed start function cannot be used.

COOKING SYSTEMS

(depending on the model)

SYSTEM	DESCRIPTION	PRESET TEMPERATURE (°C)
COOKING SYSTEMS		
	<p>UPPER AND BOTTOM HEATER</p> <p>The heaters in the bottom and in the ceiling of the oven cavity will radiate heat evenly into the oven interior. Pastry or meat can only be baked/roasted at a single height level.</p>	200
	<p>UPPER HEATER</p> <p>Only the heater on the oven cavity ceiling will radiate heat. Use this heater to brown the upper side of the dish.</p>	150
	<p>BOTTOM HEATER</p> <p>Only the heater on the bottom of the oven cavity will radiate heat. Use this heater to brown the lower side of the dish.</p>	160
	<p>GRILL</p> <p>Only grill heater, a part of the large grill set, will operate. Use this heater to grill a few open sandwiches or beer sausages, or for toasting bread.</p>	240
	<p>LARGE GRILL</p> <p>The upper heater and the grill heater will operate. The heat is radiated directly by the grill heater installed in the oven ceiling. To boost the heating effect, the upper heater is activated as well. This system is used for grilling a smaller amount of open sandwiches or beer sausages, and for toasting bread.</p>	240
	<p>GRILL WITH FAN</p> <p>Grill heater and the fan will operate. This combination is used to grill meat and to roast larger chunks of meat or poultry at a single height level. It is also appropriate for dishes au gratin and for browning to a crispy crust.</p>	170
	<p>HOT AIR AND BOTTOM HEATER</p> <p>Bottom heater, round heater, and the fan will operate. This is used to bake pizza, moist pastry, fruitcakes, leavened dough and shortcrust on several levels simultaneously.</p>	200
	<p>3D HOT AIR</p> <p>Round heater and the fan will operate. The fan installed in the back wall of the oven cavity makes sure the hot air constantly circulates around the roast or pastry. This mode is used for roasting meat and baking pastry at several levels simultaneously.</p>	180
	<p>ECO COOKING ¹⁾</p> <p>In this mode, power consumption during the cooking process is optimized. This mode is used for roasting meat and baking pastry.</p>	180
	<p>BOTTOM HEATER AND FAN</p> <p>This is used for baking leavened but low-rising pastry and for preserving fruit and vegetables.</p>	180


SYSTEM	DESCRIPTION	PRESET TEMPERATURE (°C)
COOKING SYSTEMS		
	AUTOMATIC COOKING OF MEAT – AUTO ROAST MODE In the Auto Roast mode/system, the upper heater will operate in combination with the grill heater and the round heater. It is used for roasting all types of meat.	180

¹⁾ It is used for determining the energy efficiency class pursuant to the EN 60350-1 standard. In this mode, the actual temperature in the oven is not displayed due to a special appliance operation algorithm and use of residual heat.

COOKING SYSTEMS	DESCRIPTION	PRESET TEMPERATURE (°C)	POWER (W)
COMBINED SYSTEMS / MICROWAVE SYSTEMS			
	MICROWAVE SYSTEMS Microwaves are used for cooking and defrosting. They allow quick and efficient cooking without changing the colour or shape of the food.	-	1000
	HOT AIR AND MICROWAVES Use this for all types of meat, stews, vegetables, pies, cakes, bread, and dishes au gratin (i.e. food that require longer cooking time).	160	600
	GRILL WITH FAN AND MICROWAVES Use this combination for smaller chunks of meat, fish and vegetables. It allows fast cooking and the food will have a nicely browned crispy crust.	200	600

POWER LEVEL	USE
1000 W	<ul style="list-style-type: none"> - Quickly reheating beverages, water and dishes containing a large volume of liquid. - Cooking dishes with high water content (soups, sauces etc.).
750 W	<ul style="list-style-type: none"> - Cooking fresh or frozen vegetables.
600 W	<ul style="list-style-type: none"> - Melting chocolate. - Cooking fish and seafood; reheating on two levels. - Cooking dried beans at low heat. - Reheating and cooking of delicate egg-based dishes.
360 W	<ul style="list-style-type: none"> - Low-heat cooking of dairy products or jams.
180 W	<ul style="list-style-type: none"> - Manual defrosting; softening butter or ice cream.
90 W	<ul style="list-style-type: none"> - Defrosting cream-filled pastry.

TIMER FUNCTIONS – DURATION

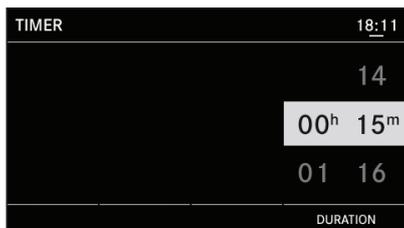

Timer functions can be selected in the basic **Professional mode**, the **Auto mode**, and in the **Microwaves mode** by choosing the corresponding symbol.



Setting the cooking time

In this mode, you can define the duration of oven operation (cooking time). Set the desired cooking time and confirm the setting. Cooking end time is adjusted accordingly. Press START to start the cooking process. All selected settings are indicated on the display. All timer functions can be cancelled by setting the time to "0".



Setting the delayed start

In this mode, you may specify the duration of the cooking process (cooking time) and the time when you wish the cooking process to stop (end time). Make sure the clock is accurately set to current time.

Example:

- Current time: noon
- Cooking time: 2 hours
- End of cooking: 6 pm

First, set the cooking time (cooking duration), i.e. 2 hours. The sum of the current time and cooking time is automatically displayed (2 pm).

How, set the COOKING END TIME and set the time (6 PM). Press START to start the cooking process. The timer will wait for the start of the cooking process. The following note will appear on the display:


»Your program is delayed. It will start at 4 pm.«

💡 After the set time expires, the oven will automatically stop operating (end of cooking). An acoustic signal will be heard which you may turn off by pressing the ALARM key. After one minute, the acoustic signal will be switched off automatically.


After a few minutes of idling, the appliance will switch to standby mode. The time of day will appear.

STEP COOKING

This mode allows you to combine three different settings successively in a single cooking process. Choose different settings or cooking end time to cook your food just the way you want it.

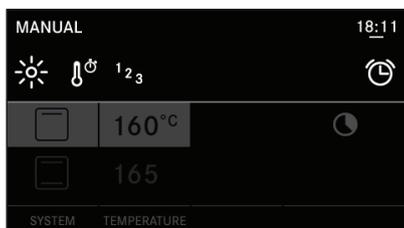

Touch the corresponding sign to select the **Step Cooking** symbol in EXTRA SETTINGS (EXTRAS).

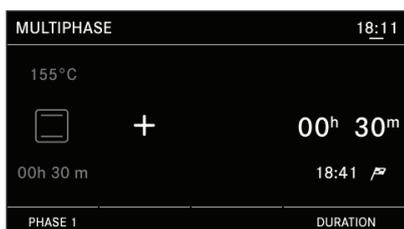

Touch the display twice to select Step 2 and Step 3. Touch the corresponding sign (step name) to confirm or delete a step.

Touch the START symbol to turn on the oven. The oven starts operating immediately, with the settings defined in Step 1. (Selected step will be highlighted.) After the set cooking time elapses, Step 2 and then Step 3 are activated, if specified.

 To delete a step during operation, select the step and select the cross symbol by touching its name. This can only be done with steps that have not started yet.


STEP 3: STARTING THE COOKING PROCESS

The START/STOP key will flash before the start of the cooking process.


Start the cooking process by touching the START key.

Some settings can be changed during operation by touching the display unit (temperature, cooking duration, and step mode/program).

Touch the START/STOP key to change other settings or to end the cooking process. The following warning will appear: "THE PROGRAM HAS BEEN PAUSED. WOULD YOU LIKE TO STOP IT?"

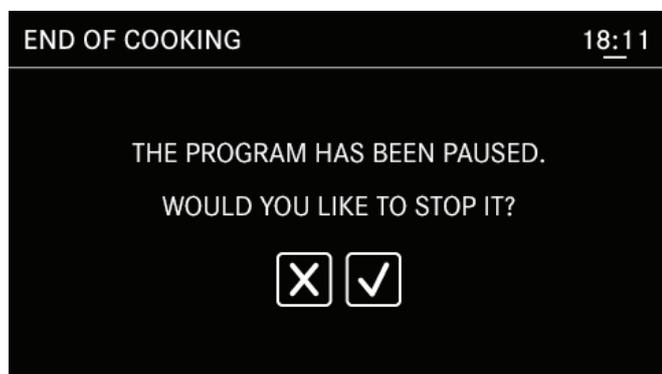

STEP 4: END OF COOKING AND SWITCHING OFF THE OVEN

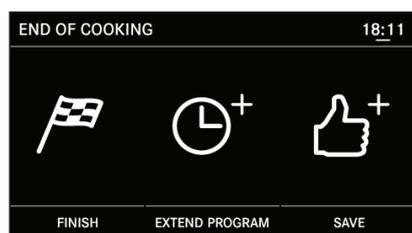

After the cooking process, menu with symbols will appear.



End!

Select the symbol and end the cooking process. Main menu will appear on the display.



Extend the cooking time


Cooking time can be extended by selecting the symbol. New cooking end time can be selected (see chapter TIMER FUNCTIONS).



Add to my recipes – save

This mode allows you to save the selected settings into the oven memory and use them again at a later time.

SAVING USER-DEFINED PROGRAMS (MY RECIPES)

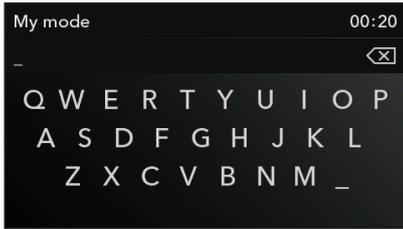


Select the symbol  and specify the name by touching the corresponding letters. If required, delete a character using the arrow.

Touch the START/STOP key to save the settings.


 Your favourite recipes that you have previously stored in the memory can be retrieved and used at any time. Choose the process and the settings in the **My Recipes main** menu.

STEP 5: SELECTING ADDITIONAL FUNCTIONS/EXTRAS

 Navigate the menu by sliding your finger left and right.

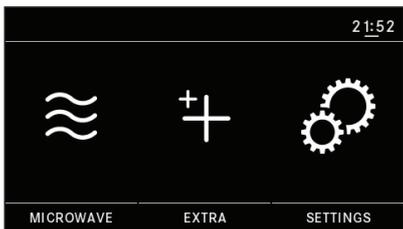

Select the EXTRAS menu by touching it. EXTRAS menu will appear.

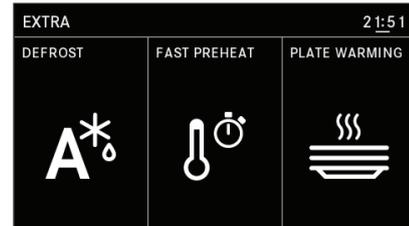

Cleaning – Aqua Clean

Use this function to remove stains and food residues from the oven. Pour 0.6 l water into the glass tray and place it into the lower guide. After 30 minutes, food residues on the oven enamel walls will have softened and they will be easy to clean with a damp cloth. Use this function when the oven has fully cooled down! (See chapter CLEANING AND MAINTENANCE.)

Defrost

In this mode, the air will circulate without any heaters operating. Only the fan will be activated. Use this function to slowly defrost frozen food (cakes, pastry, bread, rolls, and deep-frozen fruit). By selecting the relevant symbol you may specify the type of food, weight, or defrosting start and end time. Halfway through the defrost time, the pieces should be turned over, stirred and separated if they were frozen together.

Fast preheat


Use the preheat function if you wish to heat the oven to the desired temperature as quickly as possible. This mode is not appropriate for cooking. When the oven heats up to the selected temperature, the preheat process is completed and the oven is ready for cooking with the selected cooking mode.

Warming

Reheating can be used to keep the food that is already cooked warm. Select the symbol to set the temperature, and reheating start and end time.

Plate heating

Use this function to reheat your dinnerware (plates, cups) before serving food in it to keep the food warm longer. Select the symbol to set the temperature, and reheating start and end time.

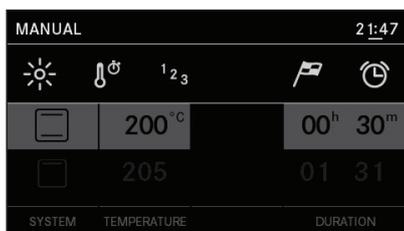

Select the symbol and end the cooking process. Main menu will appear on the display.



CHILD LOCK

Activate it by touching the LOCK key (key symbol). The following message will appear on the display: »Child lock activated.« Touch the key again to deactivate the child lock.

💡 If the child lock is activated with no timer function engaged (only clock is displayed), then the oven will not operate. If the child lock is activated after a timer function has been set, then the oven will operate normally; however, it will not be possible to change the settings. When the child lock is activated, systems (cooking modes) or additional functions cannot be changed. Only the cooking/baking/roasting process can be stopped or switched off. Child lock remains active after the oven is switched off. To select a new system, the child lock must first be deactivated.



OVEN LIGHTING

Oven lighting is switched on automatically when the door is opened or when the oven is switched on. After the end of the cooking process, the light will remain on for another minute.




SETTING THE MINUTE MINDER

The minute minder can be used independently of the oven operation. The longest possible setting is 10 hours. When the time expires, an acoustic signal will be heard which you may turn off by touching any key. After one minute, the acoustic signal will be switched off automatically.


💡 Lighting and minute minder can be selected at any time by touching the upper strip.

STEP 6: CHOOSING THE GENERAL SETTINGS

💡 Navigate the menu by sliding your finger left and right.

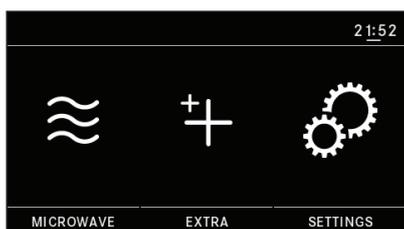

Select the **Settings** menu by touching it.

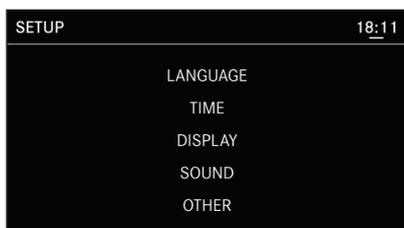

When you touch the line with the desired setting, the size of the letters in that line will be highlighted.

Language

Select the language for the text on the display.

Time

Set the time of day after the appliance is connected to the power mains for the first time or after being disconnected from the power mains for a longer period of time (more than one week). Set the CLOCK – time. Then, clock display mode can be selected in the "TIME" field: **digital or analogue**.

Sound

Loudness of the acoustic signal can be set when no timer function is activated (only the time of day is displayed). In this menu, you choose between the following two options: **sound loudness and duration of alarm**.

Display

In this menu, you can set the following:

Display brightness/dimmer

Night mode - specify the time until which you wish the display to be off.

Other settings

Switch off oven lighting

Reset to factory defaults



After a power outage or after switching off the appliance, all extra user settings are restored.

DESCRIPTION OF SYSTEMS (COOKING MODES) AND COOKING TABLES

If your desired food cannot be found in the cooking table, find information for similar food. The information displayed applies to cooking in a single level.

An interval of suggested temperature is indicated. Start with a lower temperature setting and increase it if you find the food is not browned sufficiently.

Cooking times are rough estimates and may vary subject to some conditions.

The symbol * means that the oven should be preheated using the selected cooking system.

Only **preheat the oven** if required by the recipe or in the tables in this instruction manual. Heating an empty oven consumes a lot of energy. Hence, baking several types of pastry or several pizzas successively will save a lot of energy as the oven will already have been preheated.

Use dark, black silicon-layered or enamel-coated baking sheets and trays as they conduct the heat very well.

When using parchment paper, make sure it is resistant to high temperatures.

When cooking larger chunks of meat or pastry, a lot of steam will be generated inside the oven, which in turn may condense on the oven door. This is a normal phenomenon which will not affect the operation of the appliance. After the cooking process, wipe the door and the door glass dry.

Switch off the oven approximately 10 minutes before the end of the cooking process to save energy by making use of the accumulated heat (this does not apply to systems with microwaves).


Do not cool the food in a closed oven to prevent condensation (dew).

COOKING SYSTEMS

UPPER AND BOTTOM HEATER



The heaters in the bottom and in the ceiling of the oven cavity will radiate heat evenly into the oven interior.

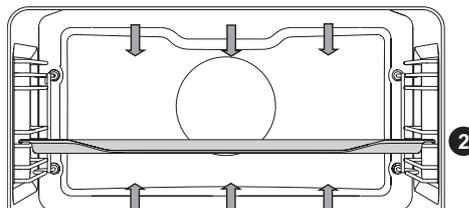

Roasting meat:

Use enamel coated, tempered glass, clay, or cast iron pan or tray. Stainless steel trays are not suitable as they strongly reflect the heat.

Type of food	Weight (g)	Guide (from the bottom)	Temperature (°C)	Cooking time (min)
MEAT				
Pork roast	1500	2	180-190	130-150
Pork shoulder	1500	2	190-200	120-140
Pork roulade	1500	2	190-200	120-140
Meat loaf	1500	2	200-210	60-70
Beef roast	1500	2	180-210	90-120
Roast beef, well done	1000	2	200-210	40-60
Veal roulade	1500	2	180-200	90-120
Lamb sirloin	1500	2	190-200	100-120
Rabbit loin	1500	2	190-200	100-120
Deer shank	1500	2	190-200	70-90
Meat rolls	1500	2	180-200	15-30
FISH				
Braised fish	1000	1	190-210	60-80

Baking pastry

Only use one level and dark baking sheets or trays. In light-coloured baking sheets or trays, the browning of the pastry will be poorer, as such equipment will reflect the heat. Always place the baking trays on the grid. If you are using the supplied baking sheet, remove the grid. Cooking time will be shorter if the oven is preheated.

Type of food	Guide level (from the bottom)	Temperature (°C)	Cooking time (min)
PASTRY			
White bread*	2	180-190	40-50
Buckwheat bread*	2	180-190	40-50
Whole grain bread*	2	180-190	40-50
Rye bread*	2	180-190	40-50
Spelt bread*	2	180-190	45-55
Sweet soufflé	1	170-180	35-45
Soufflé	1	170-180	35-45
Rolls *	2	200-220	30-40
Walnut cake	1	180	55-60
Sponge cake*	2	160-170	20-30
Macarons (meringue pastry)	2	120-140	15-30
Vegetable rolls	2	190-200	15-20
Fruit rolls	2	190-200	25-30
Cheesecake	1	170-180	65-75
Cupcakes	2	160-170	20-30
Small pastries made with yeast dough	2	190-200	20-25
Cabbage pirozhki*	2	180-190	25-35
Fruitcake	2	130	85-95
Meringue cookies	2	90	120-130
			30-35

Tip	Use
Is the cake done?	- Pierce the cake at the top with a wooden toothpick or skewer. If there are no traces on the pick or the skewer when pulled out, the cake is done.
Did the cake collapse?	- Check the recipe. - Next time, use less liquid. - Note the mixing time when using small mixers, blenders etc.
The cake is too light at the bottom?	- Use a dark-coloured baking sheet or tray. - Place the baking sheet one guide lower and switch on the lower heater towards the end of the cooking progress.
Cake with moist stuffing is underdone?	- Increase temperature and extend baking time.




Do not insert the deep baking tray into the first guide.

LARGE GRILL, GRILL



When grilling food with the large grill, the upper heater and the grill heater fitted on the ceiling of the oven cavity will operate.

When grilling with normal (not large) grill, only grill heater, a part of the large grill set, will operate.

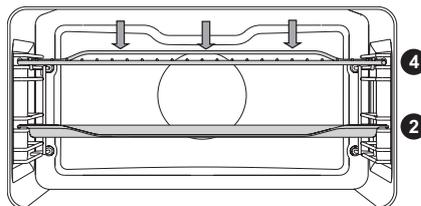

Preheat the infrared (grill) heater for five minutes.

Supervise the cooking process at all times. The meat may burn quickly due to high temperature. Roasting with the grill heater is suitable for crispy and low-fat cooking of bratwurst, cuts of meat and fish (steaks, escalopes, salmon steaks or fillets etc.) or toasted bread.

When grilling directly on the grid, smear it with oil to prevent the meat from sticking onto it and insert it into the 4th guide. Insert the drip tray in to the 1st or 2nd guide. When grilling in a baking tray, make sure there is enough liquid in the tray to prevent burning. Turn the meat during cooking.

After grilling, clean the oven, the accessories, and the utensils.

Maximum allowed temperature: 240 °C

Grilling table – small grill

Type of food	Weight (g)	Guide (from the bottom)	Temperature (°C)	Cooking time (minutes)
MEAT				
Beefsteak, rare	180g/piece	4	240	18-21
Pork neck fillet	180g/piece	4	240	18-22
Cutlets/chops	180g/piece	4	240	20-22
Grill sausages	100g/piece	4	240	11-14
PASTRY				
Toast	/	4	240	3-4
Open sandwiches	/	4	240	5-7

Grilling table – large grill

Type of food	Weight (g)	Guide level (from the bottom)	Temperature (°C)	Cooking time (min)
MEAT				
Beefsteak, rare	180g/piece	4	220-240	14-16
Beefsteak, well done	180g/piece	4	220-240	18-21
Pork neck fillet	180g/piece	4	220-240	19-23
Cutlets/chops	180g/piece	4	220-240	20-24
Veal escalope	180g/piece	4	220-240	19-22
Grill sausages	100g/piece	4	220-240	11-14
Spam (Leberkäse)	200g/piece	4	220-240	9-15
FISH				
Salmon steaks/fillets	600	3	220-240	19-22
TOASTED BREAD				
6 slices of white bread*	/	4	240	1,5-3
4 slices of mixed grain bread*	/	4	240	2-3
Open sandwiches*	/	4	240	3,5-7

Always keep the oven door closed when using the grill (infrared) heater.

Grill heater, grid, and other oven accessories get very hot during grilling. Therefore, use oven mitts and meat tongs.



Always keep the oven door closed when using the grill (infrared) heater.


Grill heater, grid, and other oven accessories get very hot during grilling. Therefore, use oven mitts and meat tongs.

GRILL WITH FAN



In this operating mode, the grill heater and the fan operate simultaneously. Suitable for grilling meat, fish, and vegetables.

(See descriptions and tips for GRILL.)

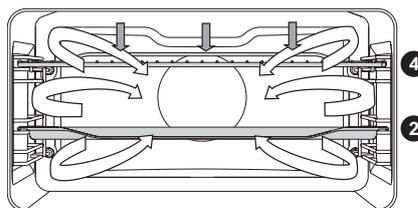


Type of food	Weight (g)	Guide level (from the bottom)	Temperature (°C)	Cooking time (min)
MEAT				
Duck *	2000	2	150-170	80-100
Pork roast	1500	4	160-170	60-85
Pork shoulder	1500	4	150-160	120-160
Pork shank	1000	4	150-160	120-140
Half of chicken	600	4	180-190	25 (one side) 20 (other side)
Chicken*	100	2	210	60
FISH				
Trout	200g/piece	4	170-180	45-50

HOT AIR AND BOTTOM HEATER



The bottom heater, the round heater, and the hot air fan will operate. Suitable for baking pizzas, apple pies, and fruitcakes.

(See descriptions and tips for UPPER and BOTTOM HEATER.)

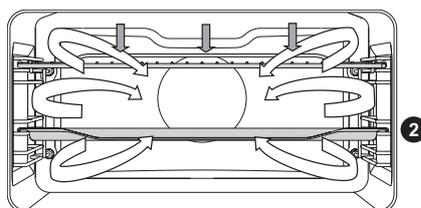


Type of food	Guide level (from the bottom)	Temperature (°C)	Cooking time (min)
Cheesecake, short crust	2	150-160	65-75
Pizza *	2	200-210	15-20
Quiche Lorraine, shortcrust	2	180-200	35-40
Apple pie, leavened dough	2	150-160	35-40
Apple strudel, phyllo dough	2	170-180	45-65

3D HOT AIR



Round heater and the fan will operate. The fan installed in the back wall of the oven cavity makes sure the hot air constantly circulates around the roast or pastry.

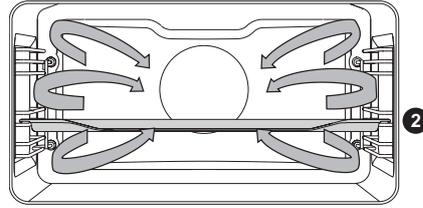

Roasting meat

Use enamel coated, tempered glass, clay, or cast iron pan or tray. Stainless steel trays are not suitable as they strongly reflect the heat.

Provide enough liquid during the cooking process to prevent the meat from burning. Turn the meat during roasting. The roast will remain juicier if you cover it.

Type of food	Weight (g)	Guide level (from the bottom)	Temperature	Cooking time (min)
MEAT				
Pork roast, including skin	1500	2	170-180	140-160
Pork belly	1500	2	170-180	120-150
Chicken, whole	1200	2	180-190	60-80
Duck	1700	2	160-170	120-150
Chicken breast	1000	2	180-190	60-70
Stuffed chicken	1500	1	170-180	100-120

Baking pastry

Preheating is recommended.

Biscuits and cookies can be baked in shallow baking sheets on several levels simultaneously (2nd and 3rd). Note that baking time can differ even with if the baking sheets used are the same. The biscuits in the upper baking sheet may be ready sooner than those in the lower one.

Always place the baking trays on the grid. If you are using the supplied baking sheet, remove the grid.

For even browning, make sure the biscuits are of the same thickness.

Type of food	Guide level (from the bottom)	Temperature (°C)	Cooking time (min)
PASTRY			
Cake	2	150-160	45-60
Sponge cake	2	150-160	25-35
Crumble cake	2	160-170	25-35
Fruit cake, sponge	2	150-160	45-65
Plum cake	2	150-160	35-60
Sponge roll*	2	160-170	15-25
Fruit cake, short crust	2	160-170	50-70
Challah (braided yeast bun)	2	160-170	35-50
Apple strudel	2	170-180	40-60
Jelly-filled rolls (Buchtel)	2	170-180	30-35
Pizza *	2	190-210	25-45
Biscuits, short crust	2	150-160	15-25
Biscuits, pressed	2	150-160	15-28
Cookies, leavened	2	170-180	20-35
Cookies, phyllo dough	2	170-180	20-30
Cream-filled pastry	2	180-190	25-45
PASTRY – FROZEN			
Apple and cottage cheese strudel	2	170-180	50-70
Cheesecake	2	160-170	65-85
Pizza	2	170-180	20-30
Fried potatoes, oven-ready	2	170-180	20-35
Croquettes, oven-baked	2	170-180	20-35
Yoghurt	3	40	240




Do not insert the deep baking tray into the first guide.

ECO COOKING



Round heater and the fan will operate. The fan installed in the back wall of the oven cavity makes sure the hot air constantly circulates around the roast or pastry.

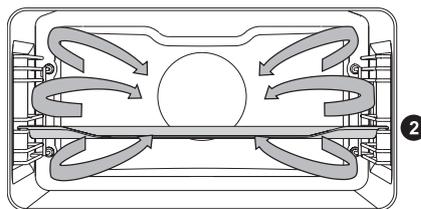


Type of food	Guide level (from the bottom)	Temperature (°C)	Cooking time (min)
MEAT			
Pork roast, 1 kg	2	190	150-170
Pork roast, 2 kg	2	190	160-190
Beef roast, 1 kg	2	210	120-140
FISH			
Whole fish, 200 g/piece	2	200	40-50
Fish fillet, 100 g/piece	2	210	25-35
PASTRY			
Pressed cookies*	2	180	25-30
Small cupcakes	2	190	30-35
Sponge roll	2	190	15-25
Fruit cake, short crust	2	190	55-65
VEGETABLES			
Potatoes au gratin	2	190	40-50
Lasagne	2	200	40-50
FROZEN FOOD			
Pommes frites, 1 kg	2	220	25-40
Chicken medallions, 0.7 kg	2	220	25-35
Fish sticks, 0.6 kg	2	220	20-30



Do not insert the deep baking tray into the first guide.

BOTTOM HEATER AND FAN

This is used for baking leavened but low-rising pastry and for preserving fruit and vegetables. Use the second guide from the bottom and a rather shallow baking tray to allow the hot air to circulate across the upper side of the dish.

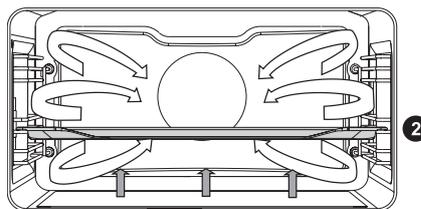

Type of food	Guide (from the bottom)	Temperature (°C)	Cooking time (minutes)
Fruit:			
Strawberries	2	180	20-30
Stone fruits	2	180	25-40
Fruit mush	2	180	25-40
Vegetables:			
Pickled gherkins	2	180	25-40
Beans/carrots	2	180	25-40

PRESERVATION

Prepare the food to be preserved and jars as usual. Use jars with a rubber sealing ring and a glass cover. Do not use jars with threaded or metal caps or metal tins. Make sure the jars are of equal size, filled with the same contents, and tightly sealed.

Pour 1 litre of hot water into the deep tray (approx. 70 °C) and place 6 1-litre jars into the tray. Place the tray into the oven on the second guide.

During preservation, observe the food and cook until the liquid in the jars starts to simmer – when bubbles appear in the first jar.


Food	Amount (L)	T = 170 °C – 180 °C until bubbles appear in the jars / until liquid in the jars starts to simmer	Temperature at the start of simmering – when bubbles appeared	Resting time in the oven (min)
FRUIT				
Strawberries	6×1 l	40-55	switch off	25
Stone fruits	6×1 l	40-55	switch off	30
Fruit mush	6×1 l	40-55	switch off	35
VEGETABLES				
Pickled gherkins	6×1 l	40-55	switch off	30
Beans, carrots	6×1 l	40-55	120°C, 60min	30

AUTOMATIC COOKING OF MEAT – AUTO ROAST MODE



In the Auto Roast mode, the upper heater will operate in combination with the grill heater and the round heater. It is used for roasting all types of meat.

When grilling directly on the grid, smear it with oil to prevent the meat from sticking onto it and insert it into the 2nd guide. Insert a drip tray into the 1st guide. When roasting meat in a baking tray, insert it into the 1st guide.

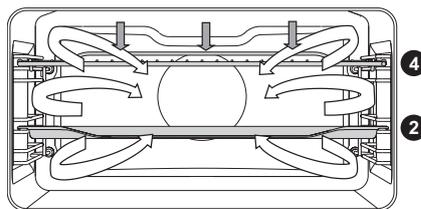

Type of food	Weight (g)	Guide (from the bottom)	Temperature (°C)	Cooking time (minutes)	Core temperature
Beef tenderloin	1000	2	190-210	45-55	55-75*
Chicken-whole	1500	2	170-190	60-70	85-90
Chicken-whole	2000	2	170-190	90-110	85-90
Turkey	4000	2	160-180	150-180	85-90
Pork roast	1000	2	150-170	100-120	70-85
Meat loaf	1000	2	160-180	70-80	75-80
Veal	1000	2	170-190	85-105	55-75
Lamb	1000	2	170-190	50-60	70-80
Venison	1000	2	170-190	55-65	70-80
Fish	1500	2	160-180	35-55	75-85
Chicken - thighs	1000	2	180-200	45-55	85-90

* rare = 55-60 °C; medium = 65-70 °C; well done = 70-75 °C

COMBINED SYSTEMS


HOT AIR AND MICROWAVES



In this cooking mode, the food is cooked with a combination of microwaves and grill.

Power levels: 90, 180, 360, 600 W

Place the glass baking dish into the 1st guide.

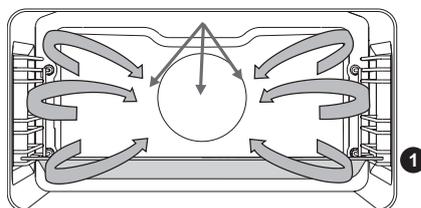

Type of food	Weight (g)	Power (W)	Temperature (°C)	Cooking time (min)
Poultry	1000	360	190-200	30-40
Poultry	half	36	190-200	25-35
Chicken - thighs	1000	180	190-200	20-30
Duck	1500	360	190-200	40-50
Poultry - wings	500	600	190-200	15-20


GRILL WITH FAN + MICROWAVES



This system uses a combination of microwaves and grill with fan to cut the cooking time.

Power levels: 90, 180, 360, 600 W.

Place the baking tray into the 1st guide.

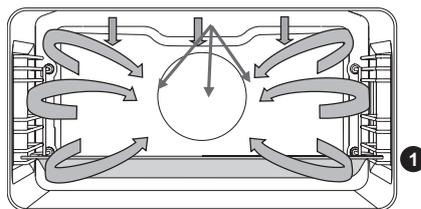

Food	Weight (g)	Power (W)	Temperature (°C)	Cooking time (minutes)
MEAT				
Veal roast	1500	360	170-190	70-90
Lamb – ribs	1500	360	170-190	70-90
Meat loaf	1000	360	180-190	30-40
Poultry – breast	500	360	180-200	25-35
Duck breast	1000	360	190-200	25-35
pork roast	1500	600	170-200	60-80
Roasted beef	1500	600	180-190	60-80
Chicken, whole	1500	360	190-200	30-35
Chicken, half	1500	360	190-200	25-30
Chicken thighs	1000	180	190-200	30-40
PASTRY				
Strudel – sweet	/	600	180-200	15-20
VEGETABLES				
Cannelloni	/	600	180-200	10-15
Ukrainian cabbage rolls	/	750	180-200	25-35
Potatoes au gratin	800	600	180-200	25-35




When using microwave systems, do not use metal cookware or utensils.
Do not preheat the oven.

MICROWAVE SYSTEMS

MICROWAVES



Microwaves are used for cooking and defrosting.
Power levels: 90, 180, 360, 600, 750, 1000 W.
Place the glass baking dish into the 1st guide.

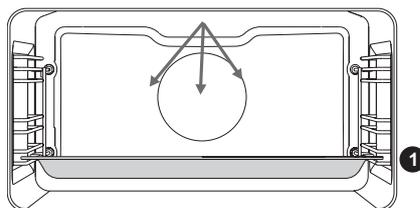

COOKING FROZEN FOOD

Food	Weight (g)	Power (W)	Cooking time (min)
Meat loaf	1000	850	35-40
Chicken	1500	600	52-55
Pork roast	1000	600	50-55

COOKING FRESH VEGETABLES

Type of food	Weight (g)	Power (W)	Cooking time (min)
Eggplant / aubergines	500	1000	5-8
Courgettes	500	1000	5-8
Carrots	500	1000	7-10
Onions	200	1000	2-4
String beans	500	750	10-15
Broccoli	1000	750	15-18
Bell peppers	500	1000	3-5
Cauliflower	1000	750	17-20
Leeks	200	1000	9-12
Brussels sprout	500	1000	9-12
Button mushrooms / Champignons	500	1000	10-14
Asparagus	500	750	5-8
Peas*	500	650	15-20
Cabbage	500	1000	10-14

COOKING RICE AND PASTA

Type of food	Weight (g)	Power (W)	Cooking time (min)
Rice*	250	1000	14-16
Pasta**	250	1000	11-13
Whole grain pasta*	250	1000	11-13
Oatmeal*	500	1000	7-9
Brown rice***	200	750	31-33
Risotto **	200	750	19-21
Couscous ***	200	1000	2-4
Polenta ***	200	1000	6-8
Millet ***	200	1000	9-11

** Add water in the ratio of 1:2.

*** Add water in the ratio of 1:3.

REHEATING FOOD AND BEVERAGES

Type of food	Amount (dl, g)	Power (W)	Cooking time (min)
Water	2 dl	1000	1-2
Coffee	2 dl	1000	1-2
Mulled wine	2 dl	1000	1-2
Milk	2 dl	1000	1-1,5
Side dishes	500 g	600	1,5-2
Sauces	500 g	600	3-5
Soups/stews	5 dl	750	5-7
Popcorn	90 g	1000	5-7
Baby bottle	2dl	350	3-4
Baby food	4 dl	180	2

MEAT

Type of food	Weight (g)	Power (W)	Cooking time (min)
Chicken thighs	500	600	15-20
Chicken wings	500	600	15-20
Meatballs	1000	1000	10-15
Pork chops	500	750	30-35
Chicken braised in sauce	500	1000	8-13
Escalopes/steaks	500	1000	8-12
Chicken-whole	1500	600	50-55
Pork roast	1000	600	50-55
Meat loaf	700	750	35-40

DESERTS

Type of food	Cups	Power (W)	Cooking time (min)
Chocolate soufflé	6	360	7-9
Cheese soufflé	glass baking dish	600-750	15-20
Fruit purée	glass baking dish	750-850	10-15
Custard creams	glass baking dish	600	20

MAINTENANCE AND CLEANING



Be sure to unplug the appliance from the power supply and wait for the appliance to cool down. Children should not clean the appliance or perform maintenance tasks without proper supervision.

Aluminium finish

Clean the aluminium finish with non-abrasive liquid cleaners intended for such surfaces. Apply the cleaner onto a wet cloth and clean the surface. Then, rinse the surface with water. Do not apply the cleaner directly onto the aluminium finish.

Do not use abrasive cleaners or sponges.

Note: The surface should not come into contact with oven cleaning sprays as this may result in visible and permanent damage.

Stainless steel sheet front side of the housing

(depending on the model)

Clean this surface only with a mild detergent (soapsuds) and a soft sponge that will not scratch the finish. Do not use abrasive cleaners or cleaners containing solvents as they may damage the housing finish.

Lacquer-coated surfaces and plastic parts

(depending on the model)

Do not clean the knobs and buttons, door handles, stickers, and rating/type plates with abrasive cleaners or abrasive cleaning materials, alcohol-based cleaners, or with alcohol.

Immediately remove any stains with a soft non-abrasive cloth and some water, in order to avoid damaging the surface.

You may also use cleaners and cleaning materials intended for such surfaces as instructed by their respective manufacturers.



The aluminium-coated surfaces should not come into contact with oven cleaning sprays as this may result in visible and permanent damage.

Appliance door

The door is attached to the appliance and may not be removed. Also, the door may not be disassembled or otherwise tapered with.

CONVENTIONAL OVEN CLEANING

You may use the standard cleaning procedure to clean stubborn dirt in the oven (using cleaners or an oven spray). After such cleaning, rinse the cleaner residues thoroughly.

Clean the oven and the accessories after each use to prevent the dirt from burning into the surface. The easiest way to remove fat is by using warm soapsuds while the oven is still warm.

With stubborn dirt and grime, use conventional oven cleaners. Rinse the oven thoroughly with clean water to remove all cleaner residue.


Never use aggressive cleaners, abrasive cleaners, abrasive sponges, stain and rust removers etc.

Clean the accessories (baking sheets and trays, grids etc.) with hot water and detergent.

The oven, the oven cavity and the baking trays are lined with a special enamel coating for a smooth and resistant surface. This special coating makes cleaning at room temperature easier.

USING THE CLEANING FUNCTION TO CLEAN THE OVEN

Pour 0.6 l water into the glass tray and place it into the lower guide.

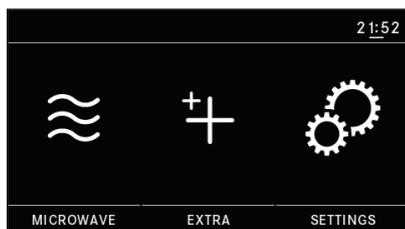

Choose "Extra/Additional Functions" in the main menu and select the Cleaning symbol.




Press the START key.

 After 30 minutes, food residues on the oven enamel walls will have softened and they will be easy to clean with a damp cloth.


 Use the Aqua Clean function when the oven has fully cooled down.

REMOVING AND CLEANING THE WIRE GUIDES

Only use conventional cleaners to clean the guides.

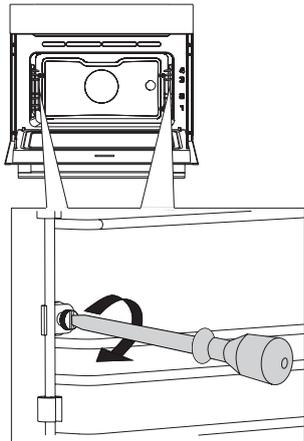


1 Undo the screw. Use a screwdriver.

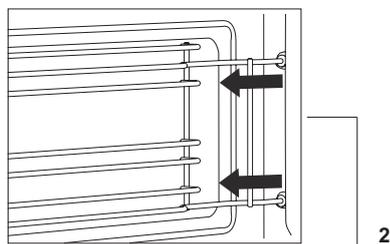

2 Remove the guides from the holes in the back wall.

Take care not to lose the spacers fitted on the wire guides. Replace the spacers after cleaning; otherwise, sparks may appear.

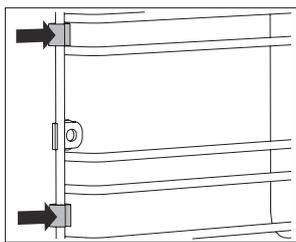

After cleaning, re-tighten the screws on the guides with a screwdriver. When replacing the wire guides, make sure you mount them on the same side they were installed on prior to removal.


REPLACING THE BULB

WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

The bulb is a consumable and therefore not covered by warranty. Before changing the bulb, remove the trays, the grid, and the guides.

Use a Phillips (cross) screwdriver.

(Halogen lamp: G9, 230 V, 25 W)

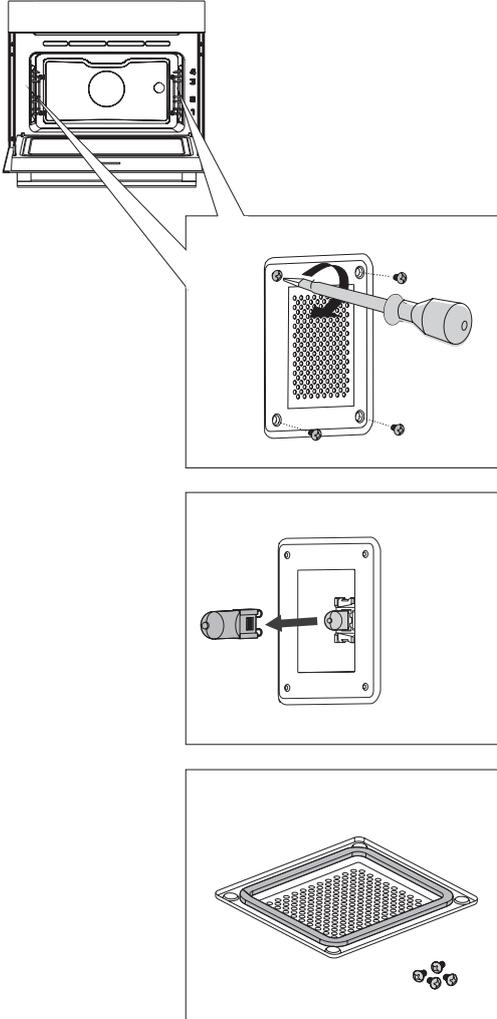

1 Undo the four screws on the cover. Remove the cover and the glass.

2 Remove the halogen light bulb and replace it with a new one.

⚠ Use protection to avoid burns.

⚠ There is a gasket on the cover which should not be removed. Do not allow the gasket to be detached from the cover. The gasket should fit correctly onto the oven cavity wall.

Firmly re-tighten the screws on the cover using a screwdriver; otherwise, sparks may appear.

TROUBLESHOOTING TABLE

Problem/error	Cause
There is no response of the sensors; the display is frozen.	Disconnect the appliance from the power mains for a few minutes (undo the fuse or switch off the main switch); then, reconnect the appliance and switch it on.
The main fuse in your home trips often.	Call a service technician.
The oven lighting does not work.	The process of changing the light bulb is described in the chapter. Cleaning and Maintenance.
The pastry is underdone.	Did you choose the right temperature and heating system? Is the oven door closed?
Error code is displayed: ERRXX ... * XX denotes the number/code of the error.	There is an error in the electronic module operation. Disconnect the appliance from the power mains for a few minutes. Then, reconnect it and set the time of day. If the error is still indicated, call a service technician.
Sparks appear in the oven.	Make sure all covers of the lights are fastened and that all spacers are fitted on the wire guides. Make sure the guides are correctly placed in the appliance.

If the problems persist despite observing the advice above, call an authorized service technician. Repair or any warranty claim resulting from incorrect connection or use of the appliance shall not be covered by the warranty. In this case, the user will cover the cost of repair.



Before the repair, disconnect the appliance from the power mains (by removing the fuse or by removing the plug from the wall outlet).

DISPOSAL



Packaging is made of environmentally friendly materials that can be recycled, disposed of, or destroyed without any hazard to the environment. To this end, packaging materials are labelled appropriately.

The symbol on the product or its packaging indicates that the product should not be treated as normal household waste. The product should be taken to an authorized collection center for waste electric and electronic equipment processing.

Correct disposal of the product will help prevent any negative effects on the environment and health of people which could occur in case of incorrect product removal. For detailed information on removal and processing of the product, please contact the relevant municipal body in charge of waste management, your waste disposal service, or the store where you bought the product.

COOKING TEST

Food tested in compliance with the EN 60350-1 standard.

Conventional baking

Dish	Equipment	Guide level (from the bottom)	System	Temperature (°C)	Cooking time (min)
Cookies – single level*	Shallow enamel-coated baking sheet	2		140	20-35
Cookies – two levels*	Shallow enamel-coated baking sheet	2 and 3		140	20-35
Cupcakes – single level *	Shallow enamel-coated baking sheet	2		140	40-55
Cupcakes – two levels	Shallow enamel-coated baking sheet	2 and 3		140	30-45
Cake	Round metal mould/Wire shelf (support grid)	2		160	20-35
Apple pie	Round metal mould/Wire shelf (support grid)	2		180	40-55

* Preheat for 10 minutes.

Grill

Dish	Equipment	Guide (from the bottom)	System	Temperature (°C)	Cooking time (minutes)
Toast*	Wire shelf/grid	3		240	0:30 - 2:30
Minced meat patty (pljeskavica)*	Wire shelf/grid + baking sheet as drip tray	3		240	15-25

* Preheat for 10 minutes.

Microwaves

Dish	Note	Guide (from the bottom)	Power (W)	System	Temperature (°C)	Time (minutes)
Custard creams		1	600			15-20
Sponge cake		1	1000			5-10
Meat loaf		1	600			20-30
Potatoes au gratin		1	360		190	25-30
Cake		1	180		180	25
Chicken	Program: Grill + hot air + microwaves	1	360		200	30
Defrosting ground meat		1	90 W* (auto program)			20:30

* Preheat for 10 minutes.

Argentina

Industrias Spar San Luis S.A.
Buenos Aires 1008
Phone +54 11 4311 7655

Belgium

Franke N.V.
9400 Ninove
Phone +32 54 310 111

Brazil

Franke Sistemas de Cozinhas do Brasil Ltda.
89219-512 Joinville, SC
Phone +55 47 3431 0501

Canada

Franke Kindred Canada Limited
Midland, ON L4R 4K9
Phone +1 866 687 7465

Czech Republic

Franke s.r.o.
190 00 Praha 9
Phone +420 281 090 411

Denmark

Franke Kitchen Systems Denmark
8520 Lystrup
Phone +45 8624 9024

Egypt

Franke Kitchen Systems Egypt S.A.E.
6th of October City
Phone +202 3828 0000

Finland

Franke Finland Oy
76850 Naarajärvi
Phone +358 15 341 11

France

Franke France S.A.S.
60230 Chambly
Phone +33 130 289 400

Germany

Franke GmbH
79713 Bad Säckingen
Phone +49 7761 52 0

Greece

Franke Hellas S.A.
19003 Markopoulo Attikis (Athens)
Phone +30 22991 500 00

Hong Kong SAR

Franke Asia Hong Kong Office
Causeway Bay
Phone +852 3184 1900

India

Franke Faber India Limited
Aurangabad - 431 136
Phone +91 240 2556697/98

Italy

Franke S.p.A.
37019 Peschiera del Garda
Phone +39 045 644 9311

Kazakhstan

Franke Kazakhstan Ltd.
040918 Almaty City
Phone +7 727 297 3812

Morocco

Franke Kitchen System SARL
21 000 Casablanca
Phone +212 522 674 200

Norway

Franke Kitchen Systems Norway
8520 Lystrup, Denmark
Phone +47 35 566 450

P.R. China

Franke (China) Kitchen Systems Co., Ltd.
Heshan, Guangdong, 529700
Phone +86 750 841 9288
Shanghai office +86 215 150 6715

Poland

Franke Polska Sp. z o.o.
05-090 Raszyn
Phone +48 22 711 6700

Portugal

Franke Portugal S.A.
2735-531 Cacém
Phone +351 21 426 9670

Romania

Franke Romania SRL
Pantelimon 077145
Phone +40 21 350 1550

Russia

Franke Russia GmbH
199106 St. Petersburg
Phone +7 812 703 1503

Singapore

Franke Singapore Pte. Ltd.
068811 Singapore
Phone +65 6709 5608

Slovak Republic

Franke Slovakia s.r.o.
010 01 Žilina
Phone +421 41 733 6200

South Africa

Franke Kitchen Systems (Pty.) Ltd.
Durban 4052
Phone +27 31 450 6300

Spain

Franke España S.A.U.
08174 Sant Cugat del Vallès
Phone +34 93 565 3535

Sweden

Franke Futurum AB
930 47 Byske
Phone +46 912 405 00

Switzerland

Franke Küchentechnik AG
4663 Aarburg
Phone +41 62 787 3131

Thailand

Franke (Thailand) Co., Ltd.
Bangkok 10120
Phone +66 2 612 7900

The Netherlands

Franke Nederland B.V.
5700 AD Helmond
Phone +31 492 585 111

Turkey

Franke Mutfak ve Banyo
Sistemleri Sanayi ve Ticaret A.S.
41400 Gebze Kocaeli
Phone +90 262 644 6595

Ukraine

Franke Ukraina LLC
02081 Kyiv
Phone +38 044 492 0015

United Arab Emirates

Franke LLC
Ras Al Khaimah
Phone +971 7 203 4700

United Kingdom

Franke UK Ltd.
Manchester M22 5WB
Phone +44 161 436 6280

USA

Franke Kitchen Systems LLC
Smyrna, TN 37167
Phone 800 626 5771



523004

en (01-16)

*Make
it
Wonderful*