




PULL OUT SINK MIXER INSTALLATION INSTRUCTIONS


Important Information

- Not suitable for gravity feed systems.
- Isolating stop taps must be fitted to the hot and cold water supply connections.
- All pipework must be thoroughly flushed prior to installation.
- Hot and cold water inlet pressures should be equal.
- Maximum operating pressure at any outlet is 500 kPa.
- Maximum hot water temperature is 70°C.
- Deck thickness: 30mm max. Tap hole size: Ø38mm
- Make sure there is a clear area directly under sink for the sprayer hose to retract. Allow 750mm for normal operation, and mini stops are 200mm apart.


Installation

1. Remove the fixing nut, washers from bottom of the mixer.
2. Insert the mixer into the tap hole. Slide the washers and fixing nut over the sprayer hose and the mixer threaded tail. Tighten the nut firmly against the washer. For additional security, screw the jamming screws onto the washer firmly.
3. Attach the Counter Weight to Sprayer Hose with two screws supplied. Adjust the Counter Weight to approximately 200mm from the bottom of the Sprayer Hose.
4. Apply Teflon Tape to Sprayer Hose fitting. Connect the Sprayer Hose fitting to the Mixer Hose Outlet.
5. Connect the hoses to the mixer inlets. Make sure Hot water hose is connected to the inlet that is marked with Red tape.
6. Connect hoses to an isolated min. stop. Turn on isolating stop taps and check for leaks.

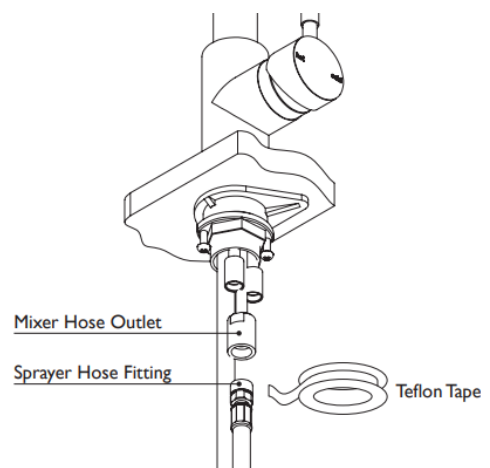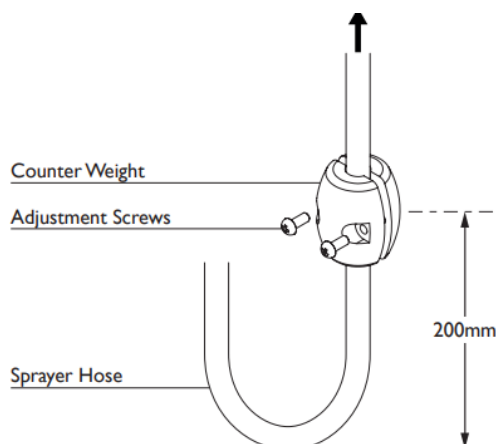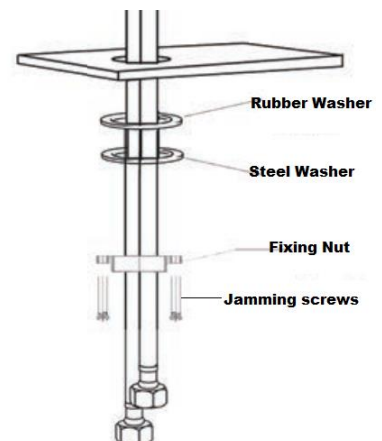


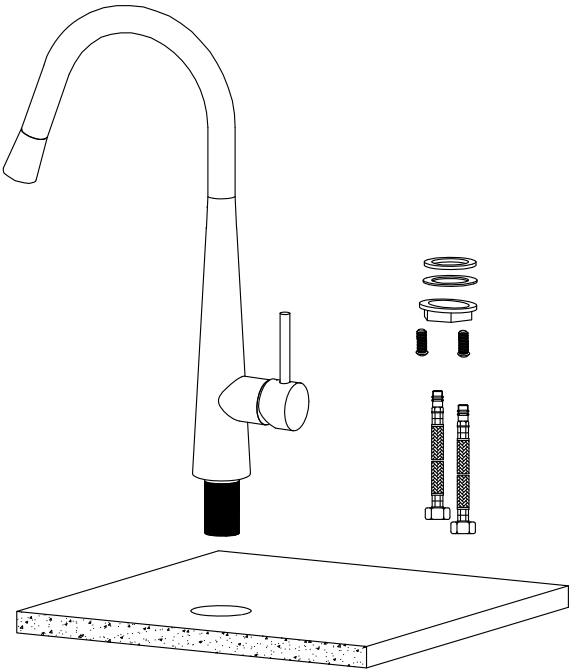

1

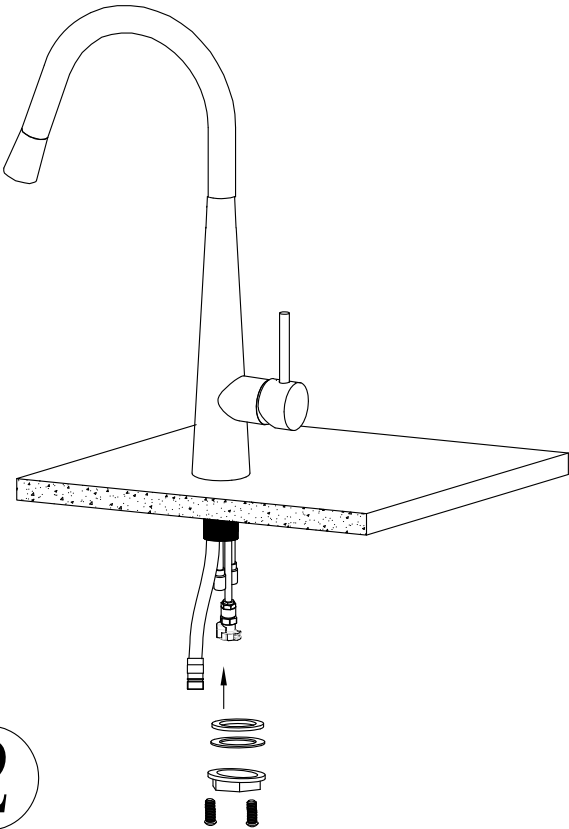


2

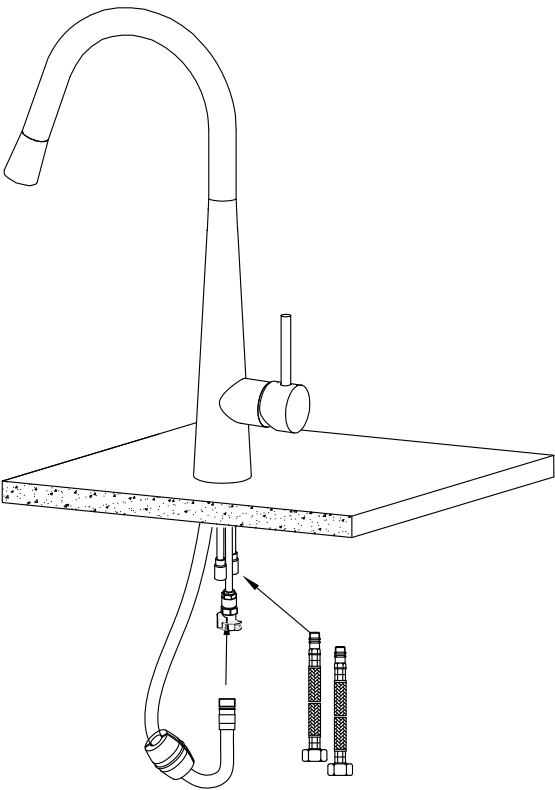

3

Please push the blue button when connecting the outlet hose, then push the clip at rear of the blue button to lock it in.

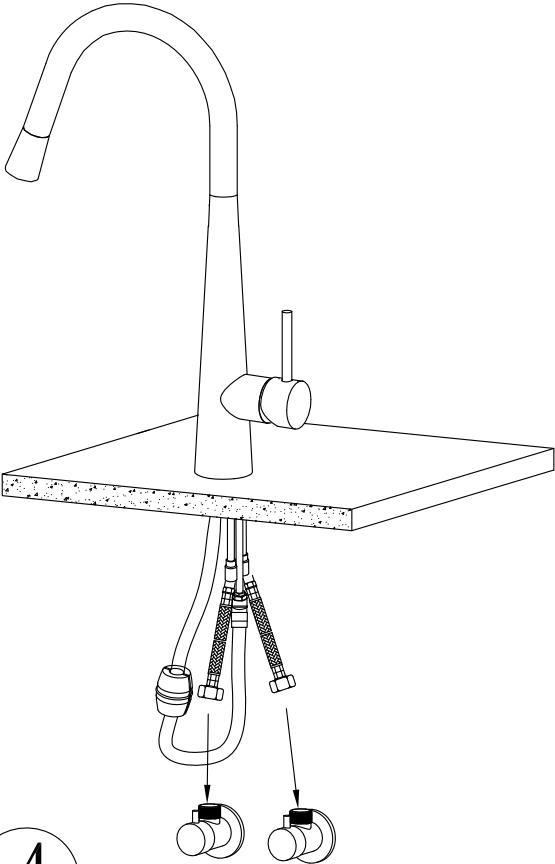

4