



**DO NOT** park or leave unattended hostler in the UP position with or without a swap body container.

The only time the lift mechanism should be in the up position is when actively hosteling containers and the engine is running.

Failure to follow these instructions may disable the system.

