

Removing Cap for Servicing Nozzle and Filter

Lift riser up

Grasp riser and remove cap by hand

Tighten torx screw on cap after reassembly



Clogged filter can cause shortened stream distances or uneven spacing

Remove cap as shown and clean filter and or nozzle
Line up filter marks with nozzle opening (filter points down)
Hand tighten cap back onto riser

For reassembly, make sure filter markings
line up with nozzle opening

