

Tutorial



Search E-bike

Search the closest E-bike on the map





Select E-bike

Select the E-bike you want to use

(2)



Start rental

Swipe right on the button Start Rental





Unlock E-bike

To unlock the E-bike, press the **Unlock** button

4



Turn ON E-bike

To turn on the E-bike, press and hold the right **Power** button located under the display installed on the handlebar





Motor power

To increase or decrease the pedal assist power, press the + or - buttons on the display and to change gears use the gearbox on the right side of the handlebar





Horn

To sound the horn, press the **Green** button located just below the display on the handlebar of the E-bike





Lights

To turn the lights ON or OFF, press and hold the + button on the display





Walk mode

To activate the walk mode, press and hold the - button. When the - button is released, the E-bike exits from walk mode





Mobile holder

You can place your phone on the special mobile holder installed on the handlebar to always have it at hand





Have a nice trip!

Enjoy your ride by travelling carefully and always respecting other people.

Remember to wear the **helmet**.

Safety first of all!





Ends rental

To complete the rental, go to a Lakenergy stall, swipe right on the **End the rental** button on the App and wait for the summary of use

