

# **Owner's Manual**

## **Safari Condo ProMaster**





Safari Condo ©

© No copy or reproduction of all or any part of this manual, list of accessories, or illustrations is allowed without explicit permission from **Safari Condo**.

All patents, pending patents, publishing rights or trademarks apply throughout Canada and the United States of America.

© Copyright January 25, 2021, Safari Condo

## A. Contents

A.	Contents .....	iii
A.	INTRODUCTION .....	1
	Welcome .....	1
	Controls .....	3
	Control panel .....	6
B.	SAFETY TIPS .....	7
	Detectors .....	8
	Fire extinguisher .....	9
C.	ELECTRICITY .....	9
	Power Supply .....	9
	Electrical panel .....	10
	Fuses and Breakers .....	10
	Converter-charger .....	12
	Auxiliary Deep-cycle Batteries .....	12
	Use .....	12
	Recharge .....	13
	Maintenance .....	14
	Lithium batteries (optional) .....	14
	AC Inverter .....	16
	Solar Panels (Optional) .....	17
	Important Facts .....	18
D.	WATER .....	18
	Potable Water Fill .....	18
	Start-up and Disinfecting of Potable Water System with 3, 8 Litre Electric Water Heater (MX only) .....	19
	Start-up and Disinfecting of Potable Water System with 15 L Propane Water Heater (optional on MX; standard on XL Plus and XL FLEX) .....	21
	Start-up and Disinfecting of Potable Water System - Aquago Propane Instant Water Heater .....	22
	3, 8 Litre Electric Water Heater (MX only) .....	25
	15 L Propane Water Heater (optional on MX; standard on XL Plus and XL FLEX) .....	25
	Aquago Propane Instant Water Heater (optional) .....	26
	Simple temporary procedure to prevent freezing when using RV in case of freezing temperatures forecasts .....	27
	Water Pump .....	27
	Interior Shower .....	27
	XL Plus .....	27
	XL FLEX .....	29
	Toilets .....	29
	Portable Chemical Toilet (optional) .....	29
	Cassette toilet (MX) .....	30
	Permanent Toilet with Black Water Tank (XL Plus) .....	32
	Permanent Toilet with black water tank (XL FLEX) .....	32
	Dumping of Holding Tanks .....	33
	Draining Wastewaters (MX) .....	33
	Draining Wastewaters (XL Plus and XLFLEX) .....	34
E.	UTILITIES .....	35
	Lighting .....	36
	Front Dome Light .....	36
	Light fixtures .....	36
	Propane .....	36
	Microwave oven .....	38
	Fridge .....	39
	Cabinet Panels .....	39
	Pull-out Table (Standard on MX) .....	40

Portable Table .....	41
Manual Bench-bed (standard on MX and XL Plus) (optional on XL FLEX) .....	43
Electric Bench-bed (optional on MX, XL Plus and XL FLEX) .....	45
Storage Area under Bench-Bed .....	46
Height Adjustable Bed (XL FLEX) .....	46
Storage Area under Adjustable Bed .....	48
Extra bed below adjustable bed (optional on XL FLEX) .....	49
“U”-shaped Bench (optional on XL Plus and XL FLEX) .....	49
Storage under “U”-shaped Bench .....	50
Front Single Bed (optional) .....	51
Safety Belts and Anchor Loops for Child Seats on Rear Passenger Seats .....	52
Swivelling Seat .....	54
Privacy Curtains .....	55
Gasoline Heater .....	55
TV with DVD Player (optional) .....	57
Handling of TV and its wall mount: .....	57
Pop-up Roof with Top Bed (optional) .....	59
F.    EXTERIOR .....	61
Variable Speed Roof Vent .....	61
Basic Model .....	61
Automatic Model with Remote Control (optional) .....	62
Maxxfan Model with Remote Control (optional) .....	63
Vent Maintenance .....	63
Air Conditioner (optional) .....	64
Side Door Screen .....	66
Rear Screen .....	66
Sliding Step .....	69
Trailer hitch wiring harness is located on left side of rear compartment. ....	69
Bike Rack (optional) .....	69
G.    TROUBLESHOOTING/MAINTENANCE .....	70
Gasket Check .....	70
Hot Water System Leaks .....	70
3, 8 litre Electric Water Heater .....	70
15 L Propane Water Heater .....	71
Aquago Propane Instant Water Heater (optional) .....	72
Toilet Leaks .....	73
Repairs .....	73
Microwave Oven .....	73
Fridge .....	73
Additional Information .....	74
Warrantee .....	74
H.    WINTERIZING .....	74
Winter Maintenance .....	74
Winterizing Plumbing System with 3, 8 Litre Water Heater .....	74
Winterizing Plumbing System with 15 Litre Propane Water Heater .....	75
Partial Plumbing System Winterizing with Aquago Propane Instant Water Heater .....	76
Complete Plumbing System Winterizing with Aquago Propane Instant Water Heater .....	77
Re-use of the instant Aquago water heater in case of light freezing .....	77
To use Aquago Instant Water Heater Following Partial Winterizing of Plumbing System .....	77
Winterizing Vehicle .....	78



## A. INTRODUCTION

### Welcome

Congratulations on your purchase of a Dodge Ram ProMaster Safari Condo: it has been carefully designed by Safari Condo to be versatile and provide you with many years of pleasure and dependable use.

This Owner's Manual is intended to explain safe and secure use and maintenance of all RV accommodations aboard your Safari Condo recreational vehicle.

NOTE: All photos presented as reference in this manual are based on the latest information available at time of publication.

For up-to-date information, visit Safari Condo [[www.safaricondo.com](http://www.safaricondo.com)].

Read this manual thoroughly along with all other installed equipment Owners Manuals. Before using components and equipment of your Safari Condo, we recommend that you get to know all operating procedures and related safety measures. It is also recommended that you convey this information to everyone involved.

Please refer to Dodge Ram ProMaster manufacturer concerning the vehicle, its operation, safety recommendations and maintenance.

Upon transfer or sale of RV, please hand over all manuals and documentation to new owners. To help us maintain our customer listing up to date, please inform Safari Condo of any change of ownership concerning this RV.



**CAUTION:**



**WARNING:**



**DANGER:**

In this manual, these signs indicate recommended safety precautions. When you come across these signs, read everything carefully, as serious injury may result.



In this manual, these signs indicate that damage may result to Safari Condo or its equipment as a result of misuse or mishandling.

In this manual, right and left sides are determined while inside and looking towards front of RV.

## The different versions of Dodge Ram ProMaster

There are four different Safari Condo versions built on the Dodge Ram ProMaster chassis with a diesel engine. The letters LX, LDX, LX Plus or XL FLEX indicate the specifics of each model.

Elements common to all four models are mentioned throughout this manual.

### LX Features:

- 19 feet
- Double bed 54 x 76
- Two 3.5 ft<sup>3</sup> fridges
- Propane stove
- Cassette toilet
- Diesel heater
- Propane water heater

### LDX features:

- 19 feet
- Double bed 54 x 76
- One 4.3 ft<sup>3</sup> fridge
- Propane stove
- Retractable shower
- Permanent toilet with combined black and grey water tank
- Diesel heater
- Propane water heater

### XL Plus Features:

- 22 feet
- Queen bed 60 x 76
- Two 3.5 ft<sup>3</sup> fridges
- Permanent toilet with combined black and grey water tank
- Retractable shower
- Propane stove
- Diesel heater
- Propane water heater

On LDX and XL Plus version, bench has no seatbelt and converts to enclosed toilet and shower compartment.




**ATTENTION:** NEVER DRIVE AWAY WITH PASSENGERS SITTING ON THIS BENCH.

XL FLEX Features:

- 22 feet
- Queen bed 60 X 76 (height-adjustable or bench-bed)
- Two fridges: 4.3 ft<sup>3</sup> and 3.5 ft<sup>3</sup>
- Spacious central toilet/shower cabinet
- Propane stove
- Diesel heater
- Propane water heater

## Controls

The different controls that manage the vehicle's accessories are located on the end of upper cabinet in sliding door opening.

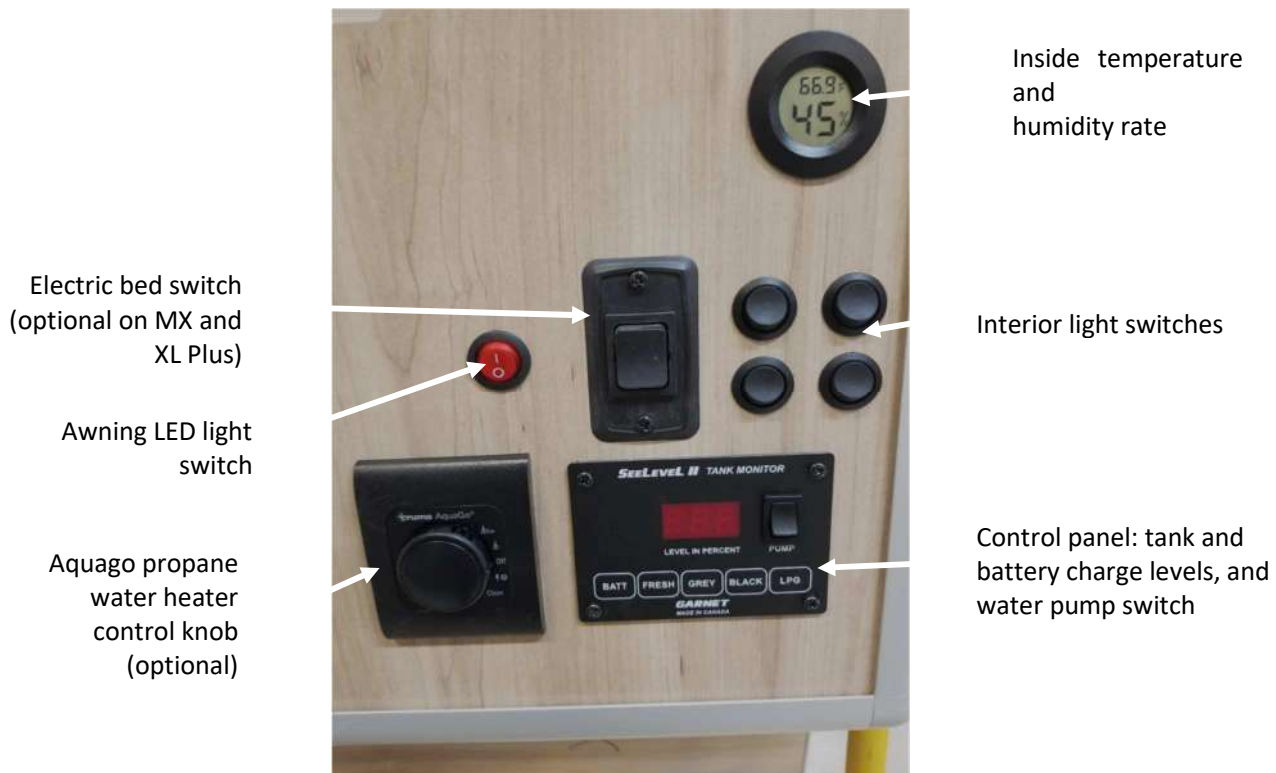

Controls  
PHOTO A-1



Controls  
PHOTO A-3



PHOTO A-2



Electric bed switch  
(optional on MX  
and XL Plus) C pillar

Electrical plug



PHOTO A-4

Webasto  
heater  
thermostat  
(XL Plus, XL  
FLEX)  
(located in  
right corner at  
rear in MX  
version)



PHOTO A-5

## Control panel

The control panel (PHOTO A-6) shows the level of the different holding tanks and the battery charge:

<i>Model</i>	<i>BATT</i>	<i>FRESH</i>	<i>GREY</i>	<i>BLACK</i>	<i>LPG</i>
MX	voltage of the batteries	potable water	grey water	N/A	propane tank (if equipped)
XL Plus	voltage of the batteries	potable water	grey water	black water	propane tank
XL FLEX	voltage of the batteries	potable water	grey water	black water	propane tank

Press the BATT button for the auxiliary battery voltage or the current voltage charge (if plugged on the grid, or engine running, or from optional solar panels). Pressing the other buttons FRESH, GREY, BLACK, LPG for the level of each tank in percentage (%) (PHOTO A-6).



Control panel  
PHOTO A-6

Inverter panel (PHOTO A-8) in centre of front cabin, controls the converter/charger/inverter (see section *C. Electricity*).

Inverter panel has 3 switches below its display: centre is the Webasto heater switch, those to the right and left are for the corresponding front cabin lights.





Xantrex 2000 Watts inverter control panel

## B. SAFETY TIPS

PHOTO A-8

A few warnings

The following warnings are intended for the prevention of accidents. Read them carefully before using the Safari Condo.



Never drive away if:

- Front seats are not facing forward and locked;
- Bench-bed is not in bench position;
- All tables are not stored and locked;
- Toilet and other mobile objects are not stored or tied down;
- Cabinet and fridge doors are not closed and locked.



While setting up at a campsite, make sure gearshift is in P (Parking) position and that parking brake is set, to avoid free movement of RV and possible damage or injury to you or others.



Be careful not to park over flammable materials such as leaves, dry grass, and other flammable materials: these can come in contact with hot parts of exhaust system and catch on fire.



Don't travel with loose objects: keep everything stored or tied down, as any loose object can cause injuries in case of a sudden stop, a sudden change in direction, or an accident.

Carry out all maintenance recommended by equipment manufacturers.

## Detectors

Combination propane and carbon monoxide detector is located at the bottom of the inside-right wall (PHOTO B-1). Detector works through RV auxiliary deep-cycle batteries. Don't forget to test regularly using "TEST" button.



Carbon monoxide/Propane gas detector

PHOTO B-1

Smoke detector (PHOTO B-2) located above fuse panel (PHOTO C-3) is battery-powered. Don't forget to check regularly using "TEST" button. And replace battery every year.



Smoke detector

PHOTO B-2



Don't forget that Carbon monoxide/Propane gas detector uses electricity 24 hours a day. If RV is idle for 2 weeks or more, turn them off by removing fuse (CO detector, 3A), which protects them (PHOTO C-3).



**ATTENTION:** CHANGE BATTERY AS REQUIRED OR ACCORDING TO MANUFACTURER'S RECOMMENDATIONS, YOUR SAFETY DEPENDS ON IT.



**CAUTION:** CHECK ALL DETECTORS AFTER STORAGE, BEFORE EACH OUTING, AND EVERY WEEK WHEN CAMPING OR TRAVELLING.



**CAUTION:** CHANGING ALL DETECTORS EVERY FIVE YEARS IS RECOMMENDED.


## Fire extinguisher

Access fire extinguisher located behind passenger seat through door on passenger side (PHOTO B-3).



Fire extinguisher

 PHOTO B-3

 **IMPORTANT:** When purchasing RV, it is strongly recommended that you get to know how to use supplied fire extinguisher.

## C. ELECTRICITY

### Power Supply

Yellow power cord is located inside under bed. It is designed for plugging into a 30 Amp 120 V power outlet.

1. Open power hook-up cover located on left side of vehicle by pulling on tab while pushing down on hinge (PHOTO C-1).
2. Plug female end into round hook-up on side of vehicle.
3. Plug other end to 30 A power source, or to 20 A or 15 A campground or residential power source using appropriate adapter (not included) (PHOTO C-2).




Power hook-up  
PHOTO C-1



20 A or 15 A Power adapter  
PHOTO C-2

## Electrical panel

Electrical panel is located in locker above bed; it contains all circuit breakers (PHOTO C-3.1) and all 12 V fuses (PHOTO C-3.2).

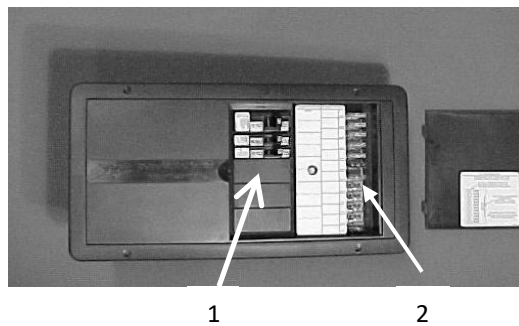

Breaker and fuse panel  
PHOTO C-3

## Fuses and Breakers

In all three versions, 120 V circuit breakers (PHOTO C-3.1) control the following equipment:

ITEM	CIRCUIT	BREAKER
------	---------	---------

1	Main	30 A
2	120 V Outlets #2 and #3	15 A
3	Microwave, Water Heater, Charger & Outlet #1	20 A
4	Air Conditioning (optional)	20 A

In MX version, 12 V fuses (PHOTO C-3.2) control the following equipment:

ITEM	CIRCUIT	FUSE
1	Lights	7.5 A
2	Front Fridge	15 A
3	Roof Vent	10 A
4	Diesel Heater	20 A
5	Water Pump	10 A
6	Add. 12 V Outlets, USB & TV	15 A
7	Carbon Monoxide/LP Gas Detectors	3 A
8	Propane Water Heater (optional)	10 A
9	Toilet Pump (optional)	10 A
10	Rear Fridge	15 A
11	Electric Bed	10 A
12	Solar Panels	30 A

In XL Plus version, 12 V fuses (PHOTO C-3.2) control the following equipment:

ITEM	CIRCUIT	FUSIBLE
1	Lights	7.5 A
2	Front Fridge	15 A
3	Roof vent	10 A
4	Gas Heater	20 A
5	Water Pump	10 A
6	Add. 12 V outlets, USB & TV	15 A
7	Carbon Monoxide/LP Gas Detectors	3 A
8	Propane Water Heater	10 A
9	Electric Bed	20 A
10	Rear Fridge	15 A
11		
12	Solar panels	30 A

In XL FLEX, 12 V fuses (PHOTO C-3.2) control the following equipment:

ITEM	CIRCUIT	FUSE
1	Lights	7.5 A
2	Front Fridge	15 A
3	Roof Vent	10 A
4	Gas Heater	20 A

5	Water Pump	10 A
6	Add. 12 V outlets, USB & TV	15 A
7	Carbon Monoxide/LP Gas Detectors	3 A
8	Propane Water Heater	10 A
9	Electric Bed	20 A
10	Rear Fridge	15 A
11		
12	Solar Panels	30 A

## Converter-charger

When connected to 120 V power supply (campground or at home), the 55 Amp battery charger is automatically switched on. Charger will either recharge both deep-cycle batteries or maintain them at full charge.

Note: It is normal, when vehicle is connected, that the light turns on, on inverter panel (PHOTO A-8).

## Auxiliary Deep-cycle Batteries

Two auxiliary deep-cycle 6 Volt batteries are the heart of RV 12 Volt electrical system.

### Use

Deep cycle auxiliary batteries, also known as marine batteries, provide energy for all the camping equipment in your vehicle. When plugged into an outside power source they will recharge automatically. If you are camping without services, however, it is important to limit your electrical use. Use only one light at a time, turn off light when no longer needed, shut off inverter when not in use; these are good habits to adopt in order to maximize electrical autonomy of your batteries. After a night of camping without outside power, it is recommended to start your engine after using power-hungry appliances, such as AC inverter to use the microwave. If your batteries are too weak, inverter may shut off automatically.

Chart below shows the percentage of battery load according to corresponding voltage. For the chart to be valid, there should not be any electrical usage and not any charging at time of reading.

Voltage	Percentage of load
12.6 and above	100%
12.50	90%
12.42	80%
12.32	70%
12.06	50%
11.90	40%
11.75	30%



11.58	20%
11.31	10%
10.50	0%

Battery chart

Avoid discharging batteries below 40% (11.9 volts) because these batteries like to be well charged. It is quite normal that the number on indicator moves constantly. In the evening, once the sun goes down, it is the best time of day to read the condition of your auxiliary batteries. For an optimal reading of the charge state of batteries, close all energy-consuming devices.

 
 
 
## Recharge

When planning to camp without external power, it is important to start with fully charged batteries. There are three ways to charge your batteries: by plugging vehicle to the grid, by driving vehicle or by using solar panels (optional). The most efficient method is to plug your vehicle 12 to 24 hours before departure. When driving, batteries recharge more slowly. You must drive on the highway for about 4 hours at 100 km/h to recharge efficiently. As for solar panels, they provide a continuous, though minor, charge to batteries (See section on Solar Panels).

## Maintenance

Normal life of batteries is between 3 and 5 years, depending on the number of cycles they will have gone through. It is therefore important to take good care of them; both deep-cycle 6V batteries are maintenance-free; and will last longer if you avoid discharging them completely.

Since these are maintenance-free batteries, you should never open the battery cells. Any attempt to open a battery will destroy the battery. The batteries are placed under the bench-bed in a closed box and ventilated outside the vehicle.

-  The autonomy from your auxiliary batteries varies depending on the use of electrical appliances in your RV. Battery autonomy can be as much as 96 hours using only the fridge. This is for new original equipment batteries only and for a single fridge, without solar panels.
-  Replace with deep-cycle batteries only. Some models may not fit in battery tray.
-  Don't forget: batteries that discharge in very cold weather can freeze and become unrecoverable. A frozen battery is easily detectable and is not guaranteed.

## Lithium batteries (optional)

If you have selected one of our 12 V lithium batteries options, here is what you should know about their use compared to our standard AGM batteries.

- The life span of lithium batteries should double, or about 8 years.
- With the same battery capacity, lithium will almost double the available power since we can use 80% of the battery's power (20% remaining).
- Lithium batteries are 50% lighter than standard AGM batteries.
- We can discharge the lithium batteries between -20 °C and 60 °C (-4 °F to 140 °F).
- We can recharge the lithium batteries between 0 °C and 60 °C (32 °F to 140 °F).
- With the lithium batteries option, you will get a battery switch (PHOTO C-4) to disconnect your batteries so that they are not recharged while their temperature is below 0 °C (32 °F).
- A thermometer is also supplied with the lithium batteries, to monitor the batteries temperature and a battery heater to heat them up if you want to use your Safari Condo in cold weather.
- Spring, summer and fall operation: compared to standard AGM batteries, almost double the energy is available without any additional action required.
- Winter operation: additional monitoring/action such as heating the lithium batteries prior to recharge when their temperature is below 0° C. Otherwise, disconnect the batteries using the disconnect switch (PHOTO C-4) to avoid battery recharging from the Safari Condo engine, the inverter/charger or the optional solar panels.
- In winter, the benefits of this additional monitoring/action is that you have better performing batteries compared to AGM batteries that do not require heating.



PHOTO C-4

## Lithium self-heating batteries (optional)

Benefits of self-heating lithium batteries, in addition to the previous section.

- Self-heating lithium batteries can be recharged between  $-25^{\circ}\text{C}$  and  $+60^{\circ}\text{C}$  ( $-13^{\circ}\text{F}$  to  $140^{\circ}\text{F}$ ) since an integrated heating element will heat the battery before charging; this causes a longer charge time since heating of batteries is required prior to recharge (the heating cycle is fully automatic).
- Using the *Volthium Bluetooth* application (needs downloading), you have access to the internal battery temperature, the charge in %, the voltage, the number of completed cycles, the charge or discharge current of each battery.
- Please note that the Bluetooth feature will work within a short distance between 2 and 6 feet of the battery compartment.
- Spring, summer and fall operation: spring, summer and fall, additional action required compared to standard batteries.
- Winter operation: simply plan for additional charging time. The colder it is, the longer it will take to recharge the batteries (at  $-20^{\circ}\text{C}$ , the charge will take 2 hours more than in summer).

## Lithium battery monitor (Optional)

- The lithium battery monitor (PHOTO C-5) displays battery state of charge (%). This is convenient and helps to prevent going below the critical threshold which could damage or shorten battery life.
- The monitor shows the charge or discharge level in real time (in Volts and in Amps).
- Only available with the lithium battery option.



PHOTO C-5

## AC Inverter

 Read the supplied manufacturer's Owner's Manual before using the AC inverter.

Inverter is useful only when vehicle is not connected to AC power supply. Inverter transforms DC power of batteries into 120 V AC power for your electrical appliances when wilderness camping.

Inverter is located under rear bed as part of converter-charger. To activate, inverter switch must be set at « AUTO INVERT» on inverter panel (PHOTO A-7) located in centre of front cabin. After some 5 second delay, up to 1 500 Watts of 120 V AC power is available for any 120V AC equipment.

 
Inverter powers only one of microwave, water heater (if installed) or outlet #1 located on end of counter (MX) or under spice rack (XL Plus and XL FLEX). Please note that only one appliance can function at any one time, whether or not connected to a 120 V power supply. Select which appliance to power using selection switches (PHOTO C-6).



Selection switches  
(Microwave or Outlet #1)  
PHOTO C-6


Note: Indicator light descriptions appear on inverter panel (PHOTO A-7).

Note: It is normal that the green, yellow and red lights located on left of inverter panel light up when electrical appliances are in operation, depending on amount of energy required (PHOTO A-7).

 **IMPORTANT:** Do not leave inverter in “AUTO INVERT” position permanently while wilderness camping; inverter continuously uses up power from auxiliary batteries when “ON”. Turn it on only when needed; when not required, always turn inverter “OFF”.

## Solar Panels (Optional)

Solar panels are used exclusively to recharge or maintain auxiliary batteries of vehicle at an acceptable level (PHOTO C-7).

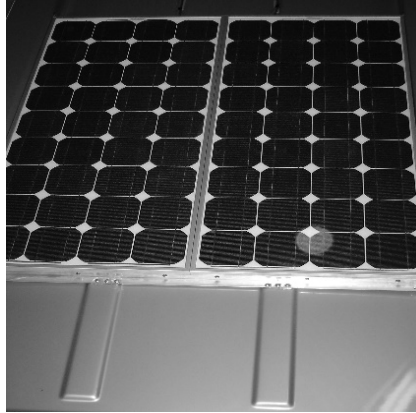

Solar panels  
PHOTO C-7

### With One 95-Watt Solar Panel

If vehicle is equipped with a single solar panel, this accessory will provide energy each day, but in variable quantities depending on available sunlight. If fridge set at power level #3, water pump and a minimum of lights, electrical autonomy should be about 6 days with no outside power source. Use of AC inverter will greatly reduce your autonomy.

### With Two 95-Watt Solar Panels

If vehicle is equipped with two solar panels, this accessory will provide energy each day, but in variable quantities depending on available sunlight. If fridge set at power level #3, water pump and a minimum of lights, vehicle should be almost completely autonomous, sunlight permitting. Use of AC inverter is possible for short periods without too severely restricting your autonomy.

### With Three 95-Watt Solar Panels

Energy supply is the same as with two solar panels, with both fridges at power level #3.

### With four 95-Watt solar panels of (XL Plus and XL FLEX)

Solar panels provide a better capacity to recharge batteries and sooner bring them back to optimal load level.

## Important Facts

A small shaded area on a solar panel will produce the equivalent of a completely shaded solar panel, because all cells are connected serially. Thus, no charge will occur from this panel.

Remember that a solar panel produces energy for only about 8 hours over a 24-hour period. Maximum output of one solar panel is about 4.6 Amps/Hour in full noontime summer sunlight (about 9.2 Amps/Hour for 2 solar panels). On a rainy day, electrical output will be reduced to roughly 0.2 to 0.4 Amps/Hour per panel.

It is important to clearly understand that in order to get an extended electrical autonomy with a solar panel, power consumption inside the RV must be reduced to a minimum. In this way, energy provided by solar panels will be an important share of daily power consumption. Keep in mind also that in order to be completely autonomous, power consumption in 24 hours must less than the energy generated by solar panels in 8 hours. Equally important to consider is that very hot temperatures lower solar panel efficiency (over 30 °C or 86 °F).

## **D. WATER**

### **Potable Water Fill**

There is a hinged flap on right of power input on left side of RV. It is locked to ensure your safety (PHOTO D-1).

Inside, the large cap on the left (PHOTO D-2.1) covers potable water fill for 72 litre (19 US gal) (MX) or 100 litre (26 US gal) (XL Plus and XL FLEX) tanks.

On the right, the potable water inlet with metal coupling (PHOTO D-2.2) is used for direct connection to campground or home water supply. Always use a potable water approved ½" hose and a water pressure regulator (not included).

To close hinge flap when vehicle is plugged into water system, pivot small inside panel to free opening for hose, then close cover (PHOTO D-3).



Water fill hinged flap  
PHOTO D-1



1  
Water fill  
2  
PHOTO D-2



Door opened

PHOTO D-3

Potable water level indicator is located to your left in sliding door opening (see “Control Panel”, “FRESH WATER”, section A. *Introduction* (PHOTO A-6)).

☞ When vehicle is plugged directly into water system, close water pump using “PUMP” switch on control panel. Led indicator must be out (see “Control Panel”, section A. *Introduction*) (PHOTO A-6).

☞ When vehicle is plugged directly into water system, always install a water pressure regulator (not included) between water system and hose. Pressure regulator must be placed following home or camping water supply.

### **Start-up and Disinfecting of Potable Water System with 3, 8 Litre Electric Water Heater (MX only)**

1. Check that water heater is unplugged from outlet in rear left corner of vehicle (PHOTO D-4) and set “MICROWAVE/ WATER HEATER” switch to “MICROWAVE” position (PHOTO D-5).
2. Switch off water pump using “PUMP” switch (PHOTO A-8) on control panel. Green indicator light must be out.
3. Before draining potable water tank, position RV so it leans to the rear.
4. Drain potable water tank and plumbing system by opening valve (PHOTO D-7) located behind wheel well in rear left corner of vehicle.
5. Drain water heater located in rear corner of vehicle by opening valve under water heater, all the while holding safety valve (PHOTO D-6) found on side of water heater in “OPEN” position. This allows air into water heater so it can drain completely. Antifreeze will then run out under vehicle.
6. When empty, close safety valve.
7. Shut both previously opened valves.
8. Pour 100 ml of bleach in potable water tank and fill tank completely with water.
9. Turn on water pump by switching to “PUMP” (PHOTO A-8) on control panel. Indicator light will turn on.
10. Open cold water tap (lever raised) and let water run for about a minute to disinfect plumbing system. Repeat for exterior and interior showers (if installed), toilet and toilet wash down shower




spray (if installed).

11. Open hot water tap (lever lowered) and let water run for at least three minutes to fill water heater and thoroughly disinfect water heater and plumbing system. Repeat for exterior and interior showers (if installed).
12. After 4 hours, repeat steps 2 to 11 without adding bleach. To rinse system even better, repeat steps 2 to 11 without adding bleach.
13. When all these steps have been completed, open hot water tap and let water run for at least three minutes to make sure water heater is full; plug in water heater.
14. Drain holding tanks. Your RV is now ready for the camping season.



Water heater wall plug  
PHOTO D-4

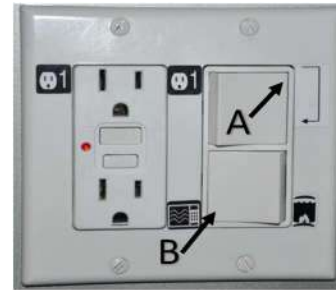

Selection switch in microwave position  
PHOTO D-5

 
 
 


Potable water tank valve  
PHOTO D-7



Safety valve  
PHOTO D-6



-  **IMPORTANT:** When draining, make sure that “PUMP” switch is in “OFF” position. Green indicator “PUMP” light must be out (PHOTO A-8).
-  **IMPORTANT:** Make sure water heater is full before turning it “ON”. It is full when water has been running for more than three (3) minutes with lever in “HOT” position.
-  Come winter, see “Winterizing Plumbing System with Electric Water Heater”, section *H. Winterizing*.

## **Start-up and Disinfecting of Potable Water System with 15 L Propane Water Heater (optional on MX; standard on XL Plus and XL FLEX)**

1. Check that water heater switch located near control panel inside RV is in “OFF” position (PHOTO D-9).
2. Switch off water pump using “PUMP” switch (PHOTO A-6) located on control panel. Indicator light must be out.
3. Before draining potable water tank, position RV so it leans to the rear.
4. Drain potable water tank and plumbing system using valve (PHOTO D-7) located under vehicle behind rear wheel on driver side.
5. When neither antifreeze nor water no longer runs off under vehicle, shut drain valve (PHOTO D-7).
6. Pour 100 ml of bleach in potable water tank and fill tank completely with water.
7. Turn on water pump by switching on “PUMP” (PHOTO A-6) on control panel. Indicator light will turn on.
8. Open cold water tap (lever raised) and let water run for about a minute to disinfect plumbing system. Repeat for exterior and interior showers, toilet and toilet wash-down shower spray (if installed).
9. Open hot water tap (lever lowered) and let water run for about a minute to fill water heater, and thoroughly disinfect water heater and plumbing system. Repeat for exterior and interior showers (if installed).
10. Position both bypass valves in horizontal position (PHOTO D-10.2) and leave them in this position until the next winterization. These valves are located inside water heater compartment at rear of vehicle on the right (XL Plus and XL FLEX) or on the left (MX).
11. Open hot water tap to fill water heater; it takes about five minutes to fill all 15 litres (4 US gal). When full, leave tap on for one more minute to make sure heater is full of water and free of air pockets.
12. After 4 hours, except step 10, repeat steps 2 to 11 without adding bleach. To rinse system even better, repeat steps 2 to 11 (except step 10) without adding bleach.
13. When all steps have been completed, make sure water heater is full. While pump is turned on, open safety valve (PHOTO D-11) located on water heater behind the exterior water heater access panel. If water flows out, tank is full. Don’t forget to close safety valve. Start water heater when needed using switch (PHOTO D-9) located near control panel inside vehicle. Don’t forget to open the propane tank valve.
14. Drain holding tanks. Your RV is now ready for the camping season.




AQUAGO water heater control switch  
PHOTO D-8






15 L Propane water heater switch  
PHOTO D-9



1  
2  
Drain valve and bypass valves  
PHOTO D-10

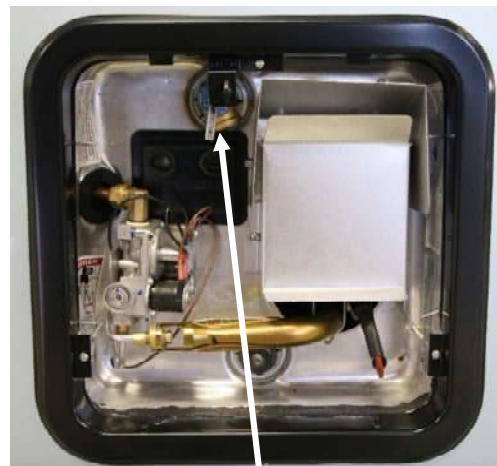

Safety valve  
PHOTO D-11

   -  **IMPORTANT:** When draining, make sure that “PUMP” switch is in “OFF” position and that green indicator light is out (PHOTO A-6).
-  **IMPORTANT:** Make sure water heater is full before turning it on. It is full when water has been running for more than five (5) minutes using “HOT” water tap.
-  Come winter, see “Winterizing Plumbing System with 15 L Propane Water Heater”, section *H. Winterizing*.

## Start-up and Disinfecting of Potable Water System - *Aquago* Propane Instant Water Heater

1. Check that water heater control switch (PHOTO D-8) located near control panel inside RV is in “OFF” position.
2. Switch off water pump using “PUMP” switch (PHOTO A-6) located on control panel. Indicator light must be out.
3. Before draining potable water tank, position RV so it leans to the rear.
4. Drain potable water tank and plumbing system using valve (PHOTO D-7) located under vehicle behind rear wheel on driver side.
5. When neither antifreeze nor water no longer runs off under vehicle, shut drain valve (PHOTO D-7).
6. Pour 100 ml of bleach in potable water tank and fill tank completely with water.
7. Turn on water pump by switching on “PUMP” (PHOTO A-6) on control panel. Indicator light will turn on.
8. Open cold water tap (lever raised) and let water run for about a minute to disinfect plumbing system. Repeat for exterior and interior showers, toilet and toilet wash-down shower spray (if installed).
9. Open hot water tap (lever lowered) and let water run for about a minute to fill water heater, and thoroughly disinfect water heater and plumbing system. Repeat for exterior and interior showers (if installed).
10. Open D valve (vertical position) (PHOTO D 15) and run about 2 litres (2 quarts) of water on ground under the vehicle.
11. After 4 hours, repeat steps 2 through 10 without adding bleach. For a better rinse, repeat steps 2 through 10 without adding bleach.
12. Insert the cartridge filter back inside the toggle lever located inside the exterior access door (PHOTO H-2)
13. Set A and B bypass valves in horizontal position (PHOTO D-10).
14. Open return line E valve (horizontal position) (PHOTO D-13).
15. Open D valve (vertical position) (PHOTO D-14) and run about 2 litres (2 quarts) of water on ground under the vehicle to fill water heater and return line.
16. Water heater and plumbing system can now be operated.
17. Drain holding tanks. Your RV is now ready for the camping season.




IMPORTANT: When draining, make sure that “PUMP” switch is in “OFF” position and that green indicator light is out ((PHOTO A-6).



Come winter, see “Aquago Propane Instant Water Heater”, section H. Winterizing.



E valve  
PHOTO D-13

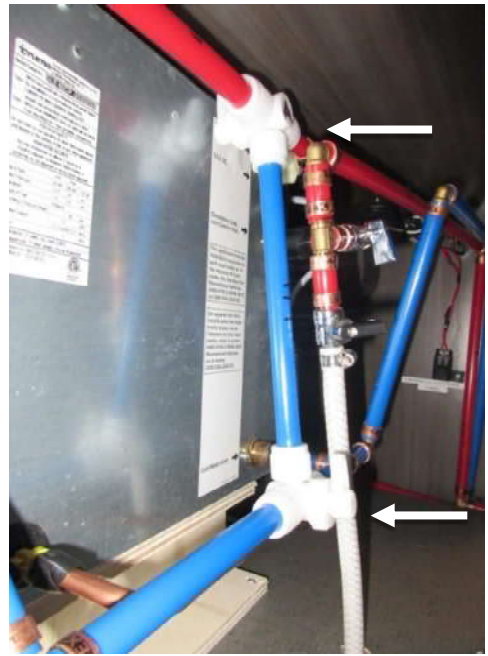

A and B bypass valves  
PHOTO D-12



D valve  
PHOTO D-14

### 3, 8 Litre Electric Water Heater (MX only)

Before turning on water heater, make sure water heater tank is full, as filling potable water tank does not automatically fill water heater. To fill water heater, open hot water tap for at least three (3) minutes until air no longer escapes. Water heater works either when RV is plugged into an outside power supply, or through the AC inverter (see “AC inverter” in C. Electricity).


Water heater is plugged into “WATER HEATER” outlet (PHOTO D-4) located in rear corner of vehicle.

To activate water heater, set “A” switch to “REDIRECT TO B SWITCH” position (PHOTO C-6), and set “B” switch to “WATER HEATER” position (PHOTO C-6). Both switches are located at front end of counter. While vehicle is plugged into a power source, this water heater can be left on as it is controlled by thermostat.

Note: If you expect to camp without services, operate water heater using AC inverter (PHOTO A-7), driving for 20 to 30 minutes before reaching your destination. This will save energy in your auxiliary batteries.

**IMPORTANT:** Make sure water heater is full before plugging water heater.

### 15 L Propane Water Heater (optional on MX; standard on XL Plus and XL FLEX)


 Before using propane water heater, read accompanying Owner’s Manual as well as instructions on screen panel located on outside rear left corner (MX) or right rear corner (XL Plus and XL FLEX) (PHOTO D-11).

This 15 l (4 US gal) capacity heater is located at rear of vehicle on the left (MX) or on the right (XL Plus and XL FLEX).

 
Before turning on water heater, check that bypass valves (PHOTO D-12.2) are in horizontal (open) position. Make sure water heater is full by opening safety valve (PHOTO D-11) located behind exterior water heater access panel. If water flows out, tank is full. Don’t forget to close safety valve.

To operate water heater, set “WATER HEATER” switch to “ON” position. This switch is located near the control panel (PHOTO D-8). Water heater can be left on throughout your camping trip, as it is controlled by thermostat.

 **IMPORTANT:** Make sure that water heater tank is full before activating water heater.

 **IMPORTANT:** It is important to change the anode inside water heater every two years.


## Aquago Propane Instant Water Heater (optional)

 **ATTENTION:** Before using *Aquago* propane water heater, read the accompanying Owner's Manual as well as instructions on exterior access panel to prevent burns or other injuries.

Before operating water heater, check the following points:

1. Bypass valves A and B are in horizontal position (PHOTO D-12.2).
2. Return line E valve is open (horizontal position) (PHOTO D-13).
3. Water heater and return line are full of water. Check that when pump switch located on control panel (PHOTO A-6) is "ON" and D valve is open (PHOTO D-14), that there is water flowing to the ground.

At beginning of season, switch the water heater at one of the 2 "ON" positions using the exterior switch behind the outside access panel (PHOTO D-15). It is recommended to use instant water heater by selecting "COMFORT" mode (first position above the "OFF" position on the inside control knob (PHOTO D-8). After 20 seconds the water will be hot. Once hot water is no longer required, turn "Water heater" control knob to "OFF" position. Repeat operation for each use of hot water.

 **IMPORTANT:** Close water heater after each hot water use by turning the control switch. This will prevent any quick limestone accumulation in small pipes of water heater system.

Limestone accumulation cannot be completely avoided; if the heater provides water at a lower temperature than when it was new, cleaning of the *Aquago* heater system must be performed by an authorized *Truma* service centre.



Aquago water heater switch

PHOTO D-15



**CAUTION:** THE TRUMA *AQUAGO* WATER HEATER IS HIGH PERFORMANCE EQUIPMENT, BUT MORE LIKELY TO FREEZE, BECAUSE IT DOESN'T HAVE THIS LARGE 15-LITRE WATER TANK THAT WILL BE THE LAST TO FREEZE IN COLD TEMPERATURES. EVEN THOUGH THE VEHICLE HAS NOT BEEN COMPLETELY WINTERIZED, IT IS RECOMMENDED TO WINTERIZE *AQUAGO* WATER HEATER AS SOON AS TEMPERATURES DIP UNDER THE FREEZING POINT.



## Simple temporary procedure to prevent freezing when using RV in case of freezing temperatures forecasts

1. Switch water heater on “ECO” position using inside control knob (PHOTO D-8).
2. In this mode, *Aquago* keeps water in water heater between 4 °C and 60 °C (39 °F and 140 °F).


In this mode, *Aquago* heater is protected against freezing, but it uses propane and 12 V power on an ongoing basis. For this reason, it is a practical solution to protect *Aquago* water heater for only one or two nights. To satisfactorily protect water heater from freezing for a longer period, the “Partial winterizing of plumbing system with *Aquago* propane instant water heater” procedure (see section *H. Winterization*) is necessary.

## **Water Pump**

Electric water pump is similar to those found in larger motor homes and RVs.

Pump switch: To activate water pump, use “PUMP” switch (PHOTO A-6) on control panel located to the rear in sliding door opening. When pump is “ON”, indicator light is on (PHOTO A-6).

 
Water pump will start automatically every time a hot or cold-water tap is turned on, or cassette or fixed toilet is flushed.


 It is normal for pump to rumble when in use.

If your potable water tank runs dry, pump will keep on running, which will cause damage to pump. It is necessary therefore to regularly check how much water remains in tank by pressing “FRESH” button on control panel (PHOTO A-6).

“PUMP” switch ((PHOTO A-6) lets you stop pump when tank runs dry, or when not in use.

For safety reasons (and to prevent any damage) when not in use, it is recommended to shut down pump using “PUMP” switch on control panel (PHOTO A-6).

  **IMPORTANT:** Never run water pump with an empty tank.

 **IMPORTANT:** When vehicle is plugged directly into water system, shut off water pump (see Control Panel (PHOTO A-6).

## **Interior Shower**


### XL Plus

To use shower, unlock bench by pushing down button located on left side of hand shower panel under bench (PHOTO D-17/PHOTO D-16). Lift backrest (PHOTO D-19) then raise seat (PHOTO D-22). The procedure is the same to use the toilet.

To use the shower, lift up floor front section (PHOTO D-20) to free required shower floor space (PHOTO D-21).

Then lower both window and shower curtains; toilet and shower compartment are now completely secluded (PHOTO D-23/PHOTO D-22).

To save water, hand shower is equipped with water shut-off button.

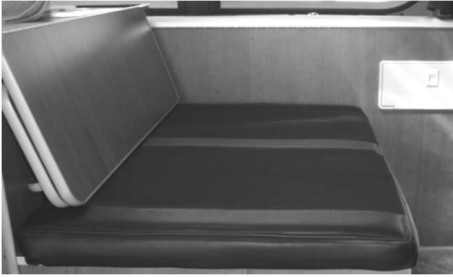

Bench and hand shower panel  
PHOTO D-17



Button to unlock bench  
PHOTO D-16



Raise bench  
PHOTO D-19



PHOTO D-18



Raise this floor  
PHOTO D-20



Floor raised  
PHOTO D-21





Shower curtains  
PHOTO D-23



Secluded shower compartment  
PHOTO D-22

## XL FLEX

To use shower in XL FLEX, position shower curtain (PHOTO D-25/PHOTO D-24) all around shower. Then use corner sink telescopic hand shower.

To save water, hand shower is equipped with a water shut-off button.



Shower cabinet  
PHOTO D-25



Shower cabinet  
PHOTO D-24

## **Toilets**

### Portable Chemical Toilet (optional)



Read the supplied manufacturer's Owner's Manual before using the portable toilet.



CAUTION: NEVER DRIVE AWAY UNLESS TOILET IS STORED AWAY.



CAUTION: NEVER DRIVE WHILE PASSENGER USING TOILET.

Before using portable toilet (PHOTO D-26), make sure a sufficient amount of liquid toilet deodorizer and a bit of water covers bottom of waste tank. Make sure that upper clean water tank is full for toilet flusher.

To use toilet, raise cover and open holding tank valve by pulling lever at front.

To flush toilet after use, pump bellows in top corner of toilet. Close holding tank valve after use by pushing lever back in place and close cover.



**ATTENTION:** IT IS IMPERATIVE THAT BOWL BE EMPTY AND HOLDING TANK VALVE LEVER BE CLOSED BEFORE DISASSEMBLING WASTE TANK FROM TOP WATER TANK.

To empty toilet waste tank when full, disassemble toilet tanks.

Empty waste tank into RV dump station or home toilet. Point Pour-Out Spout upwards and remove cap. Align spout with drain hole and press "VENT" to let air penetrate and ease draining.

After each draining, add a sufficient amount of liquid toilet deodorizer and a bit of water to cover bottom of waste tank.



Chemical toilet  
PHOTO D-26

### Cassette toilet (MX)



Read supplied manufacturer's Owner's Manual before using cassette toilet.



**CAUTION:** NEVER DRIVE WHILE PASSENGER USING TOILET.

Before using cassette toilet, make sure to have sufficient amount of liquid toilet deodorizer and a bit of water to cover bottom of cassette.

Before using toilet, open cover and pull valve blade lever (PHOTO D-28.1).

To flush toilet after use, activate pump (PHOTO A-6). Press small blue button a few seconds to flush (PHOTO D-28.3). Close valve blade by pushing lever (PHOTO D-28.1) and close cover.




**CAUTION:** IT IS IMPERATIVE THAT BOWL BE EMPTY AND HOLDING TANK VALVE LEVER BE CLOSED BEFORE REMOVING CASSETTE FROM TOILET.

To empty cassette when red level indicator lights up (PHOTO D-28.2), open access door, unlock (PHOTO D-29) and remove cassette from toilet.

In RV dump station or home toilet:

1. Turn emptying spout upwards and remove cap from spout (PHOTO D-27);
2. Align spout with drain hole and press cassette "VENT" button (PHOTO D-31) to let air penetrate and ease draining;
3. Empty contents of cassette waste tank.

After each draining, add sufficient amount of liquid toilet deodorizer and a bit of water to cover bottom of waste tank.

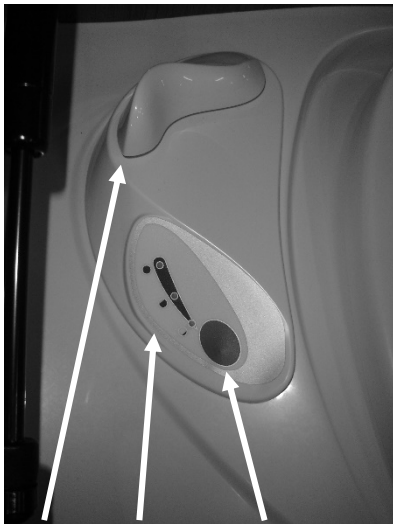

1 2 3  
Using cassette toilet  
PHOTO D-28



Spout upwards  
PHOTO D-27




Cassette unlock  
PHOTO D-29

It is possible to shut off water supply to cassette toilet. Valve is located in cupboard under sink (PHOTO D-30). This valve is also used to control rinse water flow of toilet.



Cassette toilet valve under sink  
PHOTO D-30

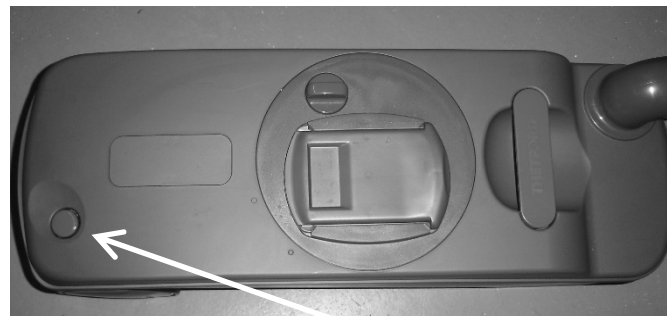

"Vent" button  
PHOTO D-31

### Permanent Toilet with Black Water Tank (XL Plus)

To access toilet, unlock bench by pushing down button located on left side of hand shower panel under bench (PHOTO D-17/PHOTO D-16). Lift backrest (PHOTO D-19) then raise seat (PHOTO D-18).

If only toilet is used, it is not necessary to raise front part of floor (PHOTO D-20).

After using toilet, use hand lever (PHOTO D-33) located at rear of toilet. Press lever halfway to add water in bowl. To flush with water, press all the way. When released, drain lever returns to its original position.

To use hand spray, press hand shower button (PHOTO D-32) while pressing toilet hand lever.

It is possible to shut off water supply to toilet. Valve is located in cupboard under sink (PHOTO D-30). This valve is also used to control rinse water flow of toilet.



Hand spray lever  
PHOTO D-32




Flushing lever  
PHOTO D-33

### Permanent Toilet with black water tank (XL FLEX)

After using toilet, use hand lever (PHOTO D-33) located at rear of toilet. Press lever halfway to add water in bowl. To flush with water, press all the way. When released, drain lever returns to its original position.

To use hand spray, press hand spray button (PHOTO D-32) while pressing toilet hand lever.

It is possible to shut off water supply to toilet. Valve is located in cupboard under sink (PHOTO D-34). This valve is also used to control rinse water flow of toilet.

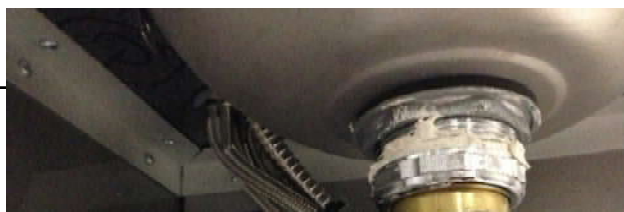

## Dumping of Holding Tanks

Grey water tank has a capacity of 46 litres (12.1 US gal) (MX) and 92 litres (24.3 U.S. gal) (XL Plus and XL FLEX). If connected permanently to sewage system, leave wastewater valve (PHOTO D-35.1) open permanently if only for greywater (MX); for this version, black water accumulates in toilet cassette.

For XL Plus and XL FLEX versions that have a permanent toilet with 46 litre (12.1 US gal) black water tank under vehicle, let wastewater accumulate in holding tanks (grey and black water) and open valves from time to time as required, always winding up with grey water to flush out drain hose.


Note: "BLACK" (XL Plus and XL FLEX: black water) and "GREY" (grey water) level indicators are on control panel located near sliding door (PHOTO A-6).

## Draining Wastewaters (MX)


1. Lift end of rear driver-side running board locker and secure using holding bar (PHOTO D-40.4).
2. Take flexible hose located in capped tube on the right next to wastewater outlet (PHOTO D-37), connect to sewage connector (PHOTO D-35.2) and connect other end directly to dumping station (PHOTO D-42) or using adapter (not supplied) (PHOTO D-41).
3. Open wastewater valve (PHOTO D-35.1).
4. Once flow stops, lift hose connected to valve all the way to dumping station to empty hose.
5. Once drained, shut wastewater valve.
6. Disconnect flexible hose from RV.
7. Rinse flexible hose using dumping station rinsing water.
8. Store flexible hose and close all caps.
9. Close running board locker.



Dumping station connection  
PHOTO D-36

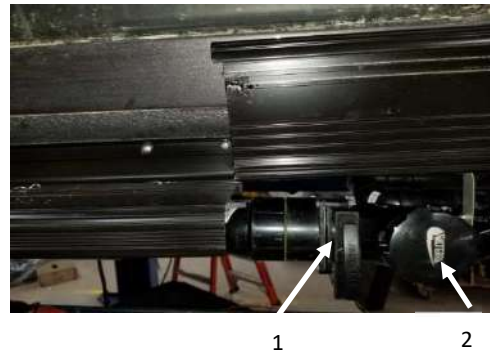

Wastewater drainage  
PHOTO D-35

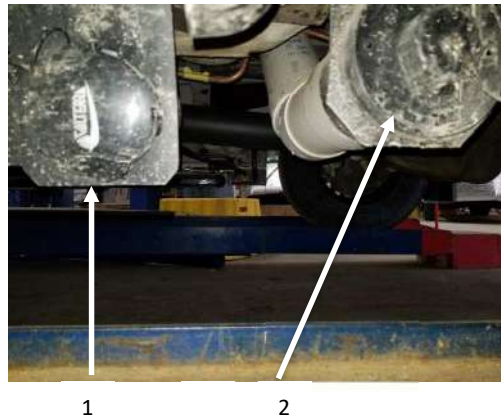

Wastewater drainage  
PHOTO D-37


 **IMPORTANT:** Dump holding tanks only in designated areas.

### Draining Wastewaters (XL Plus and XLFLEX)

1. Lift end of rear driver-side running board locker and secure using holding bar (PHOTO D-40.4).
2. Point wastewater swivel fitting downwards (PHOTO D-39).
3. Take flexible hose located in tube at rear to the right (XL Plus) or to the left (XL FLEX) (under RV) (PHOTO D-38), connect to sewage connector (PHOTO D-35.2) and connect other end directly to dumping station (PHOTO D-42) or using adapter (not supplied) (PHOTO D-41).
4. Open black water valve (PHOTO D-40.1), and when empty, open grey water valve (PHOTO D-40.3).
5. Once flow stops, lift hose connected to valve all the way to dumping station to empty hose.
6. Shut drain valves and run cold water in sink for about 80 seconds to rinse sewer outlet. Then, open grey water valve (PHOTO D-40.3), and repeat step 5.
7. Once drained, close wastewater valve.
8. Disconnect flexible hose from RV.
9. Rinse flexible hose using dumping station rinsing water.
10. Store flexible hose and close all caps
11. Close running board locker.





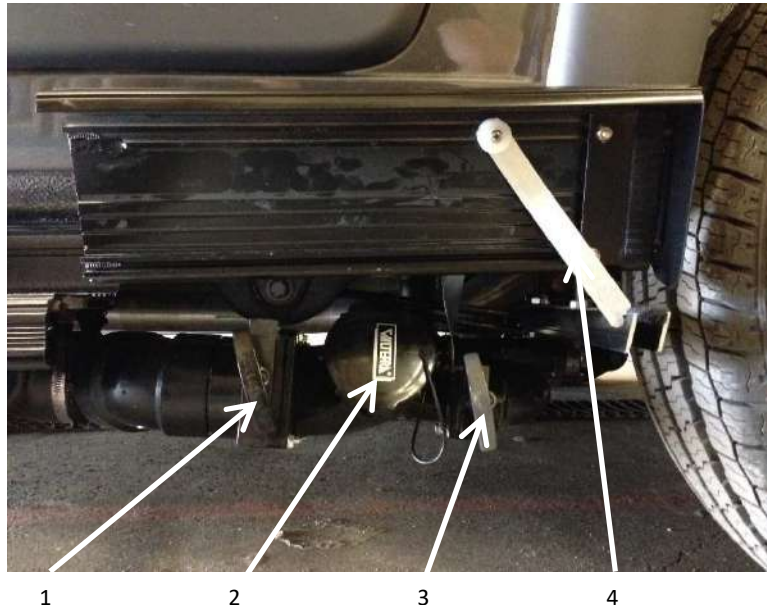

Wastewater drainage

PHOTO D-40



Dumping station connection  
(direct)

PHOTO D-42



Dumping station connection  
(using adapter)

PHOTO D-41



IMPORTANT: Dump holding tanks only in designated areas.

## E. UTILITIES

## Lighting

### Front Dome Light

Dome lights in front overhead console (PHOTO E-2) are turned on and off when doors are opened and closed and powered by the Dodge Ram ProMaster battery.

Reading lights above driver and passenger seats (PHOTO E-1) are powered by auxiliary batteries and are lit using switches on inverter panel (PHOTO A-8).



Dome  
PHOTO E-2

 
 
 


Reading lights  
PHOTO E-1

### Light fixtures

Except for dome lights activated by the opening of doors, each light section is individually switched and powered by auxiliary batteries.

Even if LED bulbs require very little auxiliary battery power, they should be used sparingly when wilderness camping for several days.

-  Dome light (PHOTO E-2) powered by vehicle battery switches off automatically after about 20 minutes if door is left ajar.
-  To switch off interior lights when leaving doors open, use dome override button.
-  For additional information on lighting system, read manufacturer's Owner's Manual.

## Propane

**MX:** Propane tank is located in centre of RV. Valve access is through driver side running board locker near waste water outlet (PHOTO E-3). To keep locker open, lower support located under step.

**XL Plus:** Propane tank is located in centre of RV. Valve access is through passenger side running board locker behind sliding step (PHOTO E-4). To keep locker open, lower support located under step.




**XL Flex:** Propane tank is located in the centre of RV. Valve access is through passenger side running board locker just behind sliding step (PHOTO E-4). To keep locker open, lower support located under step.



Running board propane valves, passenger side  
(XL Plus and XL FLEX)

PHOTO E-4

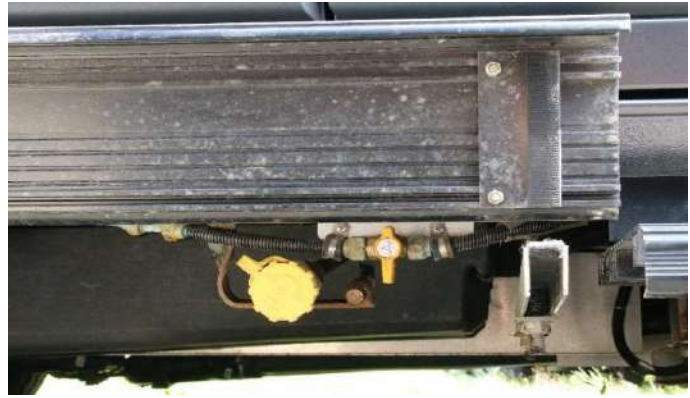

Running board propane valves, driver side (MX)

PHOTO E-3

For information only, valves associated with propane tank are the fill valve (PHOTO E-51), the overpressure valve (PHOTO E-5.2) and the propane system supply valve (PHOTO E-5.3).

Propane “LP GAS” interior level indicator is located on control panel on left side of sliding door (PHOTO A-6).



**CAUTION:** TANK REFUELLING BY AUTHORIZED PERSONNEL ONLY.




**CAUTION:** READ CAREFULLY ALL SAFETY PRECAUTIONS IN MANUFACTURER’S OWNERS MANUALS INCLUDED WITH ALL PROPANE FUELLED EQUIPMENT



**CAUTION:** NEVER USE PROPANE STOVE:

- WHILE DRIVING.
- WHEN SIDE PRIVACY CURTAIN IS INSTALLED.
- AS SPACE HEATER.

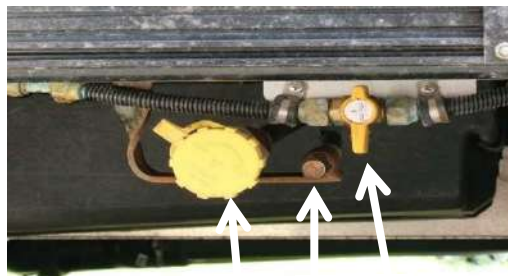


Valves for propane tank  
PHOTO E-5



**ATTENTION:** ALWAYS CLOSE PROPANE VALVE (PHOTO E-5.3) WHEN RV IS INSIDE GARAGE OR FERRY.

## Propane stove (optional on MX; standard on XL Plus and XL FLEX)

  Before using propane stove (PHOTO E-6), read supplied manufacturer's Owner's Manual as well as Propane section (See Propane).

To use stove, press burner control and turn clockwise to feed burner, then press centre button to ignite. Release burner control after two seconds (PHOTO E-7). If burner does not ignite, close burner control, and then repeat steps after a while.



Propane stove  
PHOTO E-6



Stove controls  
PHOTO E-7



Other propane stove model  
PHOTO E-8



**CAUTION:** NEVER USE STOVE IF DUO PLISSE IS EXTENDED. IT IS IMPORTANT TO ALWAYS OPEN WINDOW BEHIND PROPANE STOVE AND RUN FAN ROTATING OUTWARDS IN ("OUT") MODE (SEE "VARIABLE SPEED ROOF FAN", SECTION *F. EXTERIOR*).



**CAUTION:** NEVER USE PROPANE STOVE AS SPACE HEATER.

## **Microwave oven**



Read supplied manufacturer's Owner's Manual before using microwave oven.

With electric water heater: to use microwave, set upper “A” switch to position where arrow points to lower switch (PHOTO D-5), and lower “B” switch (PHOTO D-5) to “MICROWAVE” position. Both switches are located to your left in sliding door opening.

If vehicle is equipped with electric water heater, to use microwave oven, set upper “A” switch to position where arrow points to lower switch (PHOTO D-5), and lower “B” switch (PHOTO C-6) to “MICROWAVE” position. Switches are located at end of counter (MX) or on right of RV sliding door (XL Plus and XL FLEX).

 
If vehicle is equipped with propane water heater, to use the microwave oven, set “OUTLET 1 / MICROWAVE” switch to “MICROWAVE” position. Switch is located at end of counter (MX), between spice rack and counter (XL Plus and XL FLEX).


## Fridge


 Read the supplied manufacturer’s Owner’s Manual before using fridge.


Fridge thermostat/switch is located inside fridge. Ideal temperature setting is between 2 and 4. To minimize auxiliary battery discharge, readjust fridge temperature as required (less cold if freezer is empty). To turn off fridge, set thermostat to zero beyond the “click”.


To clean inside fridge, use organic or water-based products (or baking soda) so as to prevent damage to plastic interior.

 Before leaving, make sure that fridge door is closed properly using metal latch (PHOTO E-9).

 **AVOID FLOODING:** When thermostat is set to zero, freezer section releases water in freezer pan. Place towel in fridge to absorb any overflow.

 After cleaning, leave fridge door ajar to allow fridge to dry completely.

 You may want to defrost freezer two or three times during the summer to moderate auxiliary battery discharge.

 During winter storage, consider leaving fridge door ajar for ventilation.



Refrigerator door metal latch

## Cabinet Panels

PHOTO E-9

A push-button latch secures all cabinet panels. Simply push button to lock or unlock (PHOTO E-10).



Push-button  
PHOTO E-10

Note: All cabinet panels are removable by lifting the catch located at the tip of each hinge.

- ⚠️ Never drive away unless all panels and drawers are locked. All push buttons should be pushed in.

## Pull-out Table (Standard on MX)

### Opening

1. Loosen wing-nut in cupboard under the table.
2. Push out on black lever (PHOTO E-11).
3. Pull front of table (PHOTO E-12) until rear of table pulls clear of backrest.
4. To use as table, pivot rear of table towards front of vehicle (PHOTO E-14).
5. To set height, open sliding panel (PHOTO E-13) while holding table at desired height, and tighten wing-nut.



Black steel lever  
PHOTO E-11



Pull front of table  
PHOTO E-12

### Closing

To close rear table:

1. Loosen wing-nut. Lift table, swing unsupported side of table towards storage area (PHOTO E-12).
2. Swing rest of table until table locks in place.
3. Avoid vibrations by tightening wing-nut.

- ⚠️ Never climb on tables: they were designed solely for meals or games.



**CAUTION: NEVER DRIVE AWAY UNLESS ALL TABLES ARE STORED AND LOCKED IN PLACE.**





Pivot rear of table  
PHOTO E-14



Height adjustment  
PHOTO E-13

## Portable Table

Table components are stored either against cabinet behind driver seat (MX previous versions) (PHOTO E-15), in storage compartment above driver (MX) (XL Plus) (PHOTO E-17) or between front seat and shower cabinet wall (XL FLEX) (PHOTO E-16).



Table behind driver seat (MX)  
PHOTO E-15



Table above driver (XL Plus)  
PHOTO E-17

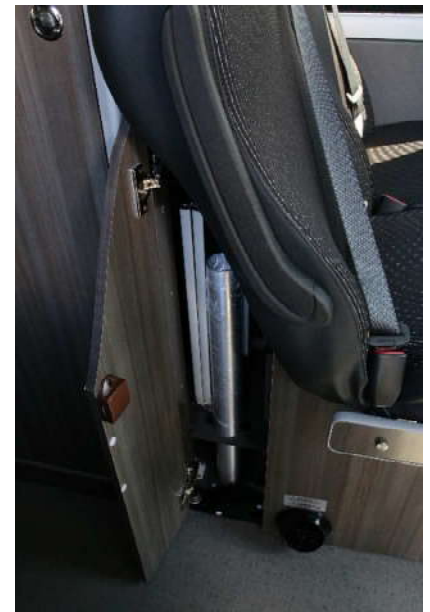


Table between backrest and wall of front  
passenger seats (XL FLEX)  
PHOTO E-16

### Opening

1. Remove base, and set in desired location.

2. Insert pedestal, stored either against cassette toilet cabinet (MX) or in table storage compartment (XL Plus and XL FLEX).
3. Remove tabletop from storage and set on pedestal in one of two positions for either large (PHOTO E-19) or small table (PHOTO E-18).



Large table  
PHOTO E-19



Small table  
PHOTO E-18

### Inside table, XL Plus and XL Flex

In the XL Plus it is stored above the driver and in the XL Flex behind the backrest of the front passenger seats. Pull out table, release leg (PHOTO E-22) and extend the telescopic part of the leg until it clicks, then hook the table onto the rail on the wall (PHOTO E-21). To increase table area, turn the bottom area left or right (PHOTO E-20).



PHOTO E-21



PHOTO E-20



PHOTO E-22

To use it outside, you need an optional adapter rail (PHOTO E-24) to be able to secure it on the sliding door (PHOTO E-23).

optional adapter rail (PHOTO



PHOTO E-24



PHOTO E-23

### Closing

To store table, repeat above operations in reverse order. Make sure all components are securely stored away.



Never climb on tables: they were designed solely for meals or games.




**CAUTION:** NEVER DRIVE AWAY UNLESS ALL TABLES ARE STORED AND LOCKED IN PLACE.

## Manual Bench-bed (standard on MX and XL Plus) (optional on XL FLEX)

### Opening


To transform bench-bed into bed:

1. Grab strap in centre of seat (PHOTO E-26.1) and pull knob (PHOTO E-26.2) to release seat.
2. With both hands, using front strap, lift seat 90° (PHOTO E-26), and while holding backrest strap, support it until lowered into horizontal position.
3. Holding up strap with one hand, reach underneath for centre latch (PHOTO E-25.1), unlock and unfold leg.

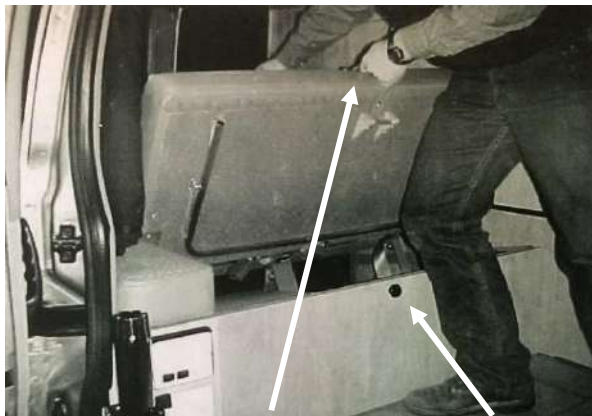

1  
2  
Opening bench-bed

PHOTO E-26

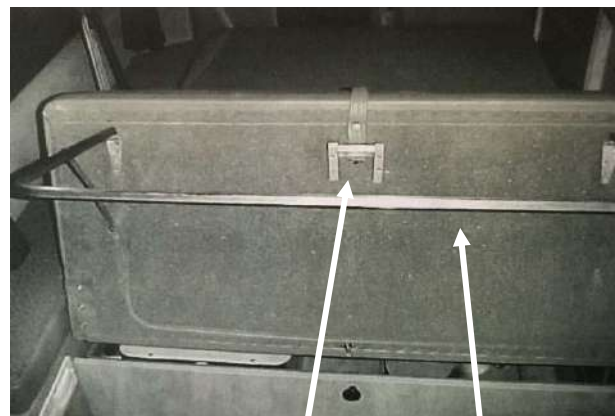

1  
2  
Open leg  
PHOTO E-25

4. Lock leg in open position (PHOTO E-25.2).
5. Once bed is fully unfolded, make sure leg is set and locked before lowering bed (PHOTO E-27) on floor.





Open bed  
PHOTO E-27


### Closing

To convert bench-bed to bench:

1. Pull strap upwards (PHOTO E-26.1) to bring cushion in vertical position.
2. Close leg against cushion and lock in position.
3. Support the cushion using your thigh (PHOTO E-26.2).
4. While holding seat with front strap using one hand (PHOTO E-26.1) to control lowering of seat, raise backrest by pulling rear strap forward using other hand.

 **CAUTION:** DURING THIS OPERATION, HOLD ON TO BOTH STRAPS.

5. Make sure bench-bed is locked. If required, free seatbelts from centre of bench (PHOTO E-28).

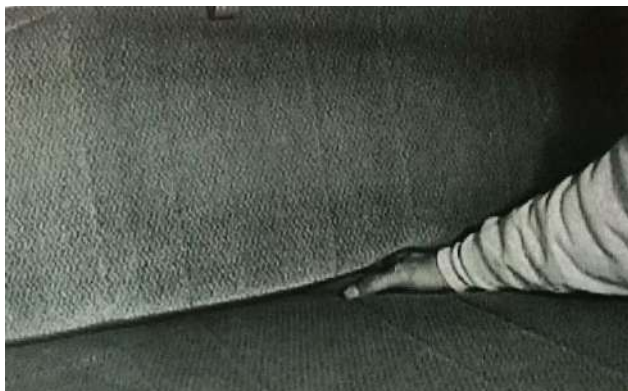

Access to bench belt buckles  
PHOTO E-28

## Electric Bench-bed (optional on MX, XL Plus and XL FLEX)

### Opening

To convert electric bench-bed into bed:

1. Make sure nothing interferes with electric bench-bed movement.
2. Press bottom of switch (PHOTO E-30) located on end of upper cabinet in sliding door opening (MX, XL Plus) (PHOTO A-1). The few seconds delay before unfolding is normal (PHOTO E-29).
3. Make sure that bed is completely unfolded before releasing switch (PHOTO E-31).

To access storage under front of bench by lifting seat cushion, press bottom of bench-bed switch for a few seconds, but without allowing the seat to start unfolding (PHOTO E-29). Holding button allows unlocking and lifting of seat to provide access below. When finished, press top of switch to lock seat back in position.



**CAUTION:** MAKE SURE NOTHING INTERFERES WITH ELECTRIC BENCH-BED MOVEMENTS.



Electric bench-bed switch  
PHOTO E-30



Electric bench-bed in action  
PHOTO E-29



Unfolded electric bench-bed  
PHOTO E-31

### Closing

To convert electric bench-bed into bench:

1. Make sure nothing interferes with electric bench-bed movement.
2. Press top of switch (PHOTO E-30) located on end of upper cabinet in sliding door opening (MX, XL Plus) (PHOTO A-1). Once bench is up, hold the switch five seconds longer to ensure bench is locked in position. If switch is released too quickly, front of bench could prop up in an accident.



**CAUTION:** MAKE SURE NOTHING INTERFERES WITH ELECTRIC BENCH-BED MOVEMENTS.



**CAUTION:** MAKE SURE BENCH IS WELL LOCKED BY HOLDING SWITCH FOR FIVE (5) SECONDS AFTER BENCH-BED RETURNS TO BENCH POSITION. THIS WILL PREVENT BENCH SEAT FROM PROPPING UP IN AN ACCIDENT.

### Storage Area under Bench-Bed

Under bench-bed storage area is accessible from interior or rear of RV. Access bench-bed storage area from inside by lifting seat or by opening panel in front of bench-bed (PHOTO E-32). A light, a power outlet and a 12-volt outlet are located in storage space under seat (PHOTO E-34).



Panel in front of bench-bed (open)  
PHOTO E-32



Storage under bench-bed  
PHOTO E-33



Utilities under bench-bed  
PHOTO E-34

### **Height Adjustable Bed (XL FLEX)**

Use either one of two switches to operate adjustable bed. One is located right of spice rack next to hanging locker (PHOTO E-35). The other is located on the right at the rear (PHOTO E-36).

It is possible to sleep on the bed, at any desired height. However, it is important to never adjust height while bed holds a person or an animal.



Adjustable bed switch  
PHOTO E-35



Adjustable bed switch, located at the rear  
PHOTO E-36

To raise adjustable bed, press and hold top of either switch, and release at desired height.

To access raised bed, use step that unfolds from divider in front of cargo area under bed (PHOTO E-37). Unlock panel by pressing both push buttons, lift and unfold second panel from inside step (PHOTO E-39.1/ PHOTO E-39.2). Lock bracket (PHOTO E-39.3) to secure second panel in open position and set down to create step for access to bed (PHOTO E-38).

To lower adjustable bed, press and hold bottom of either switch, and release at desired height.



Divider  
PHOTO E-37



Bed access step  
PHOTO E-38



Installation of step to access adjustable bed

PHOTO E-39



**CAUTION:** NEVER ADJUST HEIGHT OF BED HOLDING A PERSON OR AN ANIMAL.



**CAUTION:** RESTRAINTS ARE IN PLACE TO PREVENT POSITIONING BED TOO LOW OR TOO HIGH. HOWEVER, IT IS IMPORTANT TO ENSURE THAT NO OBJECTS (ON BED OR IN CARGO AREA) INTERFERE WITH NORMAL BED MOVEMENT.



**CAUTION:** SHOULD OBJECTS INTERFERE WITH NORMAL BED MOVEMENT, IT IS THE RESPONSIBILITY OF OPERATOR TO STOP BED AT APPROPRIATE HEIGHT.

### Storage Area under Adjustable Bed

In storage area under adjustable bed, ground anchors are available to secure stored objects (PHOTO E-40).

You can change available storage space by raising or lowering adjustable bed as required.



Adjustable bed also carries a light in cargo space. This light can be turned on by either of two switches. One is located near hanging locker on right side (PHOTO E-42). The other is located on right rear wall (PHOTO E-41).

🔊 Don't forget to turn off light under bed to avoid draining auxiliary batteries.



Ground anchors

PHOTO E-40

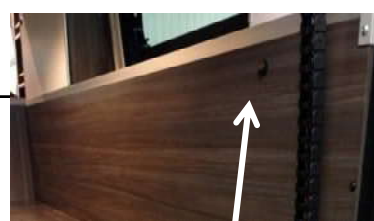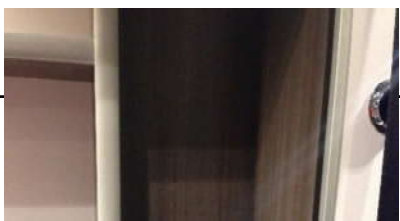



### Extra bed below adjustable bed (optional on XL FLEX)

To setup bed, raise adjustable bed high enough to allow installation of extra bed underneath. Position all four bed support boards on side storage under adjustable bed. Then place bed mattress on support boards.

To remove removable bed, apply installation steps above in reverse order.



**CAUTION:** RESTRAINTS ARE IN PLACE TO PREVENT POSITIONING BED TOO LOW OR TOO HIGH. HOWEVER, IT IS IMPORTANT TO ENSURE THAT NO OBJECTS (ON BED OR IN CARGO AREA) INTERFERE WITH NORMAL BED MOVEMENT.



**CAUTION:** SHOULD OBJECTS INTERFERE WITH NORMAL BED MOVEMENT, IT IS THE RESPONSIBILITY OF OPERATOR TO STOP BED AT APPROPRIATE HEIGHT.

### **“U”-shaped Bench (optional on XL Plus and XL FLEX)**

“U”-shaped bench also converts into bed (PHOTO E-43).

#### Bed Conversion

Release straps holding backrests on each side. Take driver side backrest and lay it on floor between the two benches (PHOTO E-45). Then take passenger side backrest and position it between both benches as to cover passageway and form double bed (PHOTO E-44).



"U"-shaped bench  
PHOTO E-43



Lay backrest between seats  
PHOTO E-45



Double bed  
PHOTO E-44

### Bench Conversion

Take centre cushion from bed and place it as backrest for bench on passenger side. Then take cushion from floor and place it as backrest for bench on driver side. Secure both backrests using straps provided.



**CAUTION:** NEVER DRIVE AWAY UNLESS BACKRESTS ARE SECURED USING SUPPLIED STRAPS.



**CAUTION:** NEVER DRIVE WITH PASSENGERS SEATED ON THE "U" SHAPED BENCH AS THERE ARE NO SAFETY BELTS.

### Storage under "U"-shaped Bench

Storage in both side benches is accessible through its sliding panels.

Passenger side bench also includes a motor to raise bench cushion (PHOTO E-47) simply by pressing switch located at C pillar on passenger side (PHOTO E-46). This also provides access to storage area under bench. It is important to remove backrest before raising cushion.

Storage area under rear bench is accessible from inside by a pivoting panel (PHOTO E-48) or through rear doors.





Motor under bench  
PHOTO E-47



Bench cushion switch  
PHOTO E-46



Access to storage area under bench through pivoting and  
sliding panels  
PHOTO E-48

### **Front Single Bed (optional)**

To install front single bed, move both front seats as far back as possible. Set up portable table as half table between the two seats (see section “Portable Table”). Use shorter aluminum pedestal supplied with front bed (PHOTO E-49). Then set right side rectangular cushion on driver side window frame and on table in centre (PHOTO E-50). Repeat with “U”-shaped cushion on left side (PHOTO E-51).



Front single bed aluminum pedestal

PHOTO E-49



Table setup for front single bed

PHOTO E-50



Front single bed (with curtains)

PHOTO E-51



Make sure cushions are well supported by window frames and centre table.



**CAUTION:** MAKE SURE BOTH DOORS ARE LOCKED, AS OPENING DOORS WHILE BED IS SET CAN CAUSE SERIOUS INJURY.

## Safety Belts and Anchor Loops for Child Seats on Rear Passenger Seats

The passenger seats and the bench bed have their own safety belts. When driving, all passengers must fasten their safety belts.

### Passenger seats

To safely place a child seat on a passenger seat, use the safety belt (PHOTO E-53) and one of the available anchors on the back of the seat (PHOTO E-52).



PHOTO E-53

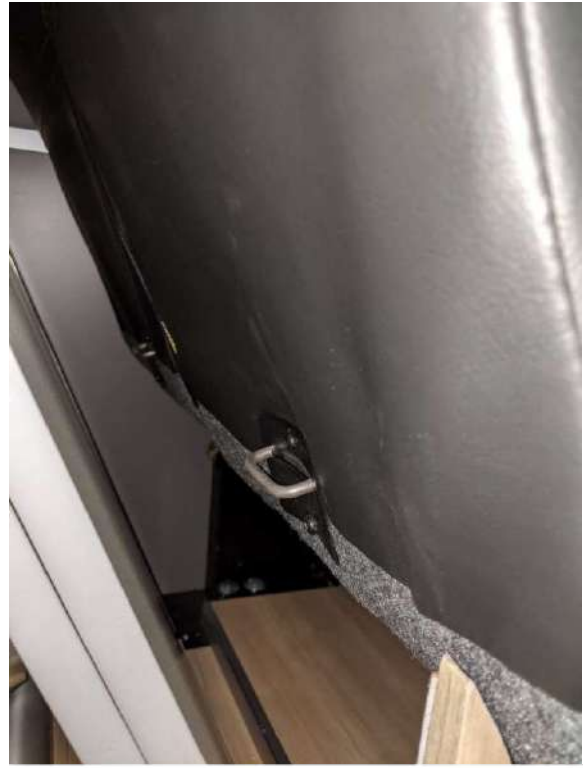


PHOTO E-52

#### Child Seat

To safely place a child seat on the bench bed, use the safety belt (PHOTO E-54), one or more of the available anchor loops coming through down between the seat cushion and the backrest and the black flat anchor located behind the backrest (PHOTO E-55).



PHOTO E-54



Flat anchor located

PHOTO E-55



## Wardrobe

On MX and XL Plus versions, access to wardrobe is at end of counter at rear of vehicle (PHOTO E-56).  
On XL FLEX, access to wardrobe is by sliding panel behind counter on right side of adjustable bed (PHOTO E-57).




Wardrobe (MX and XL Plus)  
PHOTO E-56



Wardrobe (XL FLEX)  
PHOTO E-57

## Swivelling Seat

To rotate seat (PHOTO E-59), raise backrest to maximum, move seat forward halfway, release swivel mechanism using handle located on outside front corner of seat (molded into plastic seat base) (PHOTO E-58) and rotate seat first towards the door, then to desired position.

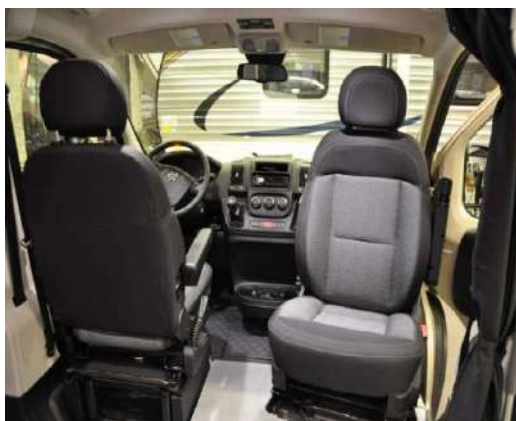

Swivelling Seat  
PHOTO E-59



Front seat pivoting mechanism  
PHOTO E-58



**CAUTION: NEVER DRIVE AWAY UNLESS FRONT SEATS ARE LOCKED IN FACING FORWARD.**

## Privacy Curtains

Privacy curtains play the same role in RV as they do at home: provide privacy at night, and protection from daytime light and heat.

Curtains are of three types: duo plisse in windows, some on sliding tracks like divider and rear door curtains, and others with snap-fasteners for windshield and fan which must be rolled up before driving away. To use duo plisse, pull top down for curtain; for screen, pull bottom up (PHOTO E-60).



Duo plisse half curtain half screen

PHOTO E-60



**CAUTION:** TO AVOID DAMAGING DUO PLISSE WHEN OPERATING FAN, MAKE SURE WINDOW IS OPEN AS WELL AS PART OF SCREEN TO ALLOW AIR CIRCULATION.



**CAUTION:** HEAVY RAIN CAN DAMAGE DUO PLISSE IF WINDOW IS LEFT WIDE OPEN.



**ATTENTION:** NEVER DRIVE AWAY UNLESS ALL WINDOWS ARE FREE OF CURTAINS: CLOSED CURTAINS HAMPER VISIBILITY AND LACK OF VISION COULD CAUSE AN ACCIDENT.



**CAUTION:** NEVER USE STOVE WITH DUO PLISSE CURTAIN OVER SIDE WINDOW.

## Gasoline Heater

With a 7,950 BTU or 13,000 BTU capacity, heating system provides for year-round use of RV. First turn on front heater switch located above radio to "ON" position (PHOTO E-62/PHOTO E-61). This switch can be left "ON" permanently.



Heater switch

PHOTO E-62



Front heater switch

PHOTO E-61

**MX:** Set thermostat switch, located on right at rear of vehicle to “ON” position (PHOTO E-63) to desired temperature. Comfort zone is located between 10 and 12 O’clock positions.

**XL Plus and XL FLEX:** Set thermostat switch, located on end of microwave cabinet (PHOTO A-3/PHOTO E-64) to desired temperature. Comfort zone is located between 10 and 12 O’clock positions.



Thermostat switch (located at rear of RV)  
PHOTO E-63



Thermostat switch  
(located at end of  
cabinet along with  
other controls)

PHOTO E-64

Gasoline heating system runs continuously, or almost, temperature and fan speed depending on demand. Front heater switch must be in “ON” position for thermostat to function.

Note: Either control, thermostat or front switch, can shut down heater.



If possible, start gasoline heater once a month to avoid emptying gas supply line; should this happen, an error message may appear when starting heater.



**ATTENTION:** NEVER BLOCK HEATING SYSTEM AIR INTAKE.



**CAUTION:** NEVER BLOCK HOT AIR OUTLET INSIDE THE VEHICLE (PHOTO E-65/PHOTO E-66/PHOTO E-68).



**CAUTION:** IF VEHICLE IS INSIDE A GARAGE, ALWAYS TURN “OFF” GASOLINE HEATER USING EITHER FRONT SWITCH OR THERMOSTAT, BECAUSE SYSTEM GIVES OFF CARBON MONOXIDE (CO) WHICH CAN CAUSE FAINTING AND EVEN DEATH.



**CAUTION:** NEVER PARK RV OVER COMBUSTIBLE MATERIAL (GRASS, WEEDS), AS FURNACE EXHAUST CAN START A FIRE: THEY CAN TOUCH HOT PARTS OF HEATING SYSTEM UNDER VEHICLE AND CATCH ON FIRE (PHOTO E-67).



**CAUTION:** NEVER BLOCK EXHAUST UNDER VEHICLE (PHOTO E-67). DURING WINTER, ALWAYS CHECK IF THE EXHAUST PIPE IS NOT OBSTRUCTED BY SNOW OR ICE BEFORE TURNING ON FURNACE.





Interior hot air outlet (XL Plus)

PHOTO E-66



Interior hot air outlet (XL FLEX)

PHOTO E-68



Furnace exhaust outside vehicle

PHOTO E-67

### **TV with DVD Player (optional)**

TV with DVD player manual is included in documentation provided. It is recommended you read and follow all use, maintenance and safety instructions contained in this manual. Keep manual in a safe place for future reference and pass it on to future users of TV with DVD player.

🔊 Before using TV, it is strongly recommended that you read manufacturer's Owner's Manual supplied when purchasing RV.

### **Handling of TV and its wall mount:**

#### **Unlocking TV from Cabinet (MX and XL Plus)**

- 1- Unlock by opening both panels of TV cabinet.
- 2- Pull out TV and set in desired position.
- 3- Close both panels to avoid impacts.

Articulated extension allows watching TV from either rear or front of vehicle. It also lets you tilt screen for a better picture.



### Securing TV Inside Cabinet (MX and XL Plus)

1. Open both panels of TV cabinet.
2. Insert TV facing cabinet.
3. With both hands on sides of TV, slowly drive TV inside cabinet.
4. Once TV in position, close and lock both cabinet panels using pushbuttons (PHOTO E-70/PHOTO E-69/PHOTO E-72/PHOTO E-71).



It is important to properly set TV in cabinet before locking panels holding TV. If too much pressure is required to lock panels, check position of TV to avoid breakage.

### Unlocking Wall-mounted TV (XL FLEX)

1. Unlock by pulling release button located under TV (PHOTO E-71).
2. Hold release button while pulling TV away from wall.

### Securing Wall-mounted TV (XL Flex)

1. Make sure articulated arm is fully extended forming a straight line.
2. Screen should be parallel to extension.
3. Make sure there is no upwards or downwards tilt.
4. Gently lead TV to lock.
5. With both hands on sides of TV, gently drive TV to wall.
6. Be sure to properly insert and block TV lock button (PHOTO E-71) in articulated arm.

Always check that TV is locked by pulling on it to make sure TV locking button (PHOTO E-71) is properly inserted into articulated arm.



**ATTENTION:** NEVER DRIVE AWAY UNLESS TV IS STORED AND LOCKED.




TV secured in its storage  
PHOTO E-70



Securing strap  
PHOTO E-69



Slide door to close TV compartment  
PHOTO E-72

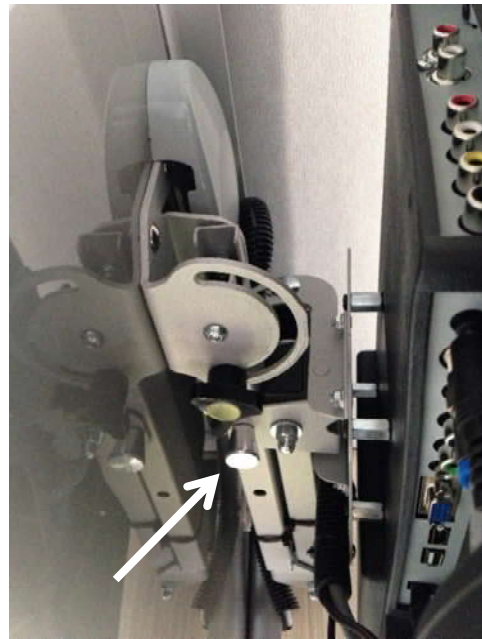

TV lock button  
PHOTO E-71

## Pop-up Roof with Top Bed (optional)

If your vehicle is equipped with the pop-up roof to add sleeping space for 2 more people, please read the following information.



PHOTO E-73

Raising the roof:

1. Pull out the ladder stored in the front overhead compartment, as it comes in 2 parts it needs to be assembled (PHOTO E-74).



PHOTO E-74



2.

3. Hook the ladder to its 2 securing points (PHOTO E-76) in the roof opening.



PHOTO E-75



PHOTO E-76

4. Separate the safety roof locks (PHOTO E-78/PHOTO E-77) left and right as you climb up on the first or second step as needed.
5. Unlock the main locks (PHOTO E-80) by turning each one of them on left and right half a turn as you climb on first or second step as needed. Pull on the ceiling handles (PHOTO E-79) to help in freeing the locks.



PHOTO E-78



PHOTO E-77



PHOTO E-80



PHOTO E-79

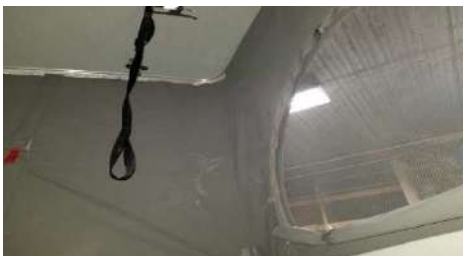


PHOTO E-82



PHOTO E-81

6. Open the vehicle sliding door to allow air coming in when you will raise the roof.
7. As you climb up the ladder, push upwards with both hands to raise the roof.
8. To reach the bed, use ladder. Lamp on a flexible neck (PHOTO E-83) is readily accessible in roof opening. Unzip canvas openings (PHOTO E-84) as needed.



PHOTO E-83



PHOTO E-84

Lowering the roof:

1. Close all windows of the canvas.
2. Open the vehicle sliding door to allow air to exit when you will lower the roof.
3. Using the 2 grips (PHOTO E-82), close the roof gently and check that the canvas folds onto itself while avoiding entangling it in the locks.
4. Place the canvas so that it frees the main locks, use the ceiling grips to help pull inward to engage the main locks left and right then turn them half a turn to lock.
5. Engage both left and right safety locks (PHOTO E-81).
6. Go outside to check if the canvas is not pinched between the rubber seal and the roof.

Disassemble the ladder and store it back in the overhead front compartment.

## **F. EXTERIOR**

### **Variable Speed Roof Vent**




Read the supplied manufacturer's Owner's Manual before using the variable speed roof vent.

#### Basic Model

To use the ventilator:

1. Open the lid by cranking the big black X handle (PHOTO F-2.1).
2. Choose the type of ventilation desired ("IN/OUT") (PHOTO F-2.4).
3. Adjust the fan speed (PHOTO F-2.2).

Note: If the fan stops working, check the 10-Amp fuse in the fuse panel (PHOTO C-3.2) and the 4 Amp fan fuse (PHOTO F-1).

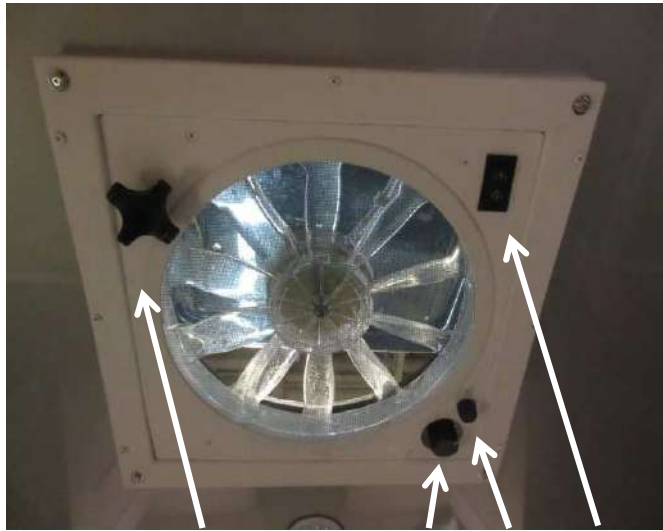

1 2 3 4


Roof vent  
PHOTO F-2



Vent fuse  
PHOTO F-1

### Automatic Model with Remote Control (optional)

 This automatic vent (optional) can be operated using the remote control and can close and shut itself off when it rains. For the different operating functions and advanced programming of the automatic vent and its remote control, refer to the instruction manual from the manufacturer.

 For this self-closing version with remote control, carefully read manufacturer's manual.

On remote control (PHOTO F-3), top button is used to turn vent on and off. Use arrows on left to adjust speed in manual mode, and arrows on right to adjust thermostat in automatic mode. When vent is on automatic, rotation speed is adjusted automatically, depending on selected temperature.

Use lower left button to open or close vent cover; use lower right button to choose fan direction ("IN/OUT").



Vent remote control  
PHOTO F-3



## Maxxfan Model with Remote Control (optional)

- Open vent using buttons on frame (PHOTO F-4) or use remote control (PHOTO F-5);
- Select the type of ventilation desired, using remote control;
- Set the desired temperature for the fan. The fan will start and stop depending on your settings of cabin temperature for your motorhome when you use AUTO mode (a green light will turn on);
- Knobs on frame can be used to control the fan;
- In automatic thermostatic mode, a green light will turn on. When outside temperature drops, it is possible that lid closes and the fan stops to keep motorhome warm as per remote control setting.



PHOTO F-4



PHOTO F-5

- ☛ In case of rain, MaxxFan will not close automatically. Its design allows it to remain open in the rain and keep cabin rain free. However, in case of heavy rain and wind coming from the back of the Safari Condo, we recommend closing it or leaving it open with fan in “OUT” mode.
- ☛ Before reversing fan rotation (“IN/OUT”), stop fan to avoid blowing fuse.
- ☛ When leaving RV, always close roof vent (except self-closing version), or leave a two-inch (5 cm) gap with fan in “OUT” mode, to avoid most rain damage.
- ☛ Never drive away unless roof vent cover is closed.

## Vent Maintenance

It is important to lubricate exterior vent switch (PHOTO F-6) once a year. This prevents dust and moisture from obstructing proper operation. Use of lubricant such as *ProLab PL100* is recommended.

Also, it is important to check vent gasket and other equipment on roof (solar panels, TV antenna, etc.). (PHOTO F-7) at least once a year to avoid the risk of water infiltration harmful to RV interior. If gasket looks dried out or cracked, it should be fixed. For more details on gasket repairs, see *G. Troubleshooting and Maintenance*.



Exterior vent switch  
PHOTO F-6



Vent gasket  
PHOTO F-7



Check vent gasket and lubricate vent external switch at least once a year.

### Air Conditioner (optional)

Air conditioner is installed on roof. To operate, breaker 4 must be in “ON” position (see Fuse panel (PHOTO C-3.1)).

There are two control buttons on air conditioner: one for air circulation, one for air conditioning (PHOTO F-8). Circulation switch has five positions: “off”, “low air” for light ventilation, “high air” for more ventilation, “low cool” for light cooling and “high cool” for more cooling. Thermostat button controls air conditioning temperature (blue indicates level of coolness) (PHOTO F-8). Two grey rotating buttons are used to control airflow (PHOTO F-10).




Do not block air intakes located on each side of air conditioner.



Since inverter does not provide sufficient power, RV must be connected to external power supply to run air conditioner.



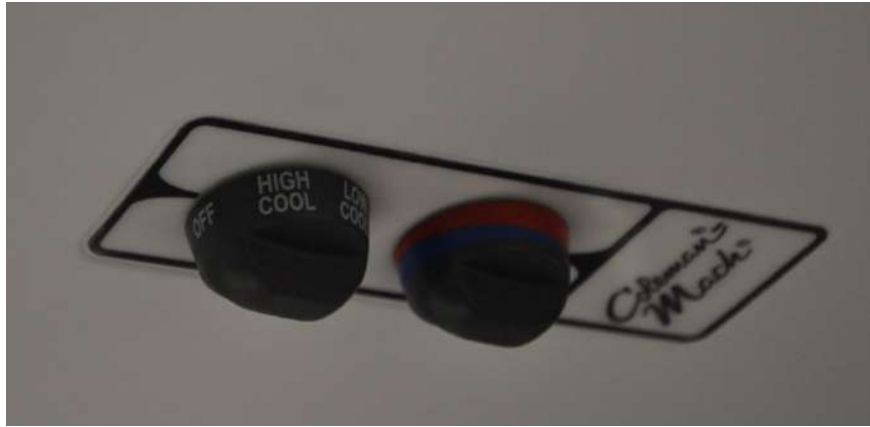

Circulation switch and thermostat  
PHOTO F-8



Air output controls  
PHOTO F-10



Control buttons on another type of air conditioner  
PHOTO F-9



Depending on use, filter maintenance is required at least once a year. For more information on filter maintenance, see manufacturer's instructions.

## Side Door Screen

Side door sliding screen is a permanent plisse installation (PHOTO F-11).



**ATTENTION:** DOOR SCREEN MUST BE STOWED BEFORE CLOSING SLIDING DOOR.

## Rear Screen

Rear screen (PHOTO F-12) is designed for protection from insects while sleeping with open doors, all the while masking luggage located under rear seat.

To install screen, start by pressing both snaps top centre, then down each side. To disassemble, carry out operations in reverse order.

Zipper provides access to door handle in an emergency or to your clothes inside when using exterior shower. Snaps at bottom of screen allow folding up for unrestricted access to storage under rear seat (PHOTO F-12).



PHOTO F-11



PHOTO F-12

## Awning



**ATTENTION:** ALWAYS CLOSE SLIDING DOOR BEFORE OPENING AWNING.

### Opening

1. Use crank stored on right of sliding door opening.
2. Close all RV doors, and using crank (PHOTO F-13.1), unfurl awning about 1, 50 m (60") (PHOTO F-13.2).
3. Loosen vertical support handles (PHOTO F-15); pull out vertical supports from open side of awning.
4. Extend vertical supports and tighten using handle (PHOTO F-14).
5. Spread out supports and set outwards at an angle (PHOTO F-17) and resume opening of awning until supports are vertical (PHOTO F-16).
6. Again, set supports outwards at an angle as in step 5, and repeat until awning is fully unfurled.
7. Pull taut.
8. Remove central support (optional on MX) from rear door or under bed and insert in centre against awning housing (PHOTO F-20/PHOTO F-19).
9. Lastly, anchor vertical supports at base using included tent hooks.



Awning opening and closing  
PHOTO F-13



Vertical supports  
PHOTO F-15



Vertical support knobs  
PHOTO F-14



Vertical supports at an angle  
PHOTO F-17



Supports are vertical  
PHOTO F-16



Central support  
PHOTO F-20



Central support  
PHOTO F-19

 
 
 
Optional LED lights can be installed in mobile awning front (PHOTO F-18). Light switch is at end of cabinet near sliding door, with various other controls (PHOTO A-1/PHOTO A-3).



LED lights in mobile front of awning (optional)  
PHOTO F-18

For added safety, you can use retaining straps between ground and awning (optional).

To clean awning, use *DAKI* or other household products.

-  Once awning is open, keep taut at all times.
-  Always anchor awning vertical supports at base.
-  In case of rain, slope awning for drainage (PHOTO F-21) by lowering rear vertical support using butterfly screw located in centre of support. In windy conditions, close awning.



Awning sloped towards rear  
PHOTO F-21



**ATTENTION:** ALWAYS CLOSE SLIDING DOOR BEFORE CLOSING AWNING.

Closing:



To close awning, simply reverse opening operations until about 1, 50 m (60") of awning is unfurled (PHOTO F-13.2).

1. Replace vertical supports (PHOTO F-15) in mobile front of awning.
2. Tighten butterfly screw of the two posts (PHOTO F-14).
3. Complete awning closure.
4. Store crank and horizontal support back to their storage area.

🔧 For additional information, refer to Owner's Manual.

## Sliding Step

Sliding step provides a wider and safer footing when stepping in and out of RV sliding door.

To slide out step, pull both handles under step (PHOTO F-22) while pulling step.

To store step, simply push it inward until you hear a "click."

**⚠ ATTENTION:** NEVER DRIVE AWAY UNLESS STEP IS STORED AND SECURED.

ELECTRICAL STEP OPTIONAL: THE STEP WILL SLIDE OUT WHEN THE ENGINE STOPS AND WILL SLIDE BACK IN WHEN THE ENGINE IS STARTED.

NOTE: IN WINTER, DISABLE THE ELECTRICAL STEP USING THE INTERIOR SWITCH ABOVE THE RADIO.



Handles under sliding step

PHOTO F-22

## Class III Trailer Hitch (standard)

🔧 Before using trailer hitch, it is recommended you read operating manual supplied with unit or trailer as well as "Towing" section in vehicle manufacturer's Owner's Manual.

Trailer hitch wiring harness is located on left side of rear compartment.

## Bike Rack (optional)

🔧 Before using bike rack, read supplied manufacturer's Owner's Manual.

Place bike rack in hitch receiver and check that pin is properly attached. Always carefully secure bikes using safety straps.



**ATTENTION:** TO PREVENT LOSS OR DAMAGE OF PIN AND STABILIZER, CHECK THAT ALL ARE WELL SECURED BEFORE DRIVING AWAY.

## G. TROUBLESHOOTING/MAINTENANCE

### Gasket Check

Over the years and through sun's action, joints between roof and mounted equipment (fan, solar panels, etc.) become dry and will crack sooner or later.

It is very important to check roof gaskets annually and to proceed with any necessary repair or to have them replaced as required (PHOTO G-1). Otherwise, significant damage may result from any water infiltration.

If a gasket is cracked or peels off, it is strongly recommended to schedule an appointment for any repairs. To DIY, remove defective part of gasket, clean surface with paint thinner or methyl alcohol and replace faulty joint using *Adseal*. Never use silicone, because it will be impossible to remove later. Use white, black or clear *Adseal*, depending on colour of vehicle. These products are available in any good hardware store.



Roof vent gasket  
PHOTO G-1

### Hot Water System Leaks

#### 3, 8 litre Electric Water Heater



🔌 Unplug water heater.

In case of leakage of water heater itself or hot water plumbing system, empty water heater (see «Winterizing Plumbing System with 3, 8 Litre Water Heater", section *H. Winterizing*). Once water heater is empty, close drain valve and safety valve; next, close hot water shut-off valve (PHOTO G-2). Take care when closing this valve; you must cut plastic fastener on valve. Once valve is closed, don't use hot water tap. Then restart pump and use cold water: hot water system is isolated and no longer operational.



Hot water shut-off valve  
PHOTO G-2


## 15 L Propane Water Heater

🔌 Close water heater using switch near control panel (PHOTO D-9).

In case of leakage of water heater itself or hot water plumbing system, empty the water heater (see “Winterizing Plumbing System with 15 Litre Propane Water heater”, section *H. Winterizing*). Once water heater is empty, close drain valve (PHOTO G-3) and safety valve (PHOTO G-4); then set lower winterizing valve upright and leave top valve in horizontal position (PHOTO G-5). Once valve is closed, don't use hot water tap. Then restart pump and use cold water: hot water system is isolated and no longer operational.



Drain valve  
PHOTO G-3

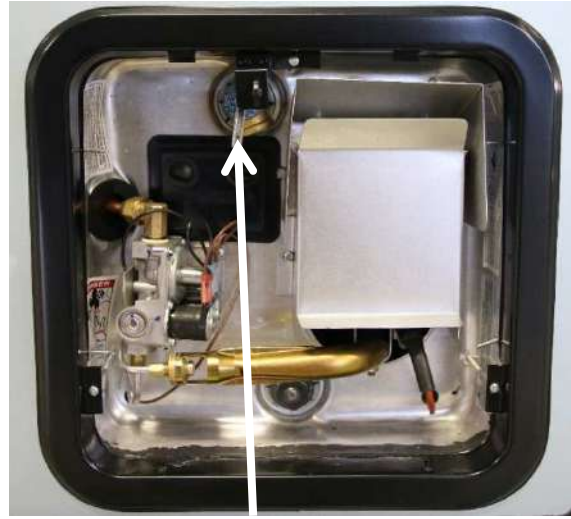

Safety valve  
PHOTO G-4



Winterizing valves  
(propane water heater)  
PHOTO G-5

### Aquago Propane Instant Water Heater (optional)

 Close water heater using control knob (PHOTO A-1/PHOTO A-3).

In case of leakage of water heater itself or hot water plumbing, empty water heater (see “Complete Plumbing System Winterizing with *Aquago* Propane Instant Water Heater” section *H. Winterizing*). Once water heater is empty, close toggle lever in exterior door (PHOTO H-1); then set lower winterizing valve upright and leave top valve in horizontal position (PHOTO G-6). Once valve is closed, don’t use hot water tap. Then restart pump and use cold water: hot water system is isolated and no longer operational.



Winterizing valves (with  
*Aquago water heater*)  
PHOTO G-6

## Toilet Leaks

It is possible to cut water supply to permanent or cassette toilet. Valve is located in cabinet under sink (MX and XL Plus) (PHOTO G-8) or under corner sink in shower (XL FLEX) (PHOTO G-7).



Water supply valve (MX and XL Plus)  
PHOTO G-8



Water supply valve (XL FLEX)  
PHOTO G-7

## Repairs

### Microwave Oven

Before remove microwave oven for repairs, follow these steps:

1. Unplug appliance from outlet located in cabinet under or behind microwave oven.
2. Open cabinet above microwave oven.
3. Remove all 4 screws above or under microwave oven.
4. Carefully remove microwave oven, gently leading the power cord through.

### Fridge

Should fridge require repairs, consult manufacturer's Owner's Manual for listing of authorized Service centres.

## Additional Information

For additional up-to-date information on maintenance of vehicle and equipment, see Safari Condo website at [www.safaricondo.com](http://www.safaricondo.com) under “My Safari Condo” tab in “*Annual Maintenance: Tips*” subsection.

## Warranty

See warranty insert attached to manual.

## H. WINTERIZING

### Winter Maintenance



Never let more than 46 cm (18 inches) of snow accumulate on roof.



It is mandatory to winterize plumbing as soon as temperature drops below freezing at night.

### Winterizing Plumbing System with 3, 8 Litre Water Heater

1. Check that water heater is unplugged from outlet in rear corner of vehicle (PHOTO D-4) and set “MICROWAVE/ WATER HEATER” switch to “MICROWAVE” position (PHOTO D-5).
2. Switch off water pump using “PUMP” switch (PHOTO A-6) located on control panel. Indicator light must be out.
3. Before draining potable water tank, position RV so it leans to the rear.
4. Drain potable water tank using drain valve (PHOTO D-7) located in rear left corner of vehicle, behind wheel well.
5. Drain water heater located in rear corner of RV by opening valve under water heater while holding safety valve (PHOTO D-6) found on side of water heater in “OPEN” position to let air in to completely empty heater. Water will run out under vehicle.
6. Once empty, close both valves.
7. Pour 16 litres (4 US gals) of -50 °C RV antifreeze in potable water tank.
8. Turn on water pump using “PUMP” switch (PHOTO A-6) on control panel. Indicator light should be on.
9. Open cold water tap (lever raised) and let about 1 L (0.25 US gal) of antifreeze run off.
10. Open hot water tap (lever lowered) to fill water heater. Water heater will be full when air no longer comes out of tap. Let tap run for 1 more minute
11. \*Portable toilet: If vehicle is equipped with portable toilet, remove it for winter, empty it, clean it and store it away from cold temperatures throughout freezing season.
12. \*Cassette toilet: If vehicle is equipped with cassette toilet connected to plumbing system, let antifreeze run for at least 30 seconds before emptying cassette.
13. \*Permanent toilet: Let antifreeze run for about 30 seconds using toilet hand lever (PHOTO D-32). If equipped with hand spray (PHOTO D-31), let antifreeze run out for a few seconds as well.
14. If equipped with rear hand shower and/or interior shower, turn on shower cold water until antifreeze runs for 15 seconds and then turn on hot water until antifreeze runs for at least 15 seconds.
15. Shut off water pump using “PUMP” switch (PHOTO A-6) on control panel. Indicator light must be out.

16. Drain holding tanks (see “Dumping of Holding Tanks”, section *D. Water*).

Come Spring, see “Start-up and Disinfecting of Potable Water System with 3, 8 Litre Electric Water Heater”, section *D. Water*.



Make sure pump switch is “OFF” position. Indicator light will be out.

 
## Winterizing Plumbing System with 15 Litre Propane Water Heater

1. Set water heater switch (PHOTO D-9) located near control panel on upper cabinet near sliding door to “OFF” position.
2. Switch off water pump using “PUMP” switch (PHOTO A-6) located on control panel. Indicator light must be out.
3. Before draining potable water tank, position RV so it leans to the rear.
4. Drain potable water tank using drain valve (PHOTO D-3) located under vehicle behind rear wheel on driver side.
5. Drain water heater using drain valve inside water heater compartment located in left rear corner of vehicle (MX) or on right side of vehicle (XL Plus et XL FLEX) (PHOTO D-10.1) while opening hot water tap to ease drainage of complete system, and opening exterior safety valve (PHOTO D-11) (see “Start-up and Disinfecting of Potable Water System with 15 L Propane Water Heater”, section *D. Water*).
6. When water no longer runs off under RV, shut tap, fresh water tank drain valve (PHOTO D-7), water heater draining valve (PHOTO D-10.1) and bypass valves located on water heater pipes (PHOTO D-10.2).

Note: Bypass valves must be in vertical position for winterizing. *Mnemonic mechanism: winteRISE = raise valve to vertical position.*

7. Pour 16 litres (4 US gals) of -50 °C RV antifreeze in potable water tank.
8. Turn on water pump using “PUMP” switch (PHOTO A-6) on control panel. Indicator light should be on.
9. Open cold water tap until antifreeze reaches sink, let it run for 20 seconds.
10. Open hot water tap until antifreeze reaches sink, let it run for 20 seconds.
11. \*Portable toilet: If vehicle is equipped with portable toilet, remove it for winter, empty it, clean it and store it away from cold temperatures throughout freezing season.
12. \*Cassette toilet: If vehicle is equipped with cassette toilet connected to plumbing system, let antifreeze run for at least 20 seconds before emptying cassette.
13. \*Permanent toilet: Let antifreeze run for about 20 seconds using toilet hand lever (PHOTO D-32). If equipped with hand spray (PHOTO D-31), let antifreeze run out for a few seconds as well.
14. If equipped with rear hand shower and/or interior shower, turn on shower cold water until antifreeze runs for 15 seconds and then turn on hot water until antifreeze runs for at least 15 seconds.
15. Shut off water pump using “PUMP” switch (PHOTO A-6) on control panel. Indicator light must be out.
16. Drain holding tanks (see “Dumping of Holding Tanks”, section *D. Water*).

\*Come Spring, see “Start-up and Disinfecting of Potable Water System with 15 L Propane Water Heater”, section *D. Water*.

 Make sure pump switch is “OFF” position. Indicator light will be out.

## Partial Plumbing System Winterizing with *Aquago* Propane Instant Water Heater



**CAUTION:** YOUR TRUMA *AQUAGO* WATER HEATER IS A VERY POWERFUL DEVICE BUT THAT RUNS A MUCH GREATER RISK OF FREEZING BECAUSE IT DOES NOT HAVE THIS BIG 15-LITRE TANK WHICH WILL BE LAST TO FREEZE IN COLD WEATHER. EVEN IF YOU DO NOT COMPLETELY WINTERIZE VEHICLE, CONSIDER WINTERIZING *AQUAGO* WATER HEATER AS SOON AS TEMPERATURES BELOW FREEZING POINT ARE FORECAST.

Procedure to partially winterize plumbing system with *Aquago* water heater is simple and fast. This procedure only ensures winterization of *Aquago* instant water heater and only protects the latter from freezing. After this partial winterization, it is still possible to temporarily “de-winterize” system for a few days of camping in cooler weather (see “Re-use of *Aquago* Instant Water Heater during Light Freeze” section *H. Winterizing*).

1. Set water heater switch (PHOTO D-9) located near control panel on upper cabinet near sliding door to “OFF” position.
2. Switch off water pump using “PUMP” switch (PHOTO A-6) located near control panel on upper cabinet near sliding door. Indicator light must be out.
3. DANGER: To avoid splashing at step 5, open hot water tap to remove any residual pressure in pipes.
4. At rear of water heater compartment, put A and B bypass valves in winter position (PHOTO D-12), which is vertical, and close return line E valve (turn 90 degree from return line) (PHOTO D-13).
5. Open heater access door, trigger toggle lever (PHOTO H-1) and maintain in horizontal position until water stops flowing (about 2 minutes).
6. Remove cartridge filter located inside toggle lever and store it inside the vehicle until the next start-up of the plumbing system. (PHOTO H-2)
7. Close toggle lever (PHOTO H-1) and shut access door. Your heater is now protected from freezing but **NOT** the rest of the plumbing system.



Cartridge filter  
PHOTO H-2



Toggle lever  
PHOTO H-1



 
 
## Complete Plumbing System Winterizing with *Aquago* Propane Instant Water Heater

For complete winterizing of vehicle, complete steps 1 to 7 above, then proceed with the following operations:

8. Switch off water pump using “PUMP” switch (PHOTO A-6) located on control panel. Indicator light must be out.
9. Before draining potable water tank, position RV so it leans to the rear.
10. Drain potable water tank and plumbing system using drain valve (PHOTO D-7) located under vehicle behind rear wheel on driver side.
11. Pour 16 litres (4 US gals) of -50 °C RV antifreeze in potable water tank.
12. Turn on water pump using “PUMP” switch (PHOTO A-6) on control panel. Indicator light should be on.
13. Open cold water tap until antifreeze reaches sink, let it run for 20 seconds.
14. Open hot water tap until antifreeze reaches sink, let it run for 20 seconds.
15. \*Portable toilet: If vehicle is equipped with portable toilet, remove it for winter, empty it, clean it and store it away from cold temperatures throughout freezing season.
16. \*Cassette toilet: If vehicle is equipped with cassette toilet connected to plumbing system, let antifreeze run for at least 20 seconds before emptying cassette (PHOTO D-28.1).
17. \*Permanent toilet: Let antifreeze run for about 20 seconds using toilet hand lever (PHOTO D-33). If equipped with hand spray (PHOTO D-32), let antifreeze run out for a few seconds as well.
18. If equipped with rear hand shower and/or interior shower, turn on shower cold water until antifreeze runs for 15 seconds and then turn on hot water until antifreeze runs for at least 15 seconds.
19. Open *Aquago* D valve (PHOTO D-14) until antifreeze runs off under vehicle; this fills return line with antifreeze.
20. Shut off water pump using “PUMP” switch (PHOTO A-6) on control panel. Indicator light must be out.
21. Switch “OFF” the water heater switch located behind the outside panel (PHOTO D-15).
22. Drain holding tanks (see “Dumping of Holding Tanks”, section D. Water).

Winterized this way, it is impossible to use *Aquago* Instant Water Heater without a complete start-up and disinfection of potable water system (see section D. Water).

### Re-use of the instant *Aquago* water heater in case of light freezing

-  It is possible to use again the instant *Aquago* water heater without having to proceed with the complete start up and disinfection of the water heater if only the seven (7) first steps of winterizing have been realized (partial winterizing).
-  If the instant *Aquago* water heater is used again in time of slight freezing, it is essential to use the “Simple temporary procedure to prevent freezing during RV use when temperatures below freezing point are forecast” (see section D. Water).

### To use *Aquago* Instant Water Heater Following Partial Winterizing of Plumbing System

1. Insert the cartridge filter back inside the toggle lever located inside the exterior access door (PHOTO H-2)
2. Set bypass valves in horizontal (open) position (PHOTO D-12).
3. Open return line E valve (PHOTO D-13).
4. Set pump switch on control panel to “ON” position (PHOTO A-6).
5. Open D valve (PHOTO D-14) and run off about 2 litres (2 quarts) of water on ground under vehicle to fill water heater and return line, then close D valve.
6. Water heater can now be turned on and used.



**CAUTION:** THE TRUMA *AQUAGO* WATER HEATER IS HIGH PERFORMANCE EQUIPMENT, BUT MORE LIKELY TO FREEZE, BECAUSE IT DOESN'T HAVE THIS LARGE 15-LITRE WATER TANK THAT WILL BE LAST TO FREEZE IN COLD TEMPERATURES. EVEN THOUGH VEHICLE HAS NOT BEEN COMPLETELY WINTERIZED, IT IS RECOMMENDED TO WINTERIZE *AQUAGO* WATER HEATER AS SOON AS TEMPERATURES DIP UNDER THE FREEZING POINT.



**CAUTION:** IF USED AGAIN DURING LIGHT FREEZE, INSTANT WATER HEATER MUST REMAIN “ON” IN “ECO” MODE AS RECOMMENDED IN THE SIMPLE TEMPORARY PROCEDURE TO PREVENT FREEZING DURING RV USE WHEN TEMPERATURES BELOW FREEZING POINT ARE FORECAST (SEE *D.WATER*)


## Winterizing Vehicle

Before storing vehicle, it is important to recharge auxiliary batteries to their full capacity by plugging vehicle into an external power source for at least 24 hours.

1. Remove 3 A fuse (No. 7) from electrical panel (PHOTO C-3.2). This cuts power to Propane and CO detectors.
2. Remove AUX/TV 15 A fuse (No. 6) from electrical panel (PHOTO C-3.2). This cuts power to outlets & TV.
3. Remove roof vent 10 A fuse (No. 3) from electrical panel (PHOTO C-3.2). This cuts power to roof vent.
4. Shut off propane using valve (PHOTO E-5.3) in running board (PHOTO E-4/PHOTO E-3).
5. Make sure all lights are out, including under bed.
6. Remove cover of inverter located under rear bed and set black 3-position switch to central “DC OFF” position (PHOTO H-3).

Note: Inverter black 3-position switch must be in “AUTO REMOTE” position when using vehicle. When storing vehicle, black 3-position switch must be set to central “DC OFF” position. Don’t forget to set black 3-position switch to central “AUTO REMOTE” position when taking vehicle out of storage.

7. If vehicle is stored and a 120 V outlet is available, connect every 30 days for a 24-hour period.
8. Leave fridge door(s) ajar to ventilate only if you have removed the refrigerator fuse, otherwise keep the fridge doors closed, which will turn the light off.

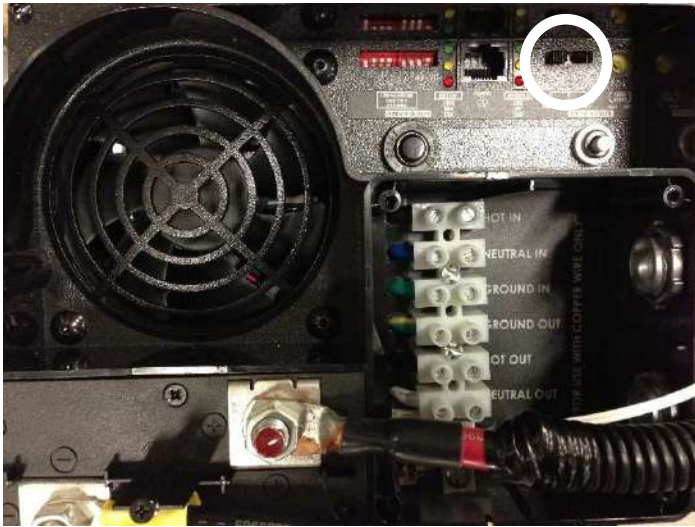

3-position switch  
PHOTO H-3



**SAFARI CONDO**  
821, rue du Parc  
Saint-Frédéric de Beauce  
Québec, Canada  
G0N 1P0

**Phone: 418 426-3666**  
**Fax: 418 426-1377**  
**Website: [www.safaricondo.com](http://www.safaricondo.com)**

Printed in Canada

Edition: 25 January 2021