



 Lock Joint™
Australia

Installation Guide



**Position the
Lock Joint™**




**Bull float, trowel
& brush finish**



Insert Pegs or Backing Board



Pour Concrete

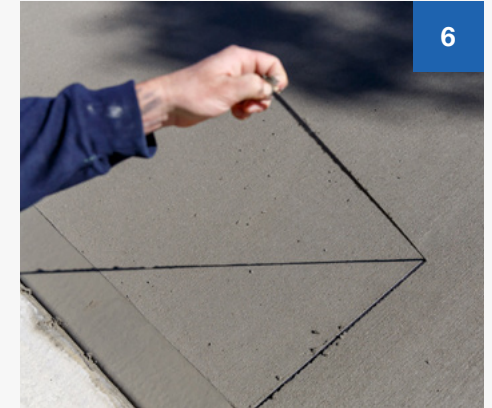

**Remove zip
from capping**



Screed & Remove Pegs



End Result





Lock Joint™
Australia

FOR MORE PRODUCT
INFORMATION PLEASE VISIT
LOCKJOINT.COM.AU