

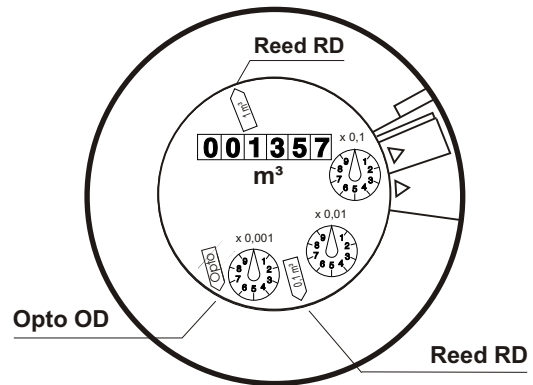


How to install Reed RD and Opto OD pulsers


MB 8200

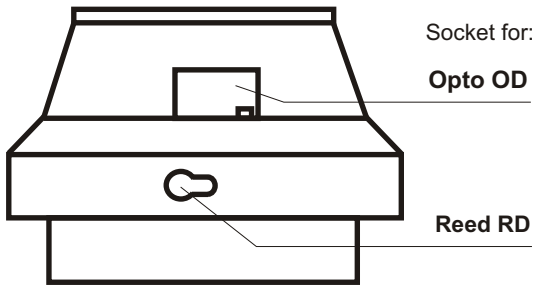


1 Hold head ring

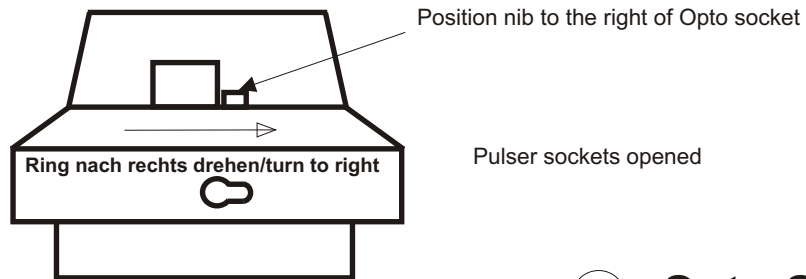

2 Reed RD

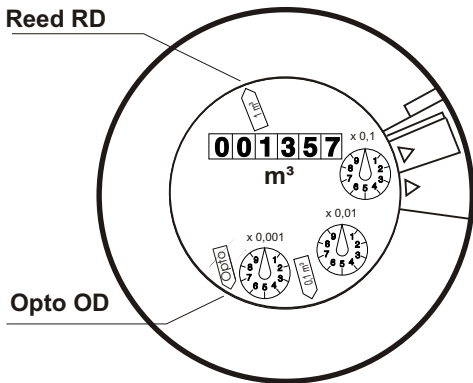

Before mounting the Opto remove the cover

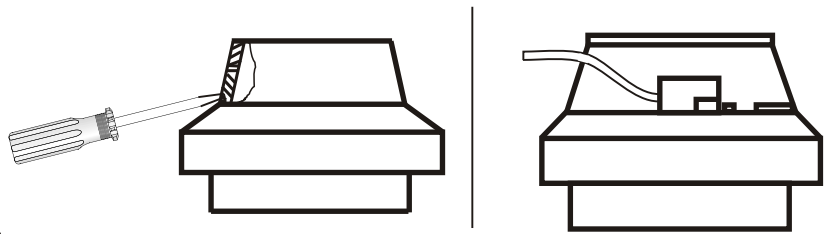

2 Opto OD

3 Hold head ring

Pulsers sockets locked

