


BASIN-WB4020W INSTALLATION INSTRUCTIONS

Important Information

- Prior to Installation it is important to inspect your basin to ensure no damage has occurred in transit. If damage has occurred, or a visible defect exists, do not proceed with installation & advise your supplier immediately.
- ECT or your supplier will not be liable for the cost of installation or removal of your basin, and warranty will be voided if damage has occurred during or after installation.
- It is recommended that a licensed tradesperson install the basin.
- Suitable reinforcement must be provided behind finished wall for the attachment of basin. For timber stud walls, noggins and studs must be positioned at a height to allow for the location for fasteners.

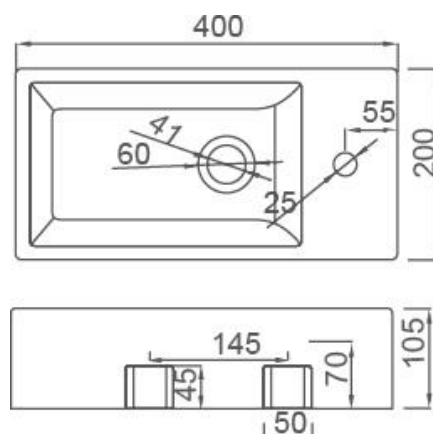

Installation

1. Use the basin and brackets (supplied) to mark the fixing screw hole position on finished wall at the recommended height approx. 825mm.
2. Drill four holes on the wall for fixing screws.
3. Screw the brackets on the wall.
4. Hang the basin onto the brackets.

