

# YORI

# DO IT YOURSELF WITH THE **Takara Desk**

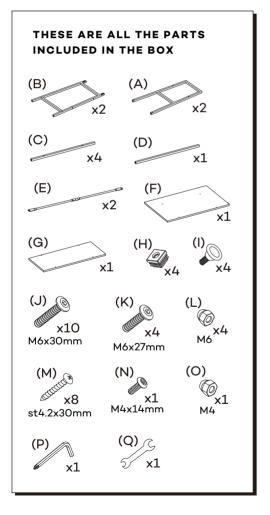

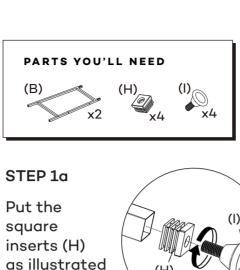

(B)

(N)

M4x14mm

(O) (X1)

M4

PARTS YOU'LL NEED

x2

into the


legs (B).


(E)


bottom of the desk's

Screw-in the levelling feet (I) into the square inserts (H) at the bottom of the desk's legs (B) as illustrated.

STEP 1b



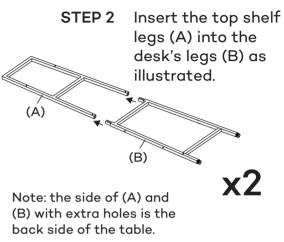

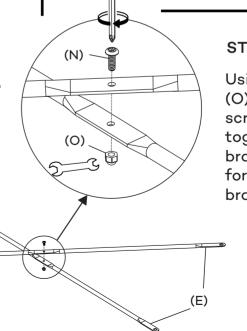



STEP 3


Using (N) and (O) as illustrated, screw-in together the braces (E) to form a cross brace.


### STEP 4

Using (K) and (L) as illustrated, screw-in the cross brace into the back of the shelf legs.

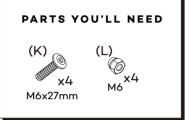

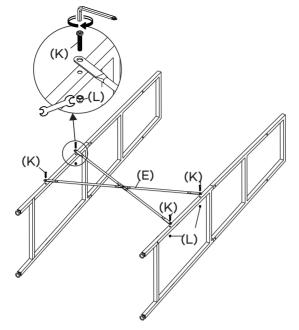

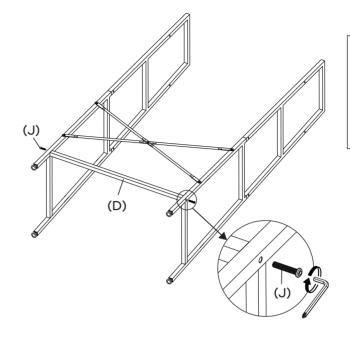




### STEP 5


Using (J) as illustrated, screw-in the supporting bar (D) into the side of the desk legs.




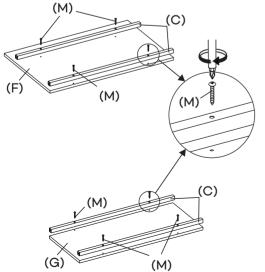



Using (M) as illustrated, screw-in the supporting bars (C) into the underside of the panels (F) and (G).

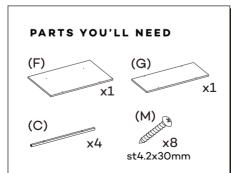

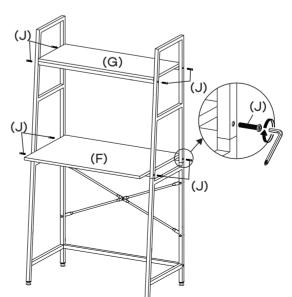

## PARTS YOU'LL NEED



### STEP 7

Using (J) as illustrated, screw-in the panels into the desk's legs.

Make sure the screws the tightened and...

