




Roman Shades Installation Guide

Mount Position: Outside
Shade Operation: Back
Custom Control: Chain Loop

The Tools You'll Need



The Hardware We Provide


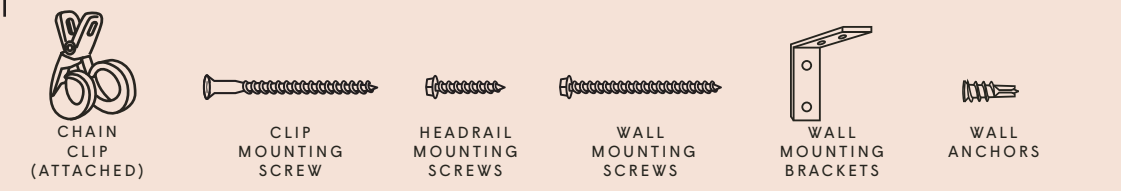


STEP 1: Determine shade's center point.

The width of your shade is written on its packaging and is based on your custom measurements. If you ordered a 36" W x 48" L shade, your shade's width is 36". Your shade's center point is at 18".


STEP 2: Find bracket positions.

Place the front side of your shade on a clean surface to expose the shade's headrail. Starting from the center point of your shade's headrail, measure outward to bracket position making sure to avoid overlap with shade mechanisms. Make a note of how many inches outward from the center point you measured. Repeat this process for each bracket.

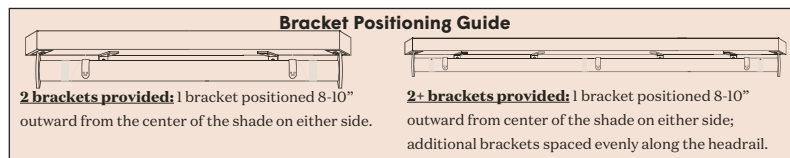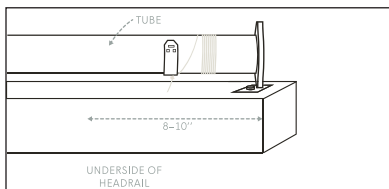

STEP 3: Mark the window's center point.

Measure the width of your window from edge to edge. Identify the horizontal center point and then mark it on the mounting surface for reference. If your window is 32" wide, your center point mark should be placed at 16".

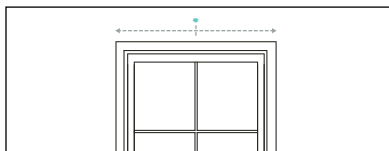


STEP 4: Determine shade's mounting height.

The length of your shade is written on its packaging and is based on your custom measurements. To determine your shade's mounting height, deduct 1" from your shade's length to account for the height of the headrail. If you ordered a 36" W x 48" L shade, your shade's length is 48". Your shade's mounting height is 47".


STEP 5: Mark the mounting height.

Standing at the center of your window, measure upward from the lowest point the shade will cover when closed to the mounting height determined in STEP 4. Align your tape measure with the window center point mark previously made in STEP 3. Now mark the mounting height of your shade.

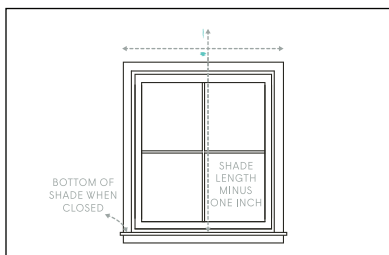


STEP 6: Mark the bracket mounting positions.

Starting from the centered mounting height mark made in STEP 5, measure outward the number of inches noted in STEP 2 to the first bracket position. Mark this point making sure it is level with the mounting height. Repeat this process for all remaining bracket positions found in STEP 2.

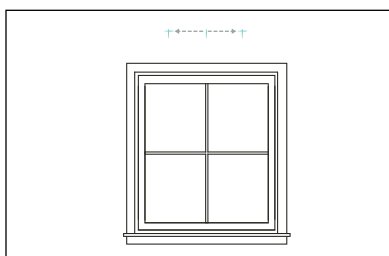


STEP 7: Mark bracket screw holes.

Place a wall mounting bracket against the wall and align it so the top is flush with the first bracket mounting position mark made in STEP 6. Mark the position of the screw hole on the wall. Repeat this process at each remaining bracket mounting position mark, making sure all screw hole marks are level with one another.

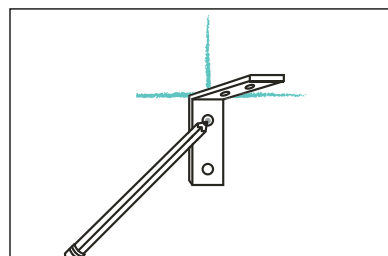


STEP 8: Drill the marked bracket screw holes.

Using your power drill and the 7/64" drill bit, drill into the first bracket screw hole marked in STEP 7. If your drill doesn't hit a wooden stud, install one of the provided wall anchors into the predrilled hole using a Phillips head screwdriver. If your drill does hit a wooden stud, no anchor is required. Repeat this process for each bracket screw hole marked in STEP 7.

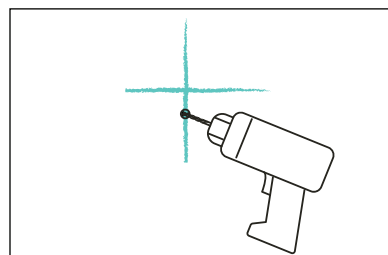

STEP 9: Secure brackets to the wall.


Using your power drill and 1/4 hex socket screw bit, secure each wall mounting bracket to the wall using one of the provided wall mounting screws.

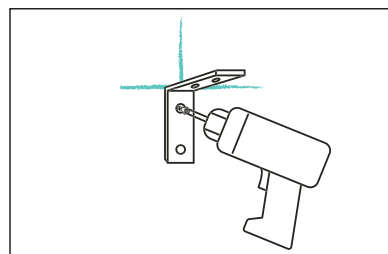

STEP 10: Place shade on the brackets.

**Shades wider than 72" may require assistance.*


With the shade facing right side up, carefully lift the shade and firmly set it into place so that the shade rests on top of the wall mounted brackets. Make sure no cords are caught between the headrail and the brackets. Slowly let go so that the shade remains in place and does not slide off the brackets.

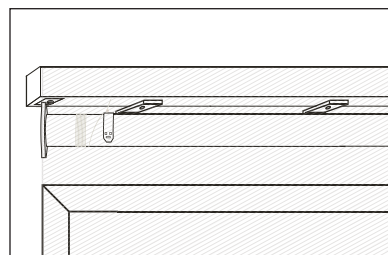

STEP 11: Secure shade to brackets.

Making sure your shade is centered, use your power drill, your 1/4 hex socket screw bit and the provided headrail mounting screws to secure the brackets directly to the shade's headrail.

To prevent damaging your shade, be sure to keep the cords and shade mechanisms out of the way of your power drill and mounting screws.

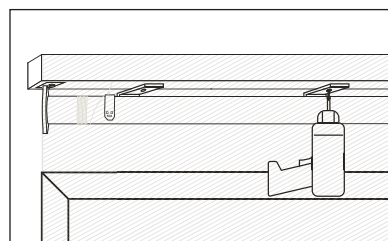


STEP 12: Release the chain loop system.

Lift the valance and remove the all packaging foam pieces securing the chain in place and on either side of the headrail. Let the chain hang down.


STEP 13: Mark chain clip mounting position.

Find the attached chain clip positioned at the bottom of the chain loop. If the clip is not in place, pinch it closed to move it to the correct position. Carefully pull on the clip so the chain is fully extended, but not pulled taut; then, place the clip upright either on the window trim or inside the window casement on the same side of the shade as the chain. Mark the chain clip screw hole.

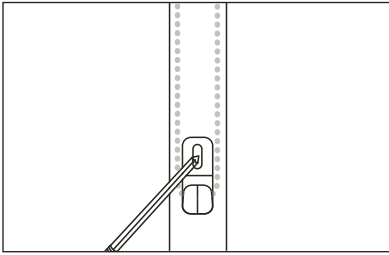


STEP 14: Drill chain clip screw hole.

Using your power drill and the 7/64" drill bit, drill into the marked holes.

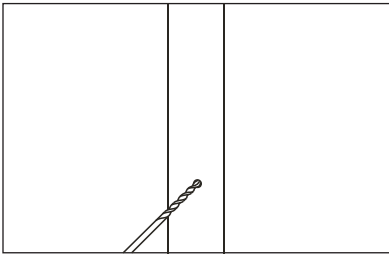


STEP 15: Secure chain clip.

Using the provided chain clip screw and a Phillips head screwdriver, secure the chain clip in place.

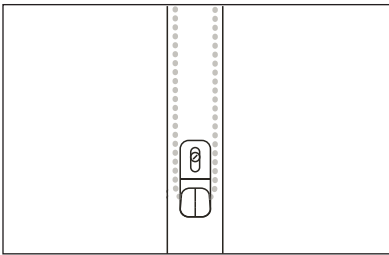

You're done!

Now your shade is ready for safe usage. Pull down on the back side of the chain to open the shade. Pull down on the front side of the chain to close the shade.

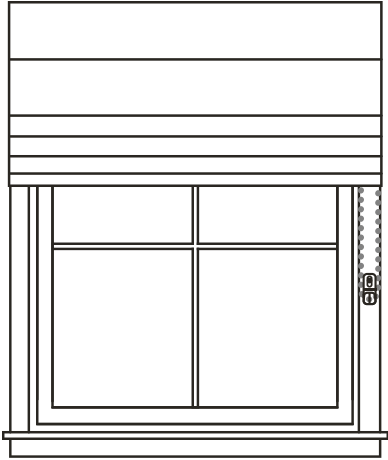

WARNING



Roman Shade chains can **STRANGLE** children. To prevent strangulation, make sure the chain is properly secured using the provided chain clip.

Cleaning Instructions

Drapery & Roman Shades

Deep Cleaning is recommended every six months. Between deep cleanings, we recommend maintaining your products using a vacuum with a hose attachment.

Woven Woods

Woven woods are very delicate and can be cleaned by carefully using a vacuum with a hose attachment.

Drapery Hardware


Clean your Everhem hardware with a chamois cloth and a little warm water.

Warranty & Returns

Due to the incredibly nuanced and custom nature of window coverings, all items are considered final sale and we are unable to accept returns.

Everhem Drapery, Roman Shades, Woven Woods and Hardware are all custom made by hand in the United States; our products contain intricate components that should be handled with care. If your product arrives damaged or defective, please contact hello@everhem.com within 48 hours of receiving your order so we can troubleshoot the issue and help with replacement, repair or other resolution. Proof of damage or defect will be required and is subject to review by our team.

If your product arrives incorrect due to customer error, we are not responsible for the product replacement or repair. However, it is always our aim to make things right. Please contact us at hello@everhem.com, our team is happy to assist you with a prompt resolution.

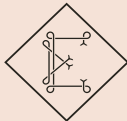

Follow us and share
your Everhem products!



@everhem



everhem

More questions? Reach out to us.
We're happy to help!

hello@everhem.com

Thanks for your order!
Come visit us again sometime.

everhem.com