




Roman Shades Installation Guide

Mount Position: Outside
Shade Operation: Front
Custom Control: Motorization

The Tools You'll Need



The Hardware We Provide

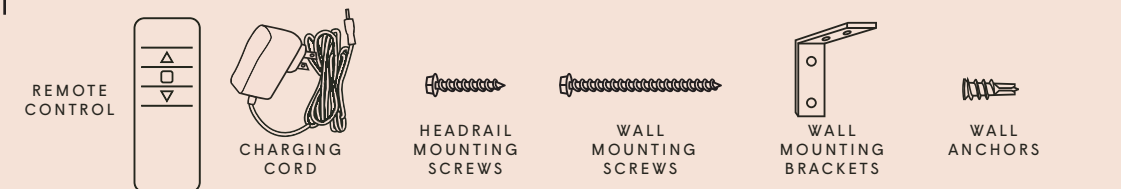


STEP 1: Determine shade's center point.

The width of your shade is written on its packaging and is based on your custom measurements. If you ordered a 36" W x 48" L shade, your shade's width is 36". Your shade's center point is at 18".


STEP 2: Find and note position of pre-cut bracket slots.

Place your shade on a clean surface and lift up the valance to expose the shade's headrail. Starting from the center point of your shade's headrail, measure outward to the first pre-cut slot on the headrail. Make a note of how many inches outward you measured. Repeat this process on any other pre-cut slots on your shade's headrail.

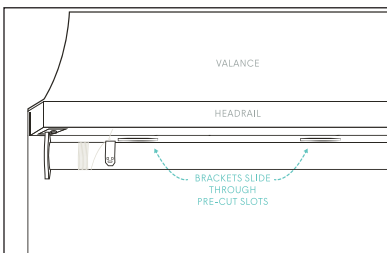

STEP 3: Mark the window's center point.

Measure the width of your window from edge to edge. Identify the horizontal center point and then mark it on the mounting surface for reference. If your window is 32" wide, your center point mark should be placed at 16".

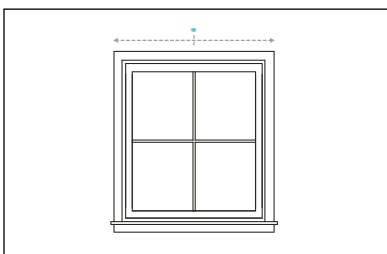


STEP 4: Determine shade's mounting height.

The length of your shade is written on its packaging and is based on your custom measurements. To determine your shade's mounting height, deduct 1" from your shade's length to account for the height of the headrail. If you ordered a 36" W x 48" L shade, your shade's length is 48". Your shade's mounting height is 47".


STEP 5: Mark the mounting height.

Standing at the center of your window, measure upward from the lowest point the shade will cover when closed to the mounting height determined in STEP 4. Align your tape measure with the window center point mark previously made in STEP 3. Now mark the mounting height of your shade.

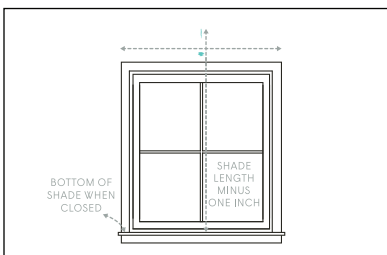


STEP 6: Mark the bracket mounting positions.

Starting from the centered mounting height mark made in STEP 5, measure outward the number of inches noted in STEP 2 to the first pre-cut bracket slot to determine the position of the first bracket. Mark this point making sure it is level with the mounting height. Repeat this process for all remaining pre-cut bracket slots.

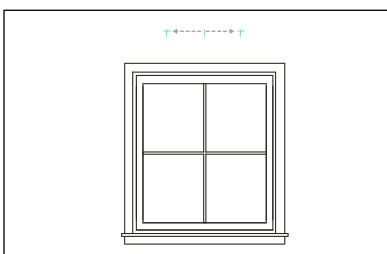


STEP 7: Mark bracket screw holes.

Place a wall mounting bracket against the wall and align it so the top is flush with the first bracket mounting position mark made in STEP 6. Mark the position of the screw hole on the wall. Repeat this process at each remaining bracket mounting position mark, making sure all screw hole marks are level with one another.

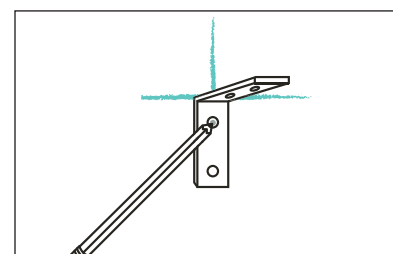


STEP 8: Drill the marked bracket screw holes.

Using your power drill and the 7/64" drill bit, drill into the first bracket screw hole marked in STEP 7. If your drill doesn't hit a wooden stud, install one of the provided wall anchors into the predrilled hole using a Phillips head screwdriver. If your drill does hit a wooden stud, no anchor is required. Repeat this process for each bracket screw hole marked in STEP 7.

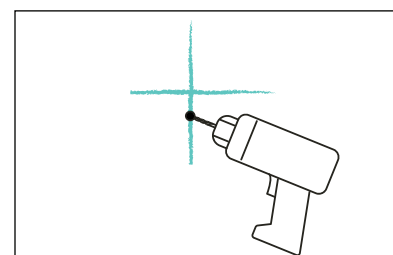

STEP 9: Secure brackets to the wall.


Using your power drill and 1/4 hex socket screw bit, secure each wall mounting bracket to the wall using one of the provided wall mounting screws.

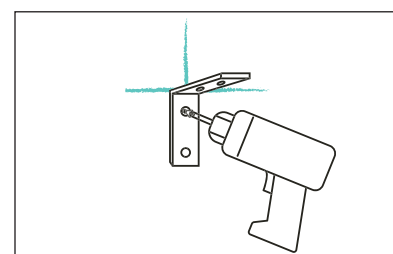

STEP 10: Place shade on the brackets.

**Shades wider than 72" may require assistance.*


With the shade facing right side up, carefully lift the shade and firmly set into place, sliding each wall mounted bracket through its corresponding pre-cut slot so that the shade rests on top of the wall mounted brackets. Make sure no cords are caught between the headrail and the brackets. Slowly let go so that the shade remains in place and does not slide off the brackets.

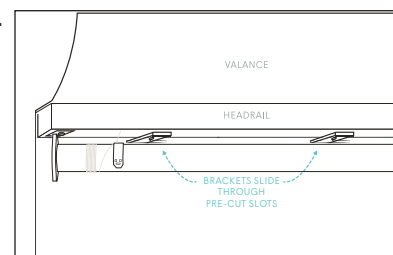

STEP 11: Secure shade to brackets.

Making sure your shade is centered, use your power drill, your 1/4 hex socket screw bit and the provided headrail mounting screws to secure the brackets directly to the shade's headrail.

To prevent damaging your shade, be sure to keep the cords and shade mechanisms out of the way of your power drill and mounting screws.

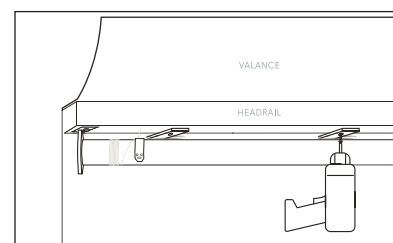


STEP 12: Locate Motor Position

Looking at the tube located on the underside of the headrail, determine which end has a short antenna exposed - this is where your motor is located.


STEP 13: Find Motor Activation Button

On the side found in STEP 12, find the white U-shaped button on the back side of the tube's end cap.

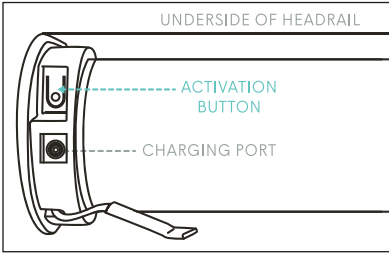


STEP 14: Activate Motor

Using a stylus-like tool, press the button 1 time. You will see the tube rotate slightly forward and backward one time. Your motor is now activated.
**Please Note: Do not press the button more than once or hold the button down - this may cause your motor to erase all its pre-programmed settings and malfunction.*

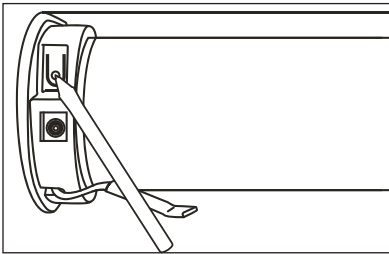



STEP 15: Use Your Remote

Using the pre-programmed remote provided, operate your shade with the press of a button. If your shade is programmed to a specific channel of a multichannel remote, press the corresponding number first, then use the control buttons.
**Please Note: On a multichannel remote, pushing the "ALL" button will enable all shades programmed to the remote to be operated simultaneously.*

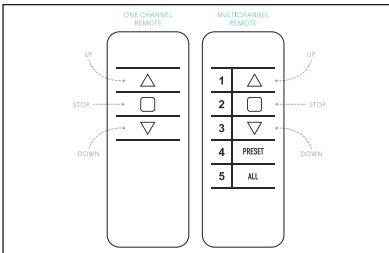

You're done!

Now your shade is ready for safe usage. Open and close your shade using the pre-programmed remote. Use the UP arrow to open your shade, DOWN arrow to close your shade, or the STOP square to lock your shade in a desired position.

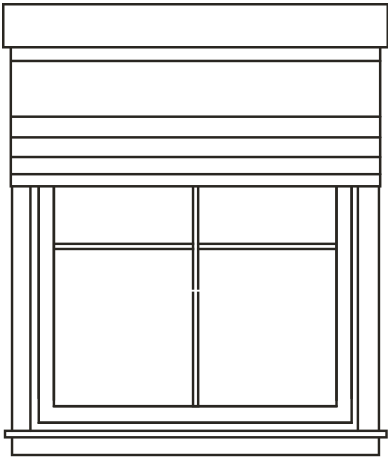

CHARGING YOUR MOTOR

Depending on usage, your motor will need to be charged every 5-6 months. With the shade in place, plug the provided charging cord into the motor. After the motor is fully charged, remove the charging cord and operate your shade with the provided remote.

Cleaning Instructions

Drapery & Roman Shades

Deep Cleaning is recommended every six months. Between deep cleanings, we recommend maintaining your products using a vacuum with a hose attachment.

Woven Woods

Woven woods are very delicate and can be cleaned by carefully using a vacuum with a hose attachment.

Drapery Hardware


Clean your Everhem hardware with a chamois cloth and a little warm water.

Warranty & Returns

Due to the incredibly nuanced and custom nature of window coverings, all items are considered final sale and we are unable to accept returns.

Everhem Drapery, Roman Shades, Woven Woods and Hardware are all custom made by hand in the United States; our products contain intricate components that should be handled with care. If your product arrives damaged or defective, please contact hello@everhem.com within 48 hours of receiving your order so we can troubleshoot the issue and help with replacement, repair or other resolution. Proof of damage or defect will be required and is subject to review by our team.

If your product arrives incorrect due to customer error, we are not responsible for the product replacement or repair. However, it is always our aim to make things right. Please contact us at hello@everhem.com, our team is happy to assist you with a prompt resolution.

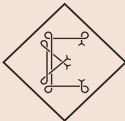

Follow us and share your Everhem products!

@everhem

everhem

More questions? Reach out to us. We're happy to help!

hello@everhem.com

Thanks for your order! Come visit us again sometime.

everhem.com