

# Café Curtains




## EVERHEM

### INSTALLATION GUIDE FOR OUTSIDE MOUNT CAFÉ CURTAINS

#### The Tools You'll Need



#### The Hardware We Provide

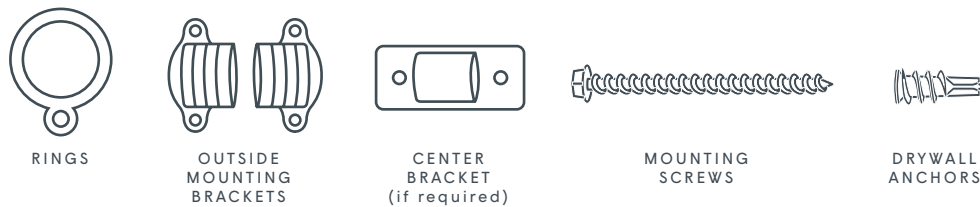


### Did your rod come with a center bracket?

**YES**  
Start at Step 1.

**NO**  
Skip to Step 5.


#### Step 1. Find center bracket mounting position.

Locate the mounting height listed on your Everhem packing slip, then find the horizontal center of the total rod width listed on your Everhem packing slip. Tape a piece of paper up in this general area to avoid marking up the window trim. Next, mark the paper at the exact spot where the center bracket will be mounted. From that spot, mark the paper with perpendicular lines, making sure both lines are long enough to intersect with one another.

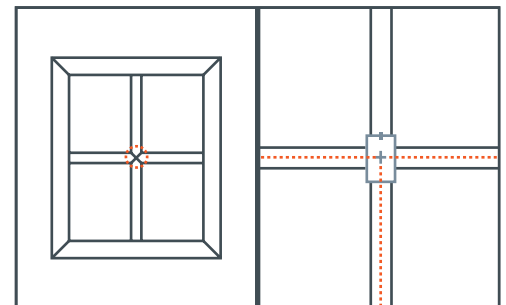

#### Step 2. Mark the bracket screw holes.

With the bracket against the paper, align the top of the bracket with the horizontal line and the center of the bracket with the vertical line. Make sure it is level, then mark the screw holes with a pencil.

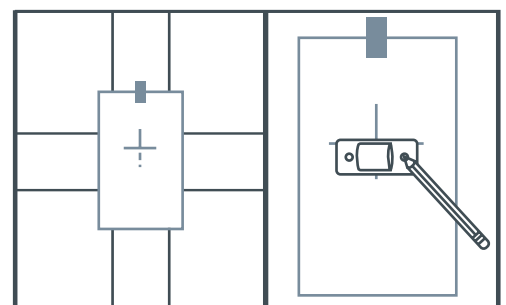

### Step 3. Drill the marked screw holes.

Using your power drill and the 7/64" drill bit, drill into the marked holes from Step 2.


Did your drill hit wood?

NO

**Proceed to Step 3A**


YES

**Skip to Step 4**

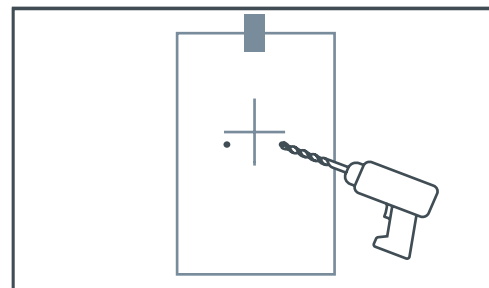


### Step 3A. Use Anchors.

If you hit drywall and not studs or wooden window framing, you'll need to secure one of the provided wall anchors into each of the holes you drilled.

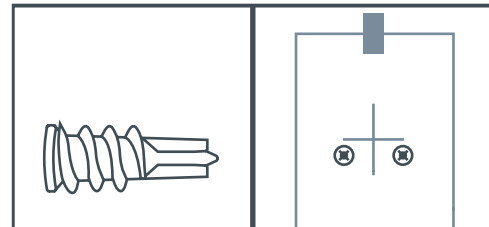


### Step 4. Secure the bracket.

Line the bracket up with the pre-drilled holes. Use the provided mounting screws, your power drill and your phillips head drill bit to secure the bracket into place halfway. Remove the piece of paper from behind then tighten the screws fully to secure the bracket.

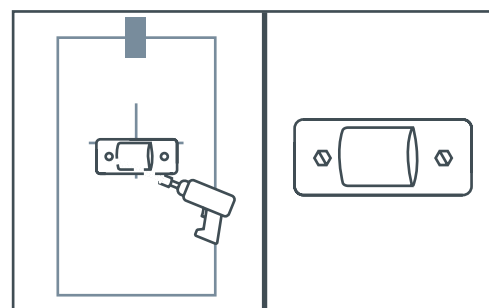


### Step 5. Find end brackets' mounting position.

Locate the mounting height listed on your Everhem packing slip; then, along that height, find the center of the flat mounting space on your wall or window trim. Tape a piece of paper up in this general area to avoid marking up the wall. Next, mark the paper at the exact spot where each end bracket will be mounted. From each spot, mark the paper with perpendicular lines, making sure both lines are long enough to intersect with one another. Repeat this process on the right side of your window.

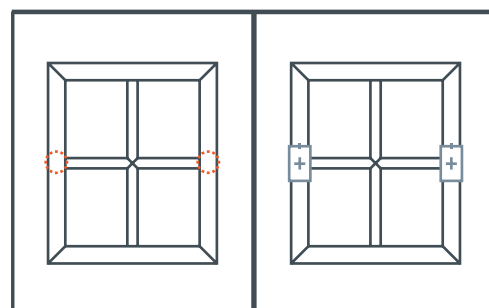

### Step 6. Mark brackets' screw holes.

With the bracket against the wall, align the horizontal center of one end bracket with the horizontal line and the vertical center of the bracket with the vertical line. Make sure it is level, then mark the screw holes with a pencil. Repeat this process for the second end bracket.

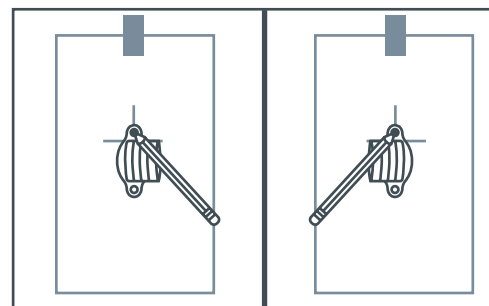

### Step 7. Drill the marked screw holes.

Using your power drill and the 7/64" drill bit, drill into the marked holes from Step 2.


Did your drill hit wood?

NO

**Proceed to Step 7A**


YES

**Skip to Step 8**

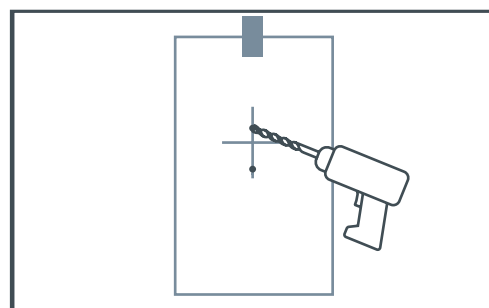


### Step 7A. Use Anchors.

If you hit drywall and not studs or wooden window framing, you'll need to secure one of the provided wall anchors into each of the holes you drilled.

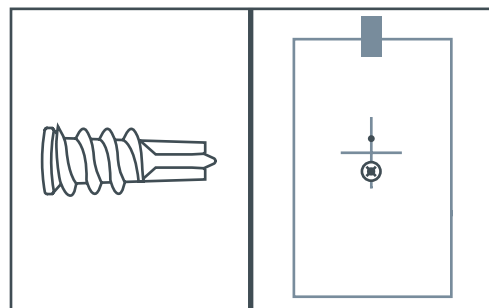

### Step 8. Secure one bracket.

Line one bracket up with the pre-drilled holes. Use the provided mounting screws, your power drill and your 1/4" hex socket drill bit to secure the bracket into place halfway. Remove the piece of paper from behind then tighten the screws fully to secure the bracket.

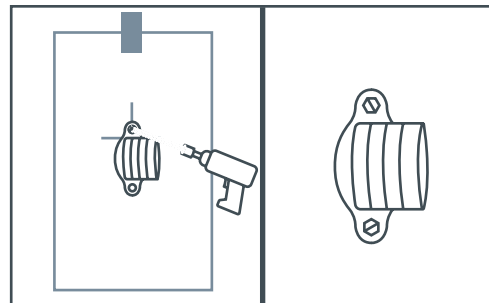


### Step 9. Place rings onto the rod.

We usually provide a few extra rings, so start by counting the hooks on your drapery panels first. Place as many rings on the rod as the hooks on your drapery panels.

Did you install a center bracket?


YES  
Proceed to Step 9A

NO  
Skip to Step 10

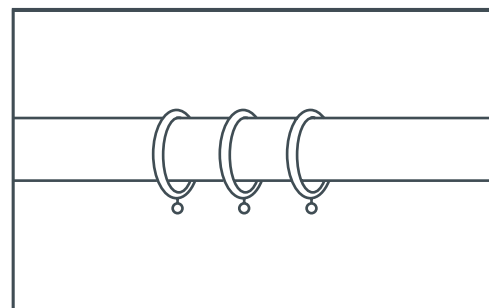


### Step 9A. Position rings and rod.

Divide the rings evenly for either side of your center bracket. Position the rod through the center bracket, then add rings to each side of the rod for each drapery panel.

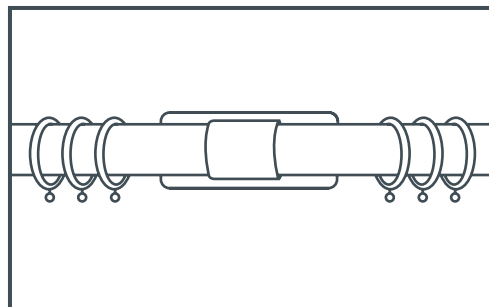

### Step 10. Attach the rod and secure the second bracket.

Insert the rod with rings into the first end bracket that is already secured. Then, place the second end bracket onto the other end of the rod. Line up the second end bracket with the pre-drilled holes. Use the provided mounting screws, your power drill and your 1/4" hex socket drill bit to secure the bracket into place halfway. Remove the piece of paper from behind then tighten the screws fully to secure the bracket.

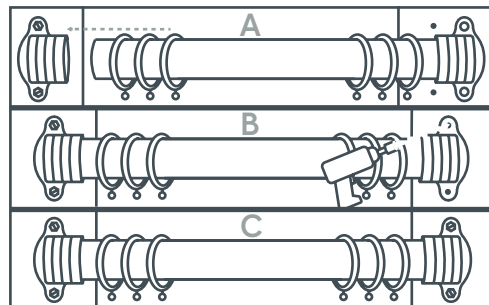

### Step 11. Hang your curtain(s).

From the furthest left ring, place the furthest left hook of your curtain panel through the eyelet of the ring until the panel is fully secured. Repeat for additional panel(s).

