


EVERHEM

A simpler way to design
beautiful window treatments


DRAPERY & HARDWARE
MEASUREMENT GUIDE

How to Measure for Drapery & Hardware


1. Measure window's horizontal width from outside edge to outside edge in 3 places: top, middle & bottom.

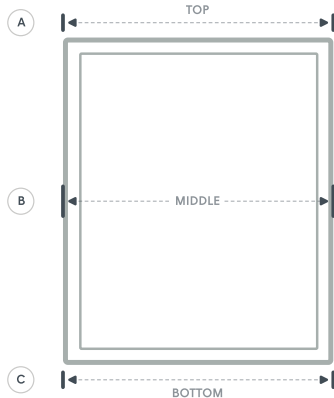


2. Stack is the additional width added to your drapery & hardware beyond your window width, keeping your drapery panels from covering your window when opened as well as making your window appear larger. We recommend selecting a minimum of 8" of stack width per side if you have the space to do so.

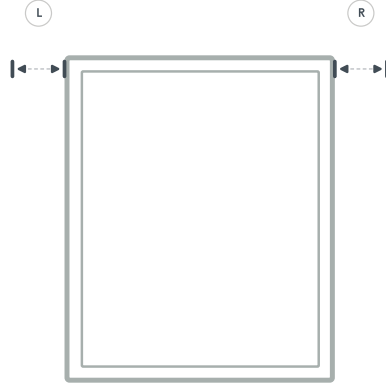

3. Measure your windows vertical length from outside top edge to the floor in 3 places: left, center & right.

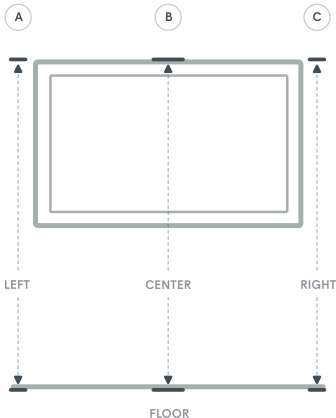

4. Measure your additional Mounting Height above the window. Everhem hardware requires a minimum height of 3 1/2 inches above your window trim to be properly mounted; however, we recommend selecting 7" above the top of the window frame if you have the space to do so.

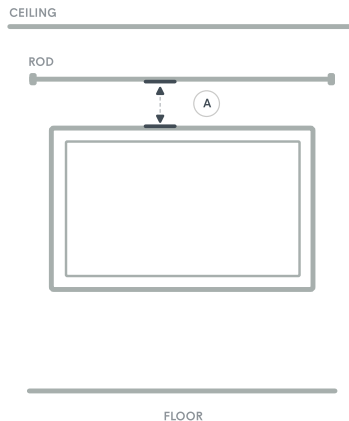

Drapery & Hardware Worksheet

1 Room Name/Window Label:

Width	A. TOP	B. MIDDLE	C. BOTTOM	Stack	LEFT	RIGHT
Length	A. LEFT	B. MIDDLE	C. RIGHT	Mounting Height		

2 Room Name/Window Label:

Width	A. TOP	B. MIDDLE	C. BOTTOM	Stack	LEFT	RIGHT
Length	A. LEFT	B. MIDDLE	C. RIGHT	Mounting Height		

3 Room Name/Window Label:

Width	A. TOP	B. MIDDLE	C. BOTTOM	Stack	LEFT	RIGHT
Length	A. LEFT	B. MIDDLE	C. RIGHT	Mounting Height		

4 Room Name/Window Label:

Width	A. TOP	B. MIDDLE	C. BOTTOM	Stack	LEFT	RIGHT
Length	A. LEFT	B. MIDDLE	C. RIGHT	Mounting Height		

5 Room Name/Window Label:

Width	A. TOP	B. MIDDLE	C. BOTTOM	Stack	LEFT	RIGHT
Length	A. LEFT	B. MIDDLE	C. RIGHT	Mounting Height		

6 Room Name/Window Label:

Width	A. TOP	B. MIDDLE	C. BOTTOM	Stack	LEFT	RIGHT
Length	A. LEFT	B. MIDDLE	C. RIGHT	Mounting Height		