

Controlling Teleport via Android

Download the Teleport Control Application for Android


1. Go to the Google Play store app, or follow this link
<https://play.google.com/store?hl=en>.
2. Search for “Teleport Control”.
3. Select this application:




4. Choose “Install” and wait for the app to download.

Beginning to Teleport

1. Click “Teleport” to start controlling one of your Teleports. The following message will be displayed.

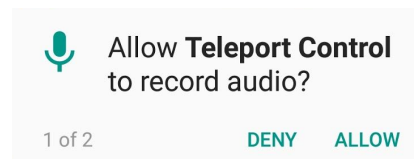


2. Click “Allow”. The following message will be displayed.

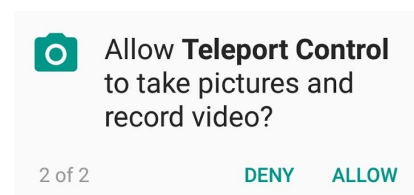


3. Click “Allow” again to proceed to the following screen.

This is the view shown in the app of the Teleport User.

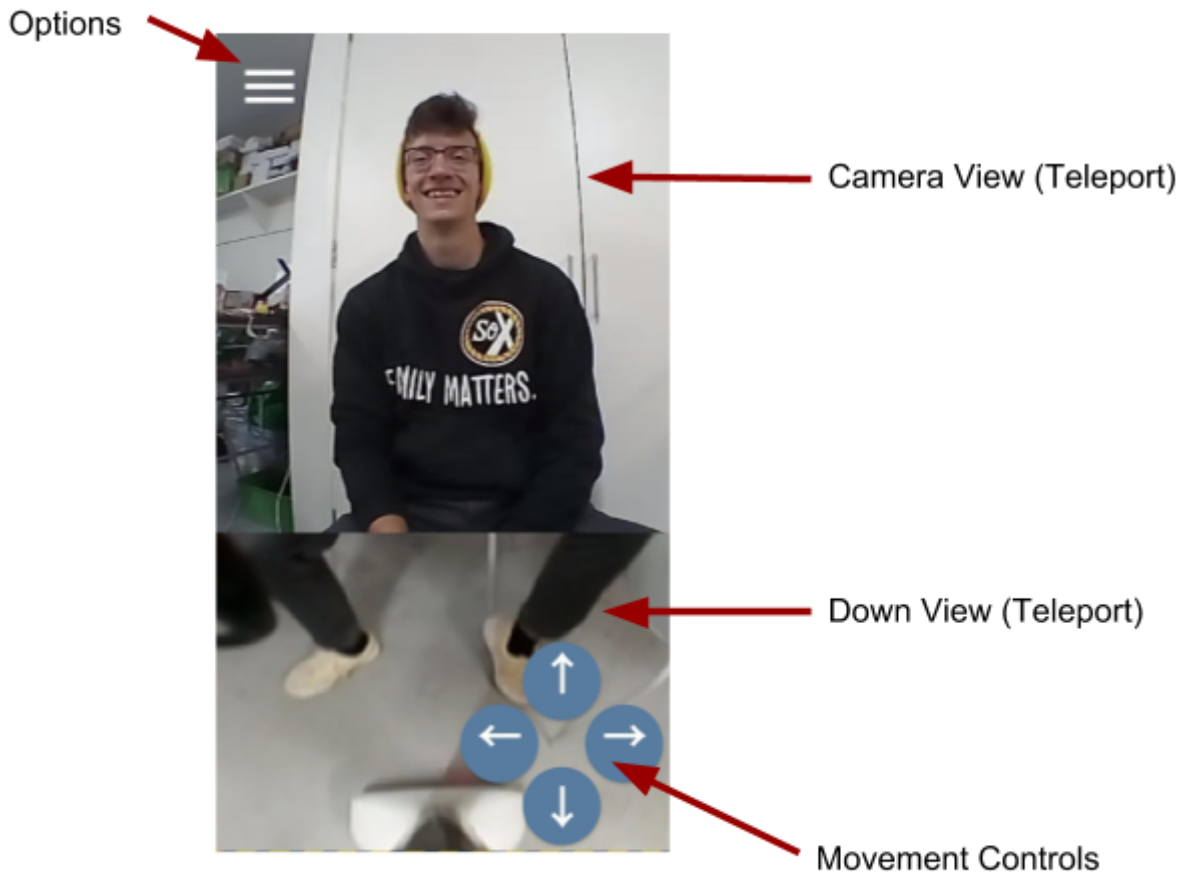

The **Camera View** shows the front view of the Teleport. The **Down View** shows the floor in front of the Teleport; this appears whilst Teleport is moving, to assist in avoiding objects.

To control Teleport's movement, the **Movement Controls** are used. Each arrow corresponds to movement of the Teleport in a particular direction, as shown in the diagram. Tapping and holding the arrow keys will enable the Teleport to move.

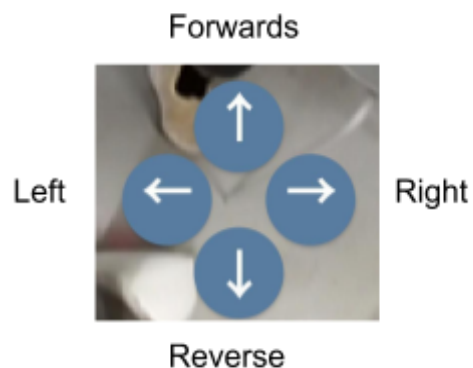


Tapping on the Options button expands the menu as shown.





Zoom (Camera View)



DESCRIPTION Zoom Out  Zoom In
The zoom slider is used to zoom in and out of the Camera View.

Volume (Teleport Speaker)

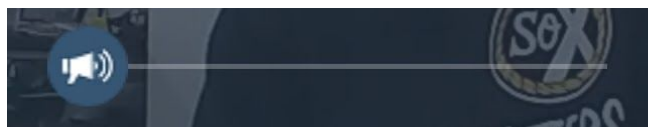

DESCRIPTION Low  High
The volume slider is used to increase and decrease the volume of the Teleport speaker.

Speed



DESCRIPTION Slow  Fast

The speed slider is used to adjust the speed that the Teleport drives at.

Height



DESCRIPTION Shorter Taller

Tap or hold down the height adjustment buttons to increase and decrease Teleport's height.


Video And Microphone Switch



DESCRIPTION Toggle Camera Toggle Mute

The Camera button is used to switch the Self View on or off on the Teleport. The Mute button is used to switch the user's microphone on or off. The red lines appear when they are switched off.

Message Box

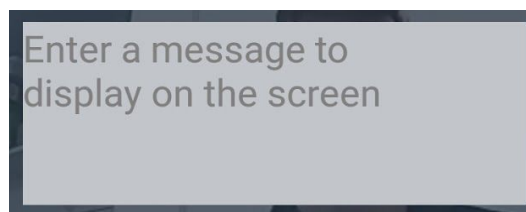

The message box is used to display text on the Teleport's screen, by typing a message in the box and clicking "Send" on the on-screen keyboard to display it.

Information



DESCRIPTION

Battery Status

Network Status

The battery icon displays Teleport's charging status. The network status icon gives an indication of whether the Teleport is connected to the internet.